

Greenice 07182

Greenice EDM 07182 Convector Glass Panel Heater 1500W User Manual

Model: 07182

1. INTRODUCTION

Thank you for choosing the Greenice EDM 07182 Convector Glass Panel Heater. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new heater. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Always ensure the heater is placed on a firm, level surface or securely wall-mounted.
- Do not cover the heater. Overheating can occur if the heater is covered.
- Keep all combustible materials (e.g., curtains, furniture) at least 1 meter (3 feet) away from the front and sides of the heater.
- Do not operate the heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not use the heater in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water. This product is rated for outdoor use, but direct exposure to rain or moisture should be avoided.
- Unplug the heater when not in use.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory

or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Greenice EDM 07182 Convector Glass Panel Heater
- Mounting accessories (for wall mounting)
- Feet (for freestanding use)
- User Manual

If any items are missing or damaged, please contact your retailer.

4. PRODUCT OVERVIEW

The EDM 07182 is a 1500W convector heater featuring a modern glass panel design and digital controls. It can be used as a freestanding unit or wall-mounted.



Figure 1: Front view of the Greenice EDM 07182 Convector Glass Panel Heater.

This image displays the front of the Greenice EDM 07182 Convector Glass Panel Heater. It features a sleek black glass panel, a digital display on the upper right, and control buttons below it. Two silver-colored feet are visible at the bottom, indicating it can be used as a freestanding unit. The brand 'EDM' is visible in the top right corner.

Key Components:

- **Glass Panel:** Main heating surface.
- **Digital Display:** Shows temperature, time, and mode settings.

- **Control Buttons:** For adjusting settings (MIN, MODE, SET, Up/Down arrows).
- **Feet:** For freestanding operation.
- **Wall Mount Brackets:** (Located on the back, not visible in image) For wall installation.

5. SETUP AND INSTALLATION

The EDM 07182 heater offers two installation options: freestanding or wall-mounted.

5.1 Freestanding Installation

1. Carefully unpack the heater and all accessories.
2. Attach the provided feet to the base of the heater using the screws supplied. Ensure they are securely fastened.
3. Place the heater on a stable, level, and non-combustible surface, ensuring adequate clearance from walls and other objects (at least 1 meter / 3 feet).
4. Ensure the power cord is not trapped or kinked.

5.2 Wall Mounting Installation

CAUTION: Wall mounting should be performed by a qualified person if you are unsure. Ensure the wall material can support the weight of the heater (8 kg).

1. Select a suitable wall location, ensuring it is away from curtains, furniture, and other flammable materials. Maintain at least 1 meter (3 feet) clearance.
2. Using the provided wall mount bracket as a template, mark the drilling points on the wall.
3. Drill holes at the marked positions and insert appropriate wall plugs (if necessary for your wall type).
4. Securely fasten the wall mount bracket to the wall using the supplied screws.
5. Carefully lift the heater and hook it onto the wall mount bracket. Ensure it is securely seated and level.
6. Connect the power cord to a suitable electrical outlet.

6. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operation.

6.1 Powering On/Off

- Plug the heater into a grounded electrical outlet.
- Press the **Power** button (often integrated with the MODE button or a separate symbol) to turn the heater ON. The digital display will illuminate.
- Press the **Power** button again to turn the heater OFF.

6.2 Setting Temperature

1. With the heater ON, press the **SET** button. The temperature display will flash.
2. Use the **Up (▲)** and **Down (▼)** arrow buttons to adjust the desired temperature.
3. Press **SET** again or wait a few seconds for the setting to be confirmed. The heater will now work to maintain the set temperature.

6.3 Mode Selection

Press the **MODE** button to cycle through available operating modes (e.g., Comfort, Eco, Anti-freeze, Timer). Refer to the display for the active mode indicator.

6.4 Timer Function

The timer function allows you to program the heater to turn on or off at specific times. Consult the detailed instructions in the full manual for specific timer programming steps, as these can vary by model. Typically, you would press the **MIN** button or a dedicated timer button, then use the arrow keys to set the desired duration or schedule.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** If storing the heater for an extended period, unplug it and clean it thoroughly. Store it in a cool, dry place, preferably in its original packaging.
- **No User-Serviceable Parts:** The heater contains no user-serviceable parts. Do not attempt to open or repair the appliance yourself. Contact qualified service personnel for any repairs.

8. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Power button not pressed.	Check if the heater is properly plugged into a working outlet. Press the Power button.
Heater produces no heat.	Temperature setting too low. Overheat protection activated.	Increase the desired temperature setting. Unplug the heater, let it cool for 30 minutes, then plug it back in. Ensure it is not covered.
Unusual noise or smell.	Dust accumulation. Internal malfunction.	Unplug and clean the heater. If the issue persists, discontinue use and contact support.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	Greenice
Model Number	07182

Feature	Detail
Power Output	1500W
Color	Neutral (Black Glass Panel)
Product Dimensions	60 x 60 x 85 cm
Product Weight	8 kg
Material	Glass Panel, Polyester (as per product specifications)
Special Feature	Sweat resistant (as per product specifications)
Mounting Type	Wall Mount, Pedestal (Freestanding)
Fuel Type	Electric
Intended Use	Outdoor Area (as per product specifications, though typically convector heaters are indoor. User should verify this with manufacturer if using outdoors.)

Note: "Polyester" and "Sweat resistant" are listed in the product specifications. While unusual for a heater, these details are included as provided. "Outdoor Area" is also listed, which should be considered carefully for electrical appliances.

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the documentation provided with your purchase or contact the retailer. For technical support, spare parts, or service inquiries, please contact Greenice customer service or your local distributor.

You can visit the Greenice store on Amazon for more information: [Greenice Amazon Store](#)