

JOCCA Shaving Set User Manual

Model: 1439

1. PRODUCT OVERVIEW

The JOCCA Shaving Set (Model 1439) is a versatile grooming tool designed for precise trimming of beards, moustaches, sideburns, and necklines. It also includes a dedicated attachment for safe and efficient nose and ear hair trimming. Featuring high-performance steel blades and multiple guide combs, this set provides a comprehensive solution for various styling needs.



Image 1.1: The complete JOCCA Shaving Set, including the main trimmer, nose and ear trimmer, and various guide combs.

2. SAFETY INFORMATION

Please read all safety warnings carefully before using the product to ensure safe operation and prevent injury.

- Always handle the trimmer carefully to avoid accidents.
- Keep the trimmer away from water and do not use it in wet environments.
- This product is not intended for use by babies or children. Keep out of their reach.
- Exercise caution with sharp blades to prevent skin or eye injuries.
- Follow all recommended cleaning and maintenance procedures to ensure longevity and hygiene.
- Disconnect the trimmer from its power source (remove batteries) when not in use and store it securely.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your JOCCA Shaving Set package:

- 1 x Main Trimmer Unit
- 1 x Nose and Ear Trimmer Attachment
- 4 x Guide Combs (for various cutting lengths)
- 1 x Styling Comb
- 1 x Small Cleaning Brush
- 1 x Lubricating Oil Bottle



Image 3.1: All components included in the JOCCA Shaving Set package.

4. SETUP

4.1. Battery Installation

The JOCCA Shaving Set operates on 2 x AA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the main trimmer unit.
2. Slide or unclip the cover to open the compartment.
3. Insert two AA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

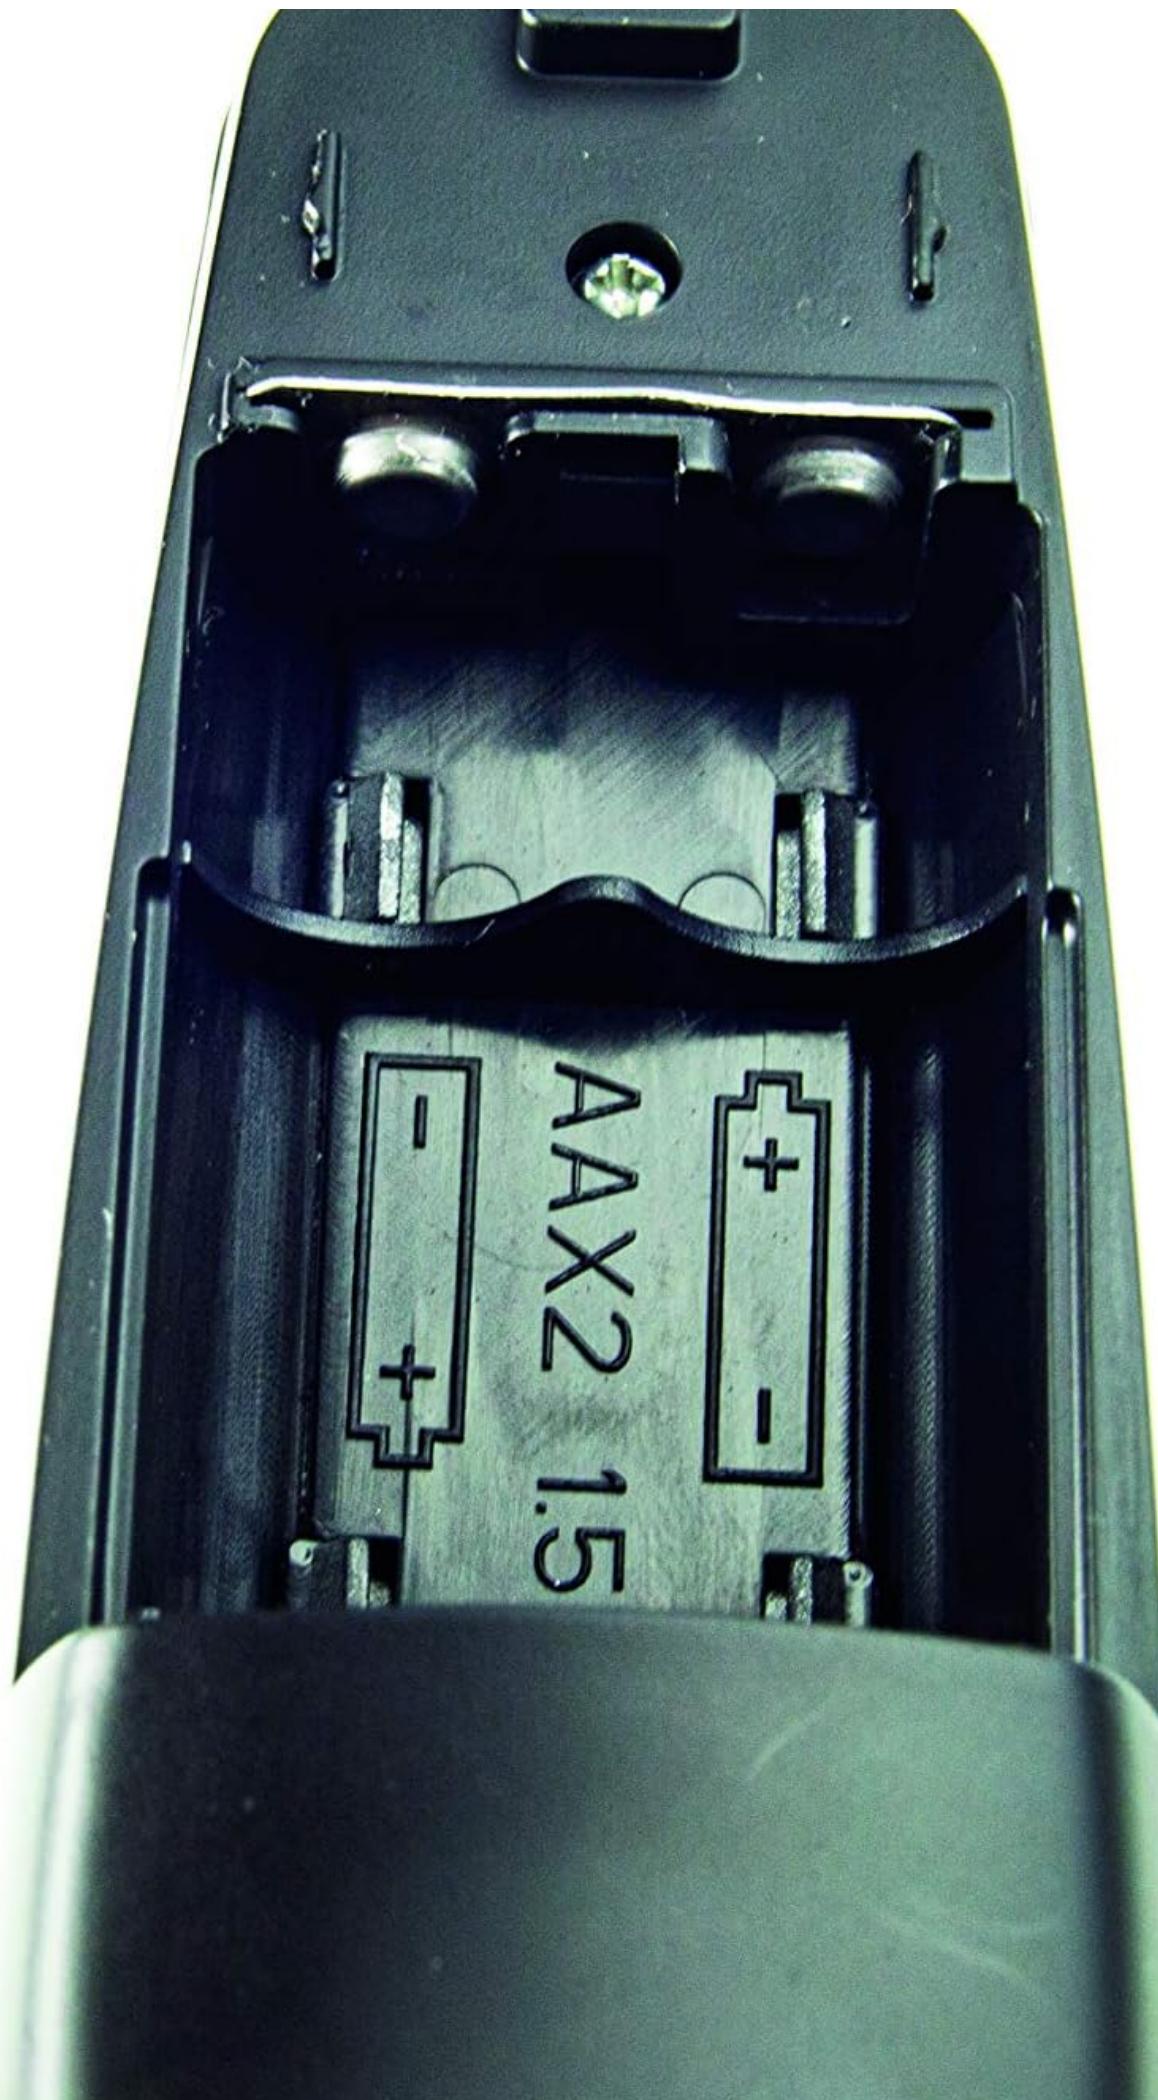


Image 4.1: Proper orientation for battery installation in the trimmer's battery compartment.

4.2. Attaching Guide Combs

The set includes four guide combs for different trimming lengths. To attach a guide comb:

1. Ensure the trimmer is turned off.
2. Select the desired guide comb based on the length indicated on the comb.
3. Align the comb with the trimmer blade and slide it firmly onto the blade until it clicks into place.
4. To remove, gently push the comb upwards and off the blade.



5. OPERATING INSTRUCTIONS

5.1. Main Trimmer Operation

The main trimmer is ideal for shaping and trimming beards, moustaches, sideburns, and necklines.

1. Ensure batteries are correctly installed.
2. Attach the desired guide comb for your preferred hair length. For a closer trim, use without a guide comb.
3. Press the power button to turn the trimmer on.
4. Hold the trimmer with the blade flat against the skin and move it slowly against the direction of hair growth.
5. For precise lines and edges, remove the guide comb and use the trimmer blade directly.
6. After use, press the power button to turn the trimmer off.





Image 5.1: Location of the power button on the main trimmer unit.

5.2. Nose and Ear Trimmer Operation

The nose and ear trimmer attachment provides a quick, powerful, and painless way to remove unwanted hair.

1. Ensure batteries are correctly installed in the main trimmer unit.
2. Attach the nose and ear trimmer head to the main unit.
3. Turn the trimmer on.
4. Gently insert the trimmer tip into the nostril or ear canal. Do not insert too deeply.
5. Move the trimmer in a circular motion to cut hairs. The 360° cutting system ensures efficient trimming without pulling or nicks.
6. After use, turn the trimmer off.

6. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your JOCCA Shaving Set.

6.1. Cleaning the Trimmer

1. Turn off the trimmer and remove any guide combs.
2. Use the small cleaning brush provided to brush away loose hairs from the blades and the trimmer body.
3. For the nose and ear trimmer, gently brush the cutting head to remove hairs.
4. Do not rinse the trimmer under water unless explicitly stated as waterproof (this model is not). Use a dry cloth to wipe the body.



Image 6.1: The high-performance steel blade of the main trimmer, which should be cleaned regularly.

6.2. Lubricating the Blades

To maintain the sharpness and smooth operation of the blades, apply a small amount of lubricating oil regularly.

1. After cleaning, apply 1-2 drops of the provided lubricating oil onto the blades of the main trimmer.
2. Turn the trimmer on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft, dry cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new AA 1.5V batteries, ensuring correct polarity.
Trimmer pulls hair or cuts poorly.	Blades are dull, dirty, or not lubricated.	Clean the blades thoroughly and apply lubricating oil. If problem persists, blades may need replacement (contact support).
Nose/Ear trimmer is ineffective.	Hair buildup in the cutting head.	Clean the nose/ear trimmer head with the provided brush.

8. SPECIFICATIONS

- **Model:** 1439
- **Power Source:** 2 x AA 1.5V Batteries (not included)
- **Blade Material:** High-Performance Steel Alloy
- **Functions:** Beard Trimmer, Moustache Trimmer, Sideburn Trimmer, Neckline Trimmer, Nose Trimmer, Ear Trimmer
- **Special Feature:** 360-degree cutter for nose and ear trimmer
- **Dimensions:** Approximately 22 x 3.5 x 15 cm (Product dimensions as packaged)
- **Weight:** Approximately 270 g

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the official JOCCA website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

JOCCA Official Website: www.jocca.es

