

FRESKO V8

FRESKO V8 Automatic Vacuum Sealer Machine User Manual

Model: V8 | Brand: FRESKO

INTRODUCTION

The FRESKO V8 Hands-Free Full Automatic Vacuum Sealer Machine is designed to preserve food freshness up to 8 times longer than conventional storage methods. This appliance utilizes a secure, airtight heat seal to prevent spoilage and freezer burn, making it ideal for meal preparation, storing leftovers, and preserving produce. Its intuitive LED touch screen and multi-mode functionality ensure ease of use for various food types.



Figure 1: FRESKO V8 Automatic Vacuum Sealer with two cuts of meat sealed in a bag.

SETUP

Before first use, ensure all packaging materials are removed from the unit. Place the vacuum sealer on a flat, stable surface. Connect the power cord to the machine and then to a suitable power outlet.

Full Start Kit



1 FRESKO V8



20 Quart Bags



1 Power Cord



1 User Manual

Figure 2: The FRESKO V8 Vacuum Sealer and its included accessories: 20 quart bags, power cord, and user manual.

OPERATING INSTRUCTIONS

The FRESKO V8 features a fully automatic operation with an LED touch screen and visual progress bar. Simply insert the bag and select the desired mode.

Basic Vacuum Sealing Steps:

1. Prepare your food and place it inside a compatible vacuum sealer bag.
2. Insert the open end of the bag into the vacuum sealing channel of the machine.
3. Select the appropriate mode on the LED touch screen:
 - **DRY:** For solid food items.
 - **MOIST:** For poached, simmered, or steamed food items.
 - **SEAL:** To seal the bag without vacuuming.

4. The machine will automatically vacuum and seal the bag. The visual progress bar on the LED screen will indicate the current process.
5. To stop the operation at any time, press any of the buttons. The machine will automatically stop vacuuming or sealing.

Fully Automatic Vacuum



Insert the bag



Select mode



Done

Figure 3: Visual guide for the three main steps of vacuum sealing: inserting the bag, selecting the mode, and the completed sealed bag.

LED Touch Control

Visual progress bar



Figure 4: Close-up of the FRESKO V8's LED touch control panel, highlighting the Dry, Moist, and Seal modes with a visual progress bar.

External Vacuum Function:

The FRESKO V8 also supports external vacuuming for containers or zipper bags using the accessory hose.

1. Pull out the external pumping component. The "EXTERNAL VAC" light will illuminate.
2. Align one end of the transparent interface with the vacuum tank.
3. Press the "EXTERNAL VAC" button. The vacuum sealer will begin to work.
4. The vacuum sealer stops pumping when the "EXTERNAL VAC" light turns white and stays on.
5. *Note:* Please take out the transparent interface from the external pumping component and stab the cupped side into the wine cork if you want to vacuum red wine.

Retractable Handheld Sealer

Marinade-quickly



Figure 5: The FRESKO V8 demonstrating its retractable handheld sealer, connected to a container for quick marinating.

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your vacuum sealer.

Cleaning the Drip Tray:

The FRESKO V8 features a removable drip tray for easy cleaning.

- Carefully remove the magnetic attracting drip tray from the machine.
- Wash the drip tray with warm, soapy water.
- Rinse thoroughly and allow it to dry completely before reinserting it into the vacuum sealer.

Removable Drip Tray Drawer

Magnetic Attracting Drip Tray



Figure 6: The removable drip tray of the FRESKO V8, shown detached from the main unit for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your FRESKO V8 Vacuum Sealer, please refer to the following common solutions:

- **Machine not turning on:** Ensure the power cord is securely plugged into both the machine and a working electrical outlet.
- **Bag not vacuuming properly:** Check that the bag is correctly positioned within the vacuum channel and that there are no wrinkles or creases in the sealing area. Ensure the bag is compatible with vacuum sealers.
- **Poor seal:** Verify that the sealing strip is clean and free from food debris. Allow the machine to cool down if it has been used continuously for an extended period.
- **External vacuum not working:** Confirm that the external pumping component is properly connected and that the container/bag is sealed correctly around the accessory hose.

For further assistance, please contact FRESKO customer support.

SPECIFICATIONS

Feature	Detail
Brand	FRESKO
Model Number	V8
Material	PC & ABS
Color	Silvery
Product Dimensions (L x W x H)	16.57" x 4.45" x 4.41"
Item Weight	4 Pounds
Operation Mode	Automatic
Wattage	120 watts

WARRANTY AND SUPPORT

The FRESKO V8 Automatic Vacuum Sealer Machine comes with a **2-year warranty**. For any questions, technical support, or warranty claims, please feel free to contact FRESKO customer service at any time. You can also refer to the official User Manual (PDF) available for download on the product's Amazon page for more detailed information.