

Enchanted Forest Christmas Village Sleigh

Enchanted Forest Christmas Village Sleigh Instruction Manual

INTRODUCTION

This manual provides essential information for the proper setup, care, and maintenance of your Enchanted Forest Christmas Village Sleigh. Designed as a decorative collectible, this item is intended for indoor display and is not a toy. Please read these instructions carefully to ensure the longevity and enjoyment of your product.

SETUP

Upon receiving your Enchanted Forest Christmas Village Sleigh, carefully remove it from its packaging. Inspect the item for any signs of damage that may have occurred during transit. Place the sleigh on a flat, stable surface where it will not be easily knocked over. Ensure the display area is free from direct sunlight, excessive heat, or moisture, which can affect the item's finish and integrity.



This image shows the Enchanted Forest Christmas Village Sleigh within its original retail box, indicating how the product is packaged upon purchase.

OPERATING

The Enchanted Forest Christmas Village Sleigh is a static decorative item. No assembly or power source is required for its operation. Once placed on a suitable surface, it is ready for display as part of your holiday village or standalone decoration. Handle the sleigh gently to prevent damage to its delicate features.

MAINTENANCE

To maintain the appearance of your Christmas Village Sleigh, follow these guidelines:

- **Cleaning:** Wipe clean with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the painted finish.
- **Storage:** When not in use, store the sleigh in its original packaging or a protective container in a cool, dry place away from extreme temperatures and humidity. This helps prevent dust accumulation and potential damage.

TROUBLESHOOTING

As a decorative item, troubleshooting is generally limited to physical integrity. If you observe any issues:

- **Minor Scratches/Chips:** For small imperfections, touch-up paint matching the original colors may be used with caution. Test on an inconspicuous area first.
- **Instability:** Ensure the sleigh is placed on a perfectly flat and level surface. If the item itself is uneven, minor adjustments to the base may be possible, or a small, discreet shim can be used.
- **Breakage:** If significant breakage occurs, consider professional repair for collectible items or contact

the retailer for potential replacement options if within the return period.

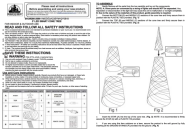 
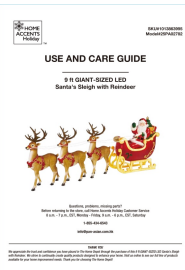 

SPECIFICATIONS

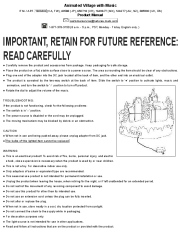 
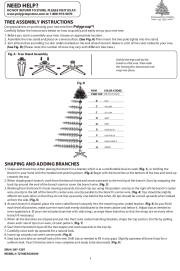 
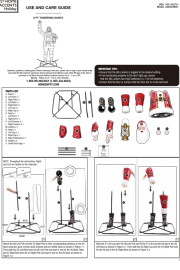 
Brand	Enchanted Forest
Model	Christmas Village Sleigh
Theme	Forest, Village
Style	Classic
Mounting Type	Tabletop
Product Care Instructions	Wipe Clean
Collection Name	Winter
UPC	020972345770
ASIN	B08K7CKRYC

WARRANTY AND SUPPORT

Information regarding specific warranty coverage or direct manufacturer support for the Enchanted Forest Christmas Village Sleigh is not provided in the product details. Please refer to your purchase receipt or contact the retailer from whom you purchased the item for details on their return policy or any available warranty information.

Related Documents - Christmas Village Sleigh

	Enchanted Forest 5' LED Smart Cone Tree - Assembly, Operation, and Safety Guide Comprehensive guide for the Enchanted Forest 5' LED Smart Cone Tree (Model 23SYM-QY0818), including assembly instructions, safety warnings, remote control functions, and Magic Lantern app usage.
	9 ft GIANT-SIZED LED Santa's Sleigh with Reindeer Use and Care Guide Comprehensive use and care guide for the Home Accents Holiday 9 ft GIANT-SIZED LED Santa's Sleigh with Reindeer. Includes safety warnings, detailed assembly instructions, operation details, function controls, care and storage tips, and troubleshooting advice.
	Home Accents Holiday 8.5 ft Yuletide Lane LED Santa's Sleigh Assembly Instructions Assembly and care guide for the Home Accents Holiday 8.5 ft Yuletide Lane LED Santa's Sleigh with Reindeer (Model TY619-2014). Includes parts list, assembly steps, pre-operation, and troubleshooting information.

	<p>Animated Village with Music Product Manual - Setup and Safety Guide</p> <p>Official product manual for the Animated Village with Music. Includes setup instructions, troubleshooting tips, and important safety warnings for indoor decorative use.</p>
	<p>Polygroup® Artificial Christmas Tree Assembly and Shaping Guide</p> <p>Comprehensive instructions for assembling and shaping your Polygroup® artificial Christmas tree. Includes step-by-step guidance for stand setup, branch arrangement using color codes, and tips for storage.</p>
	<p>Home Accents Holiday 8 FT Towering Santa Use and Care Guide</p> <p>This guide provides assembly instructions, operation details, battery replacement, and care tips for the Home Accents Holiday 8 FT Towering Santa decoration (Model 24SV24669). Learn how to set up and maintain your festive holiday display.</p>