

[manuals.plus](#) /

› [FLEXISPOT](#) /

› [FLEXISPOT CH2B Desktop PC CPU Holder Instruction Manual](#)

## FLEXISPOT CH2B

# FLEXISPOT CH2B Desktop PC CPU Holder Instruction Manual

## 1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your FLEXISPOT CH2B Desktop PC CPU Holder. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

The FLEXISPOT CH2B CPU Holder is designed to securely store your desktop computer tower, optimizing workspace and protecting your PC from dust and accidental damage. Its adjustable design allows for versatile mounting options and compatibility with various CPU sizes.

### Key Features:

- Durable Construction:** Made from carbon steel material with double protection for enhanced security and stability.
- Adjustable Frame:** Features telescopic length and width adjustments to accommodate a wide range of CPU sizes. Height is adjustable from 300-565 mm, and width from 70-203 mm.
- High Load Capacity:** Supports a maximum load of 30kg.
- Quality Material:** Constructed from varnished and cold-rolled steel for durability.
- Rotational Functionality:** Suspended off the floor and 360° adjustable, providing more spacious under-table area and freer leg movement.
- Integrated Design:** Engineered to move with your desk, ensuring cables are not restricted during height adjustments.
- Multiple Installation Modes:** Can be mounted on the side of a desk, underneath a desk, or on a wall.

### Product Components:

Familiarize yourself with the main components of the FLEXISPOT CH2B CPU Holder.



**Figure 1:** Main view of the FLEXISPOT CH2B CPU Holder. This image displays the black metal frame of the CPU holder, showcasing its adjustable vertical and horizontal components, along with the FLEXISPOT branding on the side plate.



**Figure 2:** Detailed dimensions of the FLEXISPOT CH2B CPU Holder. This diagram illustrates the adjustable height (min 33.4cm - max 56.5cm) and width (min 7cm - max 20.3cm) of the holder, along with other key measurements for installation planning.

### 3. SAFETY INFORMATION

- Ensure all mounting hardware is securely fastened before placing the CPU in the holder.
- Do not exceed the maximum load capacity of 30kg.
- Verify that the CPU holder is compatible with your computer's dimensions before installation.
- Avoid installing the holder in locations where it could obstruct movement or create a tripping hazard.
- Regularly check all connections and adjustments to ensure they remain tight and secure.

## 4. SETUP AND INSTALLATION

---

The FLEXISPOT CH2B CPU Holder offers flexible installation options to suit your workspace needs. Follow these steps for proper setup.

### Adjusting the Holder:

Before mounting, adjust the holder to fit your CPU tower's dimensions.

- 1. Height Adjustment:** Loosen the vertical adjustment knob (refer to Figure 3) and slide the holder's base up or down to match your CPU's height. Tighten the knob securely.
- 2. Width Adjustment:** Loosen the horizontal adjustment mechanism and expand or contract the holder's side panels to snugly fit your CPU's width. Tighten the mechanism securely.



**Figure 3:** Close-up view of the adjustment knob on the FLEXISPOT CH2B CPU Holder. This image highlights the knob used to secure the vertical position of the holder, ensuring a snug fit for the CPU.

### Mounting Options:

The CH2B can be installed in multiple ways:

- **Under-Desk Mount:** Attach the holder directly to the underside of your desk. This is ideal for standing desks as the holder moves with the desk.

- **Side-Desk Mount:** Secure the holder to the side panel of your desk.
- **Wall Mount:** For maximum floor and desk space, the holder can be mounted to a sturdy wall.

Refer to the included hardware and specific instructions for your chosen mounting method. Ensure the mounting surface is capable of supporting the combined weight of the holder and your CPU (up to 30kg).



**Figure 4:** Diagram illustrating the various installation options for the FLEXISPOT CH2B CPU Holder. This image shows the holder mounted under a desk, on the side of a desk, and on a wall, indicating its versatility.



**Figure 5:** The FLEXISPOT CH2B CPU Holder with a desktop PC tower securely installed. This image demonstrates how a computer fits within the holder, ready for mounting.



**Figure 6:** The FLEXISPOT CH2B CPU Holder installed under a desk in an office environment. This image shows the holder integrated into a standing desk setup, keeping the CPU off the floor and moving with the desk.

## 5. OPERATION

Once installed, the FLEXISPOT CH2B CPU Holder requires minimal operation. Its primary function is to securely hold your CPU.

- **Movement with Desk:** If mounted under a height-adjustable desk, the CPU holder will move synchronously with the desk's height adjustments, ensuring cables remain untangled and the CPU stays off the floor.
- **Rotation:** The holder allows for 360° rotation, which can be useful for accessing ports on the back of the CPU without removing it from the holder. Gently rotate the holder to the desired position.

## 6. MAINTENANCE

To ensure the longevity and proper function of your CPU holder, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the holder with a soft, damp cloth to remove dust and dirt. Avoid abrasive cleaners or

solvents.

- **Inspection:** Periodically check all screws, bolts, and adjustment knobs to ensure they are tight. Retighten if necessary.
- **Load Check:** Ensure the weight of your CPU does not exceed the 30kg capacity.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your FLEXISPOT CH2B CPU Holder, refer to the following common problems and solutions:

- **CPU does not fit:** Verify that your CPU's dimensions (height and width) are within the adjustable range of the holder (Height: 300-565 mm, Width: 70-203 mm). Adjust the holder as described in Section 4.
- **Holder feels unstable:** Ensure all mounting screws are securely fastened to the desk or wall. Check that the adjustment knobs for height and width are fully tightened to secure the CPU. Confirm the CPU weight does not exceed 30kg.
- **Difficulty rotating the holder:** Ensure no cables are snagged or obstructing the rotation mechanism. Check for any debris that might be impeding movement.
- **Cables are restricted:** If the holder is mounted to a height-adjustable desk, ensure cables have enough slack to accommodate the full range of desk motion.

## 8. SPECIFICATIONS

---

Specification	Detail
Brand	FLEXISPOT
Model Number	CH2B
Color	Black
Material	Carbon Steel, PC (Polycarbonate)
Product Compatibility	Computers
Item Weight	2.86 Kilograms
Adjustable Height	300-565 mm
Adjustable Width	70-203 mm
Maximum Load Capacity	30 kg
Finish Type	Varnished
Special Feature	Portable (referring to holder's mobility)
Room Type	Office

## 9. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided with your purchase or visit the official FLEXISPOT website. If you require technical support or have questions not covered in this manual, please

contact FLEXISPOT customer service through their official channels.

## Related Documents - CH2B

	<p><a href="#"><u>FlexiSpot DT3B-EU User Manual and Warranty Information</u></a></p> <p>Comprehensive user manual for the FlexiSpot DT3B-EU height adjustable desk frame, including detailed assembly instructions, parts list, and warranty coverage information.</p>
	<p><a href="#"><u>FlexiSpot CH1B/CH1S Under-Desk CPU Holder Installation Guide and Warranty</u></a></p> <p>Detailed installation guide and limited warranty information for the FlexiSpot CH1B and CH1S under-desk CPU holder. Learn how to install your CPU holder safely and understand warranty terms.</p>
	<p><a href="#"><u>FlexiSpot M3B/M3W Computer Riser Installation Guide and Warranty Information</u></a></p> <p>Comprehensive installation guide and warranty details for the FlexiSpot M3B/M3W Computer Riser and Sit-Stand Desktop Workstation. Learn how to assemble, use, and understand the product's coverage.</p>
	<p><a href="#"><u>FlexiSpot M1B/M1W Sit-Stand Desk Converter Installation Guide</u></a></p> <p>Step-by-step installation guide for the FlexiSpot M1B/M1W sit-stand desk converter, including specifications, parts list, safety warnings, and assembly instructions.</p>
	<p><a href="#"><u>FlexiSpot E7CB-CA/E7CW-CA Standing Desk Installation Guide</u></a></p> <p>Comprehensive installation guide for the FlexiSpot E7CB-CA/E7CW-CA standing desk, covering specifications, parts included, assembly steps, operating instructions, troubleshooting, and warranty information.</p>
	<p><a href="#"><u>FlexiSpot M7L-US Computer Riser Installation Guide and Warranty</u></a></p> <p>Official installation guide and limited warranty information for the FlexiSpot M7L-US Sit-Stand Desktop Workstation. Learn how to assemble, use, and understand the warranty terms for your FlexiSpot computer riser.</p>