

PRITECH PR-2614

PRITECH PR-2614 6-in-1 Cordless Hair and Beard Trimmer User Manual

Model: PR-2614

1. INTRODUCTION

Thank you for choosing the PRITECH PR-2614 6-in-1 Cordless Hair and Beard Trimmer. This versatile grooming kit is designed to meet various personal grooming needs with precision and convenience. Please read this manual thoroughly before first use to ensure safe and optimal operation of your device. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the charging cable or adapter in water or other liquids.
- Always check the appliance for damage before use. Do not use if the blades are damaged or broken, as this may cause injury.
- Only use the provided USB charging cable.
- Do not use the appliance while charging.
- Keep the appliance away from heat sources and direct sunlight.
- This product is designed for personal grooming only. Do not use for any other purpose.
- Ensure the appliance is switched off before cleaning or changing attachments.

3. PRODUCT OVERVIEW AND COMPONENTS

The PRITECH PR-2614 is a comprehensive 6-in-1 grooming kit, featuring a powerful motor and durable stainless steel blades for efficient and comfortable trimming. It is 100% waterproof (IPX6 rated) for both wet and dry use.

Included Components:

- 1 x Main Trimmer Unit
- 1 x Full-Size Trimmer Head (T-shaped)
- 1 x Precision Trimmer Head
- 1 x Nose Hair Trimmer Head
- 1 x Design Trimmer Head
- 1 x Body Hair Trimmer Head
- 1 x Metal Foil Shaver Head
- 1 x Adjustable Guide Comb
- 4 x Fixed Guide Combs (3mm, 6mm, 9mm, 12mm for full-size trimmer)
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Blade Oil
- 1 x Storage Base
- 1 x Storage Bag

EASY TO CHANGE PERFECT MATCH



Full-Size Trimmer



Precision Trimmer



Design Trimmer



Nose/Ear Trimmer



Foil Shaver



Body Hair Trimmer

Image: The PRITECH 6-in-1 grooming kit showing the main unit and all interchangeable attachment heads: Full-Size Trimmer, Precision Trimmer, Design Trimmer, Nose/Ear Trimmer, Foil Shaver, and Body Hair Trimmer.



Image: Detailed view of the trimmer's internal powerful motor, IPX6 waterproof rating, and the LED display indicating battery level and charging status.

4. SETUP

4.1 Charging the Trimmer

- Before first use, fully charge the trimmer for approximately 60 minutes.
- Connect the USB charging cable to the trimmer's charging port and plug the other end into a USB power source (e.g., laptop, USB adapter, power bank).
- The LED display will show the charging progress and remaining power. A full charge provides up to 99 minutes of cordless operation.

LITHIUM BATTERY POWER USB CHARGING



Laptop



USB outlet



USB Adapter



Car Charger



Power Bank

90
Mins
Running time

1.5
Hour
Fast Charging



Adapter
Only 5V



USB Cable
100-240V



Image: Illustration of the trimmer being charged via USB, showing various compatible power sources like a laptop, USB outlet, USB adapter, car charger, and power bank.

4.2 Attaching and Detaching Trimmer Heads

- To attach a head: Align the desired trimmer head with the main unit and push it down until it clicks into place.
- To detach a head: Place your thumb on the back of the trimmer head and push in the direction of the arrow (usually away from the main unit) to release it.

EASY TO REPLACE



Image: Step-by-step guide on how to easily replace the trimmer heads. It shows pushing the head, disassembling, aligning with the card slot, positioning close to the body, aligning, and pushing until it clicks.

4.3 Attaching Guide Combs

- Ensure the trimmer head is securely attached.
- Select the desired guide comb (fixed or adjustable) and slide it onto the trimmer head until it locks into position.
- To remove, gently pull the comb away from the trimmer head.

5. OPERATING INSTRUCTIONS

Always ensure your skin is clean and dry before trimming, unless using the wet shaving feature with foam.

5.1 General Trimming Tips

- Turn on the trimmer by pressing the power button.
- For best results, move the trimmer against the direction of hair growth.

- Use light pressure and smooth, even strokes.
- Regularly clean the trimmer head during use to prevent hair buildup.

5.2 Using Specific Trimmer Heads

- **Full-Size Trimmer Head:** Ideal for general hair cutting and beard shaping. Use with guide combs for desired length (3mm, 6mm, 9mm, 12mm).
- **Precision Trimmer Head:** For detailed styling, sharp lines, and intricate designs. Can be used with the 1-3mm adjustable guide comb.
- **Nose Hair Trimmer Head:** Gently insert the trimmer into your nostril or ear canal. Do not insert too deeply.
- **Design Trimmer Head:** For creating specific patterns or very fine lines in hair.
- **Body Hair Trimmer Head:** Suitable for trimming body hair in various areas (e.g., underarm, chest, back, bikini area).
- **Metal Foil Shaver Head:** For a close, smooth shave after trimming, similar to a traditional shaver.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your trimmer.

6.1 Cleaning

- After each use, turn off the trimmer and detach the trimmer head.
- Use the included cleaning brush to remove loose hairs from the blades and the trimmer body.
- Since the trimmer is IPX6 waterproof, you can rinse the trimmer heads and the main unit under running water. Ensure the charging port cover is securely closed before rinsing the main unit.
- Allow all parts to air dry completely before reassembling or storing.

6.2 Oiling Blades

- Periodically, apply a small drop of the included blade oil to the teeth of the trimmer blades.
- Turn on the trimmer for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and reduces friction.

6.3 Storage

- Store the trimmer and its accessories in the provided storage base or bag when not in use.
- Keep the device in a cool, dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Blades are dull or clogged with hair.	Clean and oil the blades. If blades are dull, consider replacement if available.

Problem	Possible Cause	Solution
Trimmer makes unusual noise.	Blades are not properly aligned or oiled.	Ensure trimmer head is securely attached. Clean and oil blades.
Charging indicator not working.	Charging cable or adapter is faulty.	Try a different USB cable or power source.

8. SPECIFICATIONS

Feature	Detail
Model Number	PR-2614
Brand	PRITECH
Power Source	Battery Powered (USB Rechargeable)
Battery Type	Rechargeable Lithium-ion
Charging Time	Approx. 60 minutes
Operating Time	Up to 99 minutes
Waterproof Rating	IPX6 (Washable body)
Blade Material	Stainless Steel
Product Dimensions (L x W x H)	7.7 x 16.6 x 19.8 cm
Weight	500 grams
Color	White
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. You may also visit the official PRITECH website for further assistance. Specific warranty terms and conditions may vary by region and retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question