

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NEEWER](#) /

› [NEEWER CB150 150W 5600K Dimmable LED Video Light Instruction Manual](#)

## NEEWER CB150

# NEEWER CB150 150W 5600K Dimmable LED Video Light Instruction Manual

Model: CB150

## 1. INTRODUCTION

The NEEWER CB150 150W 5600K Dimmable LED Video Light is a professional-grade continuous output lighting solution designed for photography and videography. It features a powerful 150W LED bead, 5600K daylight color temperature, high CRI 97+, and 2.4G wireless remote control for versatile lighting setups. This manual provides essential information for safe and effective use of your new equipment.

## 2. SAFETY INSTRUCTIONS

- Always ensure the power supply is disconnected before installation, adjustment, or maintenance.
- Do not operate the light in wet conditions or near flammable materials to prevent electric shock or fire.
- Avoid direct eye exposure to the LED light source, as it can cause eye strain or damage.
- Ensure proper ventilation around the light to prevent overheating and prolong product lifespan.
- Use only the provided power cable and accessories. Unauthorized modifications may void the warranty and pose safety risks.
- Keep the device out of reach of children.

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- NEEWER CB150 LED Video Light Unit
- 2.4G Wireless Remote Control
- Standard Reflector (Light Funnel)
- Protective Cover
- Power Cable
- Instruction Manual

## Product Contents



**Image:** NEEWER CB150 package contents including the light unit, remote, reflector, protective cover, and power cable.

## 4. PRODUCT OVERVIEW

The NEEWER CB150 is a high-performance LED video light designed for consistent and accurate illumination. Key features include:

- **Powerful 150W LED Bead:** Provides stable and bright light output.
- **5600K Daylight Color Temperature:** Ensures natural and consistent lighting.
- **High CRI 97+ and TLCI 97+:** Guarantees accurate color rendition for broadcast video, photography, and studio filmmaking.
- **Bowens Mount:** Compatible with a wide range of light modifiers such as softboxes, beauty dishes, and snoots.
- **2.4G Wireless Remote Control:** Allows adjustment of brightness and channels from up to 20 meters away.
- **Ultra Silent Fan:** Features smart temperature control for efficient heat dissipation with minimal noise.
- **LCD Display:** Large display panel shows key parameters like brightness, channel, and temperature.



**Image:** The NEEWER CB150 LED Video Light with its integrated handle and mounting bracket.



## 2.4G Wireless Trigger

channels (CH1-CH10) and CH88



Note: Only CB150 LED Video Light is included

**Image:** Visual comparison demonstrating the accurate color rendition with CRI 97+ compared to CRI 80, showing vibrant colors in strawberries.

# Ultra High Brightness

High brightness, reaching 13000Lux/1m  
5600K stable color temperature



5600k  
Colour



13000Lux  
/1m



**Image:** The NEEWER CB150 light in use with a softbox, illustrating its ultra-high brightness of 13000 Lux at 1 meter and stable 5600K color temperature.

## Ultra Silent Fan


Smart temperature control



Temperature Control



Amazingly Quiet

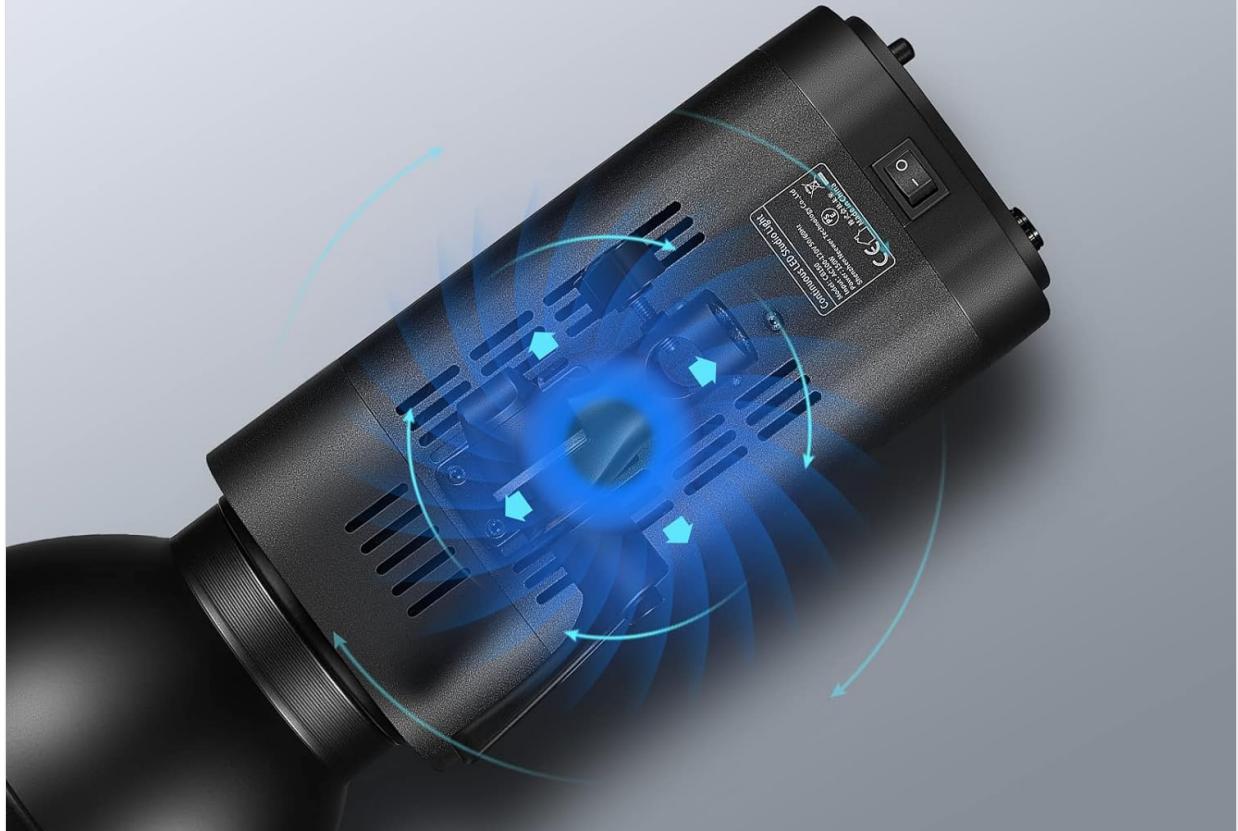

**Image:** Diagram showing the internal ultra-silent fan with smart temperature control for efficient and quiet heat dissipation.

## Bowens Mount

Compatible with multiple devices



**Image:** The Bowens mount on the NEEWER CB150, illustrating compatibility with various light modifiers such as octagonal softbox, square softbox, light effect condenser, beauty dish reflector, lantern softbox, and parabolic softbox.

### Product Video Overview

Your browser does not support the video tag.

**Video:** An official NEEWER product video showcasing the features and applications of the CB150 150W LED Video Light in various studio settings.

## 5. SETUP

- 1. Unpack Components:** Carefully remove all items from the packaging.
- 2. Remove Protective Cover:** Press the release button on the light unit and twist the protective cover counter-clockwise to remove it from the LED bead.
- 3. Attach Reflector:** Align the standard reflector (light funnel) with the Bowens mount on the light unit. Push it in and twist clockwise until it locks securely.
- 4. Mount on Light Stand:** Loosen the knob on the light unit's mounting bracket. Place the light unit onto a compatible light stand (not included) and tighten the knob to secure it. Adjust the angle as needed.
- 5. Connect Power:** Insert the power cable into the power input port on the back of the light unit. Plug the other end into a suitable power outlet.

## 6. OPERATING INSTRUCTIONS

### Power On/Off

- Locate the power switch on the bottom of the light unit. Flip the switch to the 'ON' position to power on the light. The LCD display will illuminate.
- To power off, flip the switch to the 'OFF' position.

### Adjusting Brightness

- **Via Control Knob:** Rotate the control knob on the back of the light unit to adjust brightness from 0% to 100%. The LCD display will show the current brightness percentage.
- **Via 2.4G Wireless Remote:** Use the '+' and '-' buttons on the remote control to adjust brightness. The remote allows for precise 1% increments.



**Image:** Demonstrates adjusting the brightness of the NEEWER CB150 from 0% to 100% using the 2.4G wireless remote control and the control knob on the light unit.

### Using the 2.4G Wireless Remote

- The remote control operates on 2.4G frequency and supports 10 channels (CH1-CH10) and a special channel CH88.

- Ensure the light unit and remote are set to the same channel for proper communication.
- Use the channel selection buttons on the remote to cycle through available channels.
- The remote can control the light from up to 20 meters away.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the light unit. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the light in a cool, dry place, away from direct sunlight and moisture. Reattach the protective cover to the LED bead.
- **Ventilation:** Regularly check that the ventilation openings are clear of dust and debris to ensure proper heat dissipation.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Power cable not connected properly; Power switch is off; Power outlet issue.	Check power cable connection; Ensure power switch is ON; Test with a different power outlet.
Remote control not working.	Remote batteries are low or depleted; Remote and light unit on different channels.	Replace remote batteries; Ensure both devices are set to the same channel (CH1-CH10 or CH88).
Light is overheating.	Blocked ventilation; Prolonged use at maximum power in a confined space.	Ensure ventilation openings are clear; Operate in a well-ventilated area; Reduce brightness if necessary.

## 9. SPECIFICATIONS

Feature	Detail
Brand	NEEWER
Model	CB150 (Item model number: 10098474)
Power Output	150W
Color Temperature	5600K (Daylight)
Color Rendering Index (CRI)	97+
Television Lighting Consistency Index (TLCI)	97+
Illuminance	13000 Lux @ 1m
Brightness Adjustment	0% - 100%
Wireless Control	2.4G Wireless Remote (10 Channels + CH88)
Mount Type	Bowens Mount
Item Weight	7.24 pounds
Package Dimensions	16.1 x 10.35 x 8.39 inches

Feature	Detail
UPC	191073055360

## 10. WARRANTY AND SUPPORT

---

For detailed warranty information, product registration, and technical support, please visit the official NEEWER website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.