

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

maylofi E8910

maylofi Active Stylus Pen User Manual

Model: E8910

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your maylofi Active Stylus Pen, model E8910. This digital pen is designed for use with most capacitive touch screen devices, offering precision and responsiveness for various tasks such as drawing, writing, and navigation.

SAFETY INFORMATION

- Do not expose the stylus to extreme temperatures or direct sunlight.
- Avoid dropping the stylus or subjecting it to strong impacts.
- Keep out of reach of small children.
- Use only the provided Micro USB cable for charging.
- Do not attempt to disassemble or modify the stylus.

PACKAGE CONTENTS

Upon unboxing, please verify that all items listed below are present:

- 1 x maylofi Active Stylus Pen
- 1 x Micro USB Charging Cable

PRODUCT OVERVIEW

The maylofi Active Stylus Pen features a sleek design with a 1.5mm fine tip for precise interaction with your touch screen. It includes an integrated power button and an indicating light for status updates.

No Bluetooth Connection



Image: Overview of the stylus pen, highlighting the On/Off button and the indicating light.

Highly Sensitive & Perfectly Precision

1.5mm tip



Image: Detailed view of the 1.5mm precision tip, illustrating its accuracy for drawing and writing.

SETUP

Charging the Stylus

Before first use, fully charge the stylus. Connect the Micro USB cable to the charging port on the stylus and the other end to a USB power source (e.g., computer, wall adapter). The indicating light will show the charging status.

- **Red Light:** Charging in progress.
- **Green Light:** Fully charged.
- Charging time is approximately 60-80 minutes for a full charge.

Long Battery Life

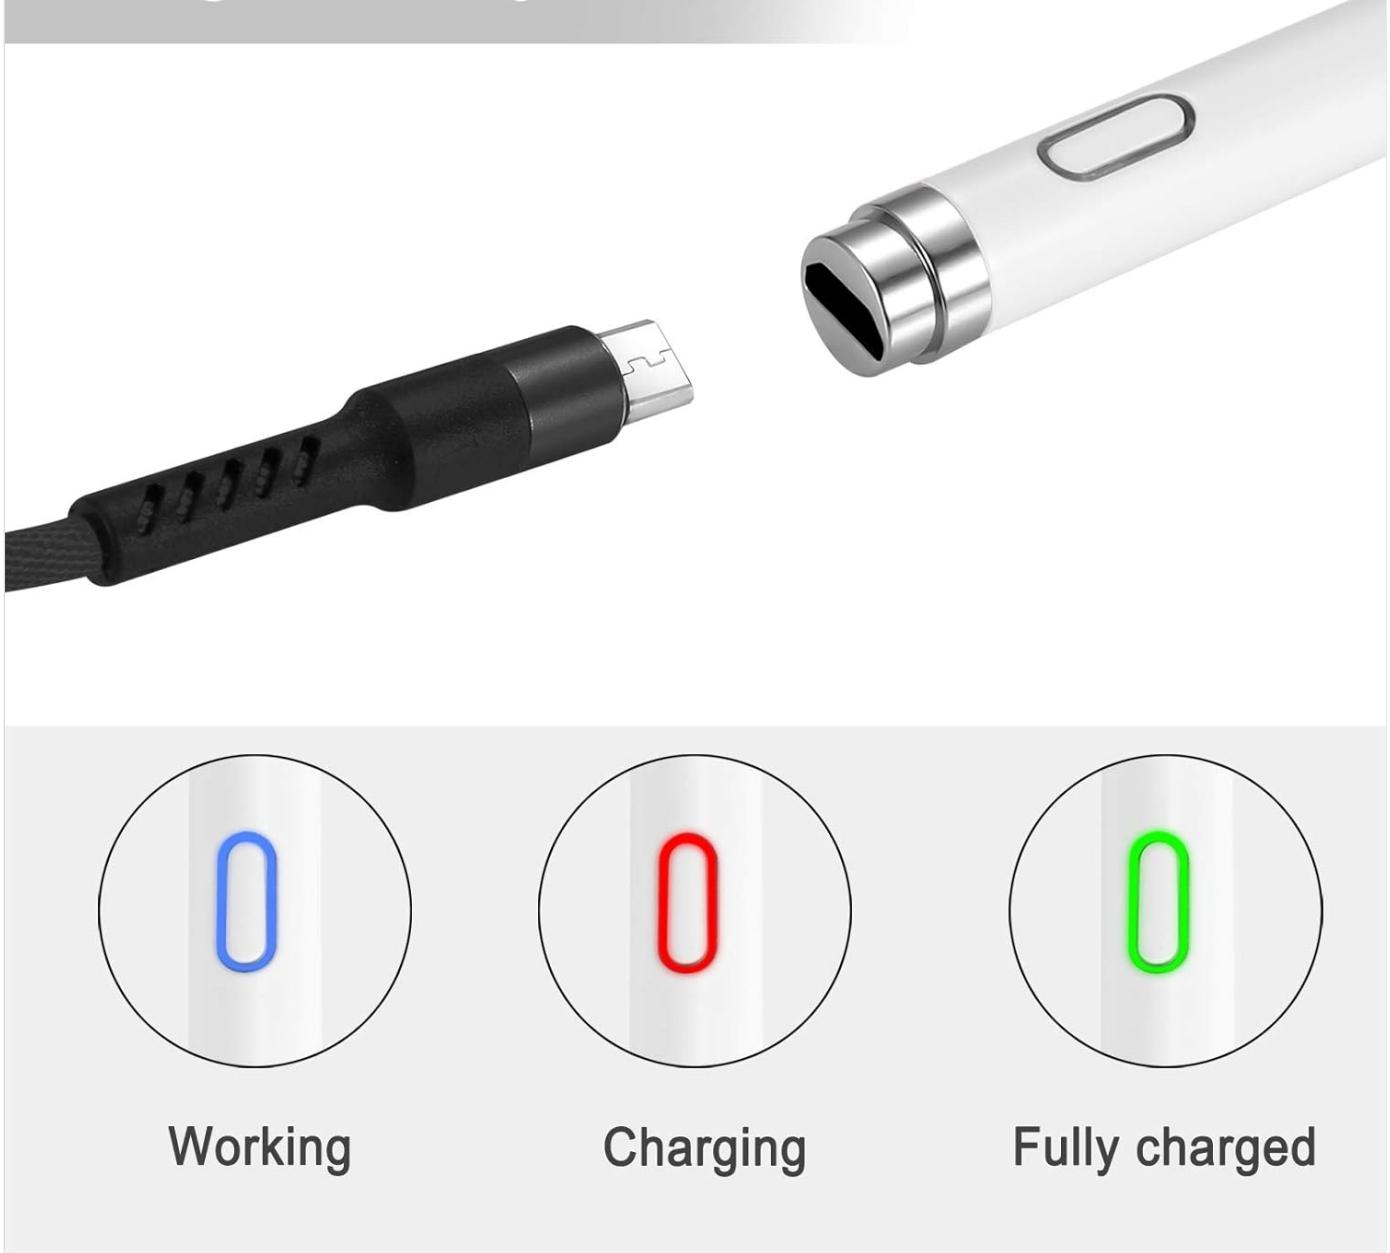


Image: Illustration of the stylus charging process, showing the Micro USB connection and the different indicator light colors for charging status.

Powering On/Off

To turn on the stylus, press the power button located on the side of the pen. The indicating light will illuminate blue. To turn off, press the power button again. The stylus will automatically turn off after 30 minutes of inactivity to conserve battery.


OPERATING INSTRUCTIONS

Compatibility

The maylofi Active Stylus Pen is compatible with most capacitive touch screen devices, including iOS devices such as iPad Pro, iPad Mini, iPad Air, iPhone 11/Pro/Pro Max, iPhone X, iPhone 8/8 Plus, iPhone 7/7 Plus, iPhone 6s/6s Plus, iPhone 5/5s/5 SE, and iPhone 4/4s. It also works with many Android smartphones and tablets. *Note: This stylus is NOT compatible with Microsoft Windows system devices.*

WIDE COMPATIBILITY

MOST CAPACITIVE TOUCH SCREENS

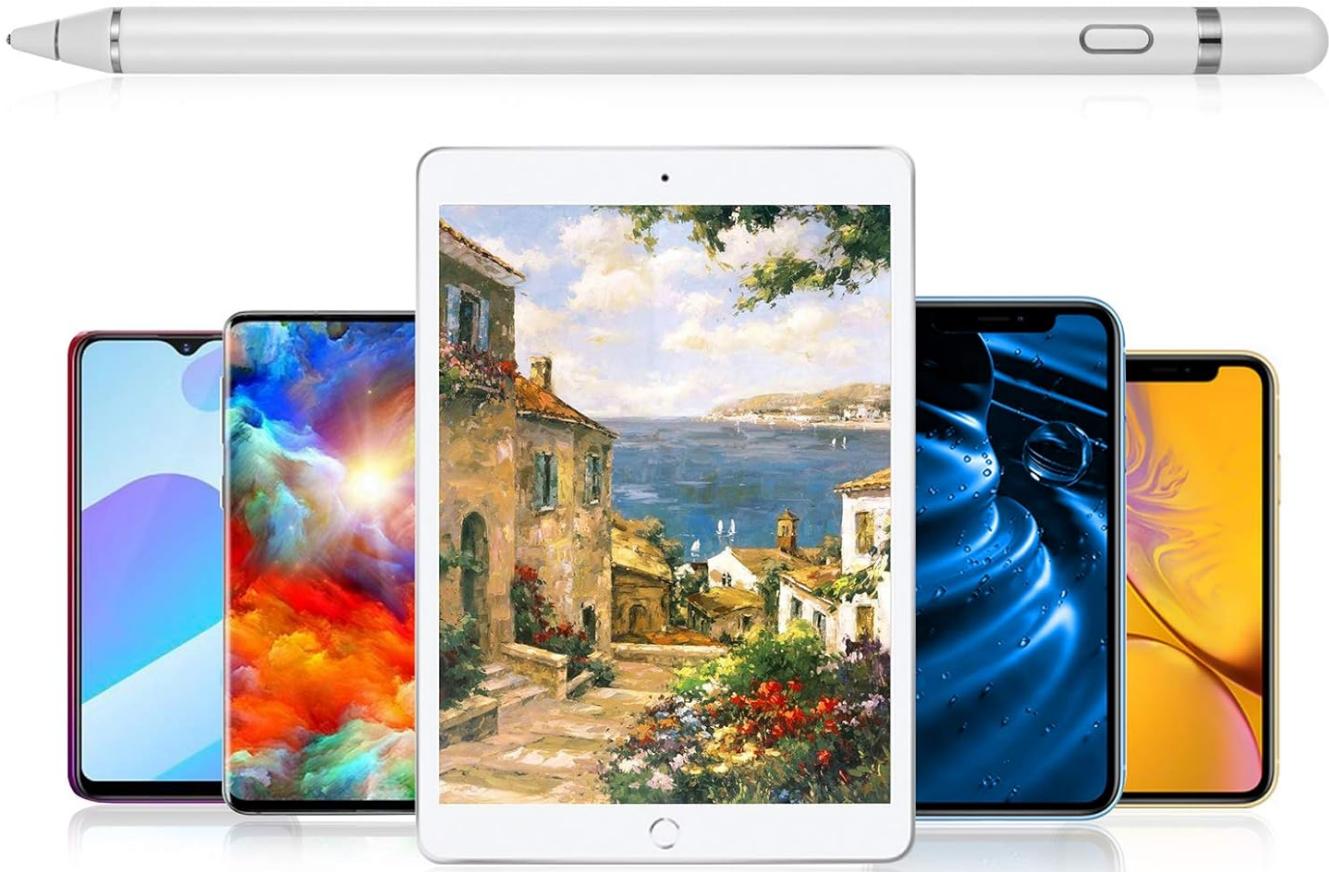

Android



iOS



Windows

Image: Visual representation of the stylus being compatible with various mobile devices, including Android and iOS tablets and smartphones.

Usage

No Bluetooth connection or app is required. Simply turn on the stylus and begin using it directly on your touch screen device. The 1.5mm tip provides accuracy and precision for various applications:

- **Drawing:** Create detailed artwork with smooth lines.
- **Writing:** Take notes, sign documents, or jot down ideas.
- **Browsing:** Navigate web pages and applications with ease.
- **Gaming:** Enhance your mobile gaming experience with precise control.

Explore new innovation possibilities



Drawing



Browsing



Playing Games



Note Taking

Image: Collage showing the stylus in use for different activities: drawing, browsing, playing games, and taking notes on various touch screen devices.

MAINTENANCE

To ensure the longevity and optimal performance of your stylus, follow these maintenance guidelines:

- Cleaning:** Wipe the stylus body with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Storage:** Store the stylus in a cool, dry place when not in use. Avoid placing heavy objects on it.
- Tip Care:** The 1.5mm tip is durable but can be damaged by excessive force or rough surfaces. Avoid pressing too hard or dragging it across non-screen surfaces.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|----------------------------------|---|--|
| Stylus not turning on. | Low battery. | Charge the stylus for 60-80 minutes using the provided Micro USB cable. |
| Stylus not responding on screen. | Stylus is off; Device incompatibility. | Ensure the stylus is powered on (blue light). Verify your device is a capacitive touch screen and not a Microsoft Windows system device. |
| Inaccurate or lagging response. | Screen protector interference; Low battery. | Ensure screen protector is thin and properly applied. Charge the stylus. |
| Stylus turns off automatically. | Intelligent energy-saving feature. | This is normal behavior; the stylus turns off after 30 minutes of inactivity. Press the power button to turn it back on. |

SPECIFICATIONS

| Feature | Detail |
|--------------------|----------------------------------|
| Model Number | E8910 |
| Length | 180mm (7.09 inches) |
| Material | Aluminum Alloy |
| Pen Tube Diameter | 8.9mm (0.35 inches) |
| Fiber Tip Diameter | 0.24 inches (6mm) |
| Weight | 30g (1 ounces) |
| Battery Type | 1 Lithium Ion battery (built-in) |
| Charging Time | 60-80 minutes (approx. 1 hour) |
| Working Time | 10-12 hours |
| Standby Time | 30 days |
| Auto-off Feature | 30 minutes of inactivity |


WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's return policy or contact the manufacturer directly. The product is typically covered by a standard return policy, allowing for refunds or replacements within 30 days of purchase.

Manufacturer: maylofi

For further assistance, you may visit the [maylofi Store on Amazon](#).

Documents - maylofi – E8910

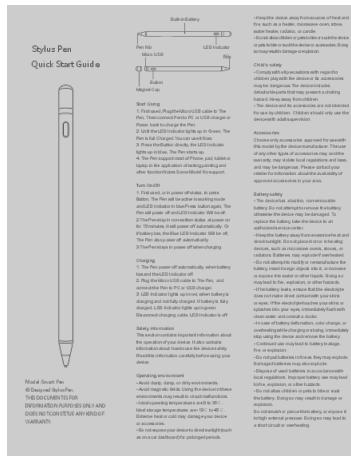

[\[pdf\]](#) User Manual Quick Start Guide Guide Warranty

Active Stylus Pens for Touch Screens maylofi Rechargeable Digital Stylish Pen Pencil Universal iPhone iPad Pro Mini Air Android and Most Capacitive BLUE E8910 User Manual B09XMWMVPR B08KJ4ZQDG

B09DRR9Y3S B09Y343PF2 B09YRJ5YSV B08KJ4LGYY B08KJ5MX31 B09Y35KKWD B08KJ6FR4P

B08XBYW336 B08R23FTS6 719gCTYUGRL m media amazon images | |||

Stylus Pen Quick Start Guide Model :Smart Pen Designed Stylus Pen. THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUE ANY KIND OF WARRANTY. Built-in Battery Pen Nib Micro USB LED Indicator Nip Button Magnet Cap Start Using 1. First used ,Plug the Micro USB cable to The Pen, T...

lang:en **score:18** filesize: 209.55 K page_count: 2 document date: 2018-10-08