

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tengsen](#) /

› [Tengsen M1P MP3 Player User Manual](#)

## Tengsen M1P

# Tengsen M1P MP3 Player User Manual

## INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Tengsen M1P MP3 Player. Please read this manual carefully before using the device to ensure proper function and longevity. This device combines a portable music player with a touch screen interface, Bluetooth connectivity, and various multimedia functions.

## PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Tengsen M1P MP3 Player
- Micro USB Charging Cable
- Wired Earphones
- Transparent Protective Case
- User Manual (this document)

# 4.0 Inch

 Full Screen

 Bluetooth 5.0



Image: The Tengsen M1P MP3 Player displayed with its standard accessories, including wired earphones, a transparent protective case, and two USB cables, highlighting its 4.0-inch full screen and Bluetooth 5.0 capabilities.

## DEVICE OVERVIEW

### Front View



Image: A clear view of the Tengsen M1P MP3 Player's 4.0-inch touch screen, displaying its main menu with icons for Music, E-book, Video, Radio, Picture, Stopwatch, Record, Calculator, Calendar, Theme, Folder, and Settings.

## Side and Bottom Views

**HD Video  
1080P**

## Support 1080P Video



**Support**

AVI/RMVB/MOV/MPEG/VOB/M-KV/H264/XVID/MPEG2/MP4 etc.

Image: A close-up of the bottom of the Tengsen M1P MP3 Player, showcasing the built-in speaker grille, Micro USB charging port, and 3.5mm headphone jack, emphasizing its integrated audio capabilities.

- **4.0-inch Full Touch Screen:** Primary interface for navigation and control.
- **Power Button:** Located on the side, used to turn the device on/off and lock/unlock the screen.
- **Volume Buttons:** Located on the side, for adjusting audio volume.
- **Micro USB Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For connecting wired earphones.
- **Built-in Speaker:** For audio playback without earphones.
- **MicroSD Card Slot:** For expanding storage capacity (supports up to 128GB).

## SETUP

### Charging the Device

Before first use, fully charge your MP3 player. Connect the provided Micro USB cable to the player's Micro USB port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge typically takes approximately 2-3 hours.

# LONG BATTERY LIFE

Built-in 1400mAh battery, 8+hours video play and 20+hours music play with wired earphone.



Image: The Tengsen M1P MP3 Player with a visual representation of its 1400mAh battery, indicating extended usage times of 8+ hours for video playback and 20+ hours for music playback with wired earphones.

## Power On/Off

**To Power On:** Press and hold the Power button on the side until the screen lights up.

**To Power Off:** Press and hold the Power button, then select "Power Off" on the screen.

## Inserting a MicroSD Card

Locate the MicroSD card slot on the side of the device. Gently insert a MicroSD card (up to 128GB, not included) into the slot until it clicks into place. Ensure the card is inserted correctly to avoid damage. To remove, gently push the card in until it springs out.

## OPERATING INSTRUCTIONS

### Basic Navigation

The device features a 4.0-inch full touch screen. Swipe left/right or up/down to navigate through menus and applications. Tap an icon to open an application or select an option. Use the back arrow icon on the top left of the

screen to return to the previous menu.

# 4.0" Full Touch Screen

Easily operate like using your smartphone.  
(Metal frame-reliable durable, elegant appearance)



Image: A hand demonstrating interaction with the 4.0-inch full touch screen of the Tengsen M1P MP3 Player, showing a video playing, emphasizing its smartphone-like ease of operation and durable metal body.

## Music Playback

Tap the "Music" icon on the home screen. You can browse music by Artist, Album, Songs, or Playlists. The player supports various audio formats including MP3, WMA, OGG, APE, and FLAC.

**Creating Playlists:** While playing a song, you can add it to a playlist. Refer to the on-screen prompts for detailed steps. You can also organize music into folders via a computer and access them through the "Folder" application on the device.

## Video Playback

Tap the "Video" icon. The player supports HD 1080P video playback and various formats such as AVI, RMVB, MOV, MPEG, VOB, MKV, H.264, XVID, MPEG2, and MP4.

For best performance, ensure video files are optimized for mobile playback. The 4-inch screen provides a comfortable viewing experience.

# UPGRADE BLUETOOTH 5.0

More stable connection with your Bluetooth headset and speakers.



Image: The Tengsen M1P MP3 Player showcasing its ability to play HD 1080P videos, with a clear image of a video playing on its screen and a list of supported video formats below.

## Bluetooth Connection

Go to "Settings" and select "Bluetooth". Turn Bluetooth ON. The device will scan for available Bluetooth devices. Select your desired device (e.g., headphones, speaker) from the list to pair. Once paired, you can stream audio wirelessly.

The device features upgraded Bluetooth 5.0 for a more stable and efficient connection with your Bluetooth headsets and speakers.



# Sports Music Life



- Hi-Fi Lossless Sound, Sport Pedometer.
- Support: MP3、DRM WMA、OGG、APE、FLAC.

Image: The Tengsen M1P MP3 Player displaying music playback, with text indicating "UPGRADE BLUETOOTH 5.0" and highlighting its stable connection capabilities with Bluetooth headsets and speakers, which are also shown.

## FM Radio

Connect wired earphones to the 3.5mm headphone jack; they act as the antenna. Tap the "Radio" icon. You can auto-scan for stations or manually tune to your preferred frequencies.

## Voice Recorder

Tap the "Record" icon to access the voice recorder function. You can start, pause, and save recordings. The built-in microphone is suitable for general voice recording and note-taking.

## E-book Reader

Tap the "E-book" icon. The player supports various text formats. You can browse and read e-books stored on the device or MicroSD card. While basic, it provides a convenient way to read on the go.

## Pedometer (Sports Mode)

Tap the "Pedometer" or "Sports" icon. This feature tracks your steps, distance, and calories burned during physical activity. Ensure the device is carried securely, for example, in an armband, for accurate tracking.

# 4.0 Inch

 Full Screen

 Bluetooth 5.0

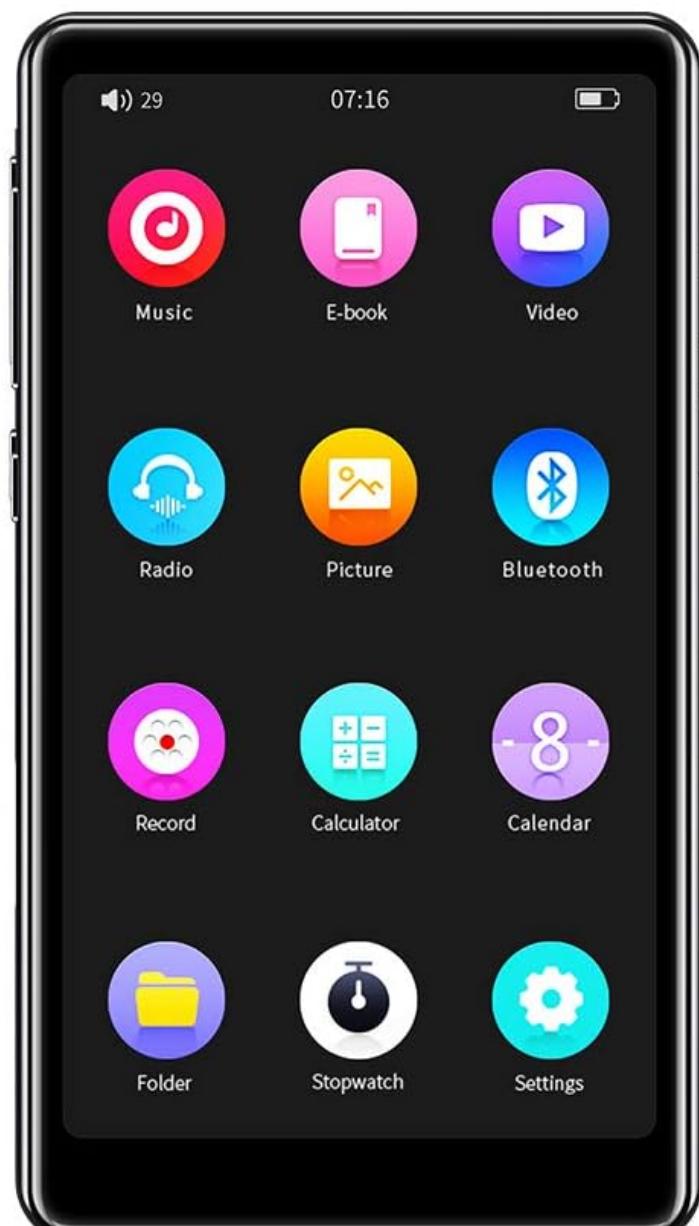


Image: The Tengsen M1P MP3 Player displaying music playback with a pedometer icon and step count, illustrating its "Sports Music Life" feature. The image also highlights Hi-Fi Lossless Sound and supported audio formats like MP3, WMA, OGG, APE, and FLAC.

## Settings

Tap the "Settings" icon to customize various device parameters, including display brightness, date and time, language, system information, and more. Explore the settings menu to personalize your experience.

## MAINTENANCE AND CARE

- Keep the device dry. Avoid exposure to moisture or liquids, as this can cause damage to internal components.
- Clean the screen and body with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents.
- Avoid extreme temperatures. Do not expose the device to direct sunlight for prolonged periods or to very cold environments.
- Protect the screen from scratches. Use the provided transparent protective case and consider a screen protector for added durability.

- Regularly back up important data (music, videos, documents) from your device to a computer to prevent data loss.
- Do not attempt to disassemble or repair the device yourself, as this will void the warranty and may cause further damage.

## TROUBLESHOOTING

If you encounter any issues with your Tengsen M1P MP3 Player, please refer to the following common problems and solutions:

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, press and hold the power button for 10-15 seconds for a hard reset.
Cannot connect to Bluetooth device.	Ensure Bluetooth is enabled on both devices. Make sure the devices are within range (typically 10 meters). Try unpairing and re-pairing the devices.
No sound from speaker/earphones.	Check the volume level on the device. Ensure earphones are properly plugged into the 3.5mm jack. If using Bluetooth, check the connection status and volume on the connected device.
MicroSD card not recognized.	Ensure the card is inserted correctly and fully. Try reinserting the card. If it's a new card or has been used in other devices, try formatting the card (this will erase all data) on a computer or through the device's settings if available.
Screen is unresponsive or frozen.	Perform a soft reset by pressing and holding the power button until the device restarts. If the issue persists, ensure the screen is clean and free of debris.

## SPECIFICATIONS

Feature	Detail
Model	Tengsen M1P
Screen Size	4.0 inches
Display Technology	LCD
Internal Storage	16 GB
Expandable Storage	Up to 128 GB via MicroSD card
Bluetooth Version	5.0
Battery Type	Lithium-polymer (1400mAh built-in)
Audio Formats Supported	MP3, WMA, OGG, APE, FLAC

Feature	Detail
Video Formats Supported	AVI, RMVB, MOV, MPEG, VOB, MKV, H.264, XVID, MPEG2, MP4 (Supports 1080P)
Built-in Components	Speaker, Voice Recorder, FM Radio, Pedometer
UPC	729993998032

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official Tengsen website. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, please contact Tengsen customer service through the contact details provided on their official support channels.

© 2023 Tengsen. All rights reserved.