

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Aowasi](#) /

› Aowasi 7-Inch Digital Calendar Alarm Clock (Model 7010U-B) User Manual

Aowasi 7010U-B

Aowasi 7-Inch Digital Calendar Alarm Clock User Manual

Model: 7010U-B

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Aowasi 7-Inch Digital Calendar Alarm Clock. Designed for clarity and ease of use, this clock features a large display, multiple alarm options, and automatic brightness adjustment, making it suitable for various users.

SAFETY INFORMATION

- Ensure the clock is placed on a stable, flat surface or securely mounted on a wall.
- Use only the provided power adapter. Using unauthorized adapters may damage the device and void the warranty.
- Keep the device away from water, excessive moisture, and extreme temperatures.
- Do not attempt to disassemble or repair the clock yourself. Refer all servicing to qualified personnel.
- Unplug the clock from the power outlet during lightning storms or when unused for long periods.


PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Aowasi 7-Inch Digital Calendar Alarm Clock
- 1 x Power Adapter
- 1 x Stand Bracket
- 1 x English User Instruction Manual (this document)

PRODUCT OVERVIEW

Front View

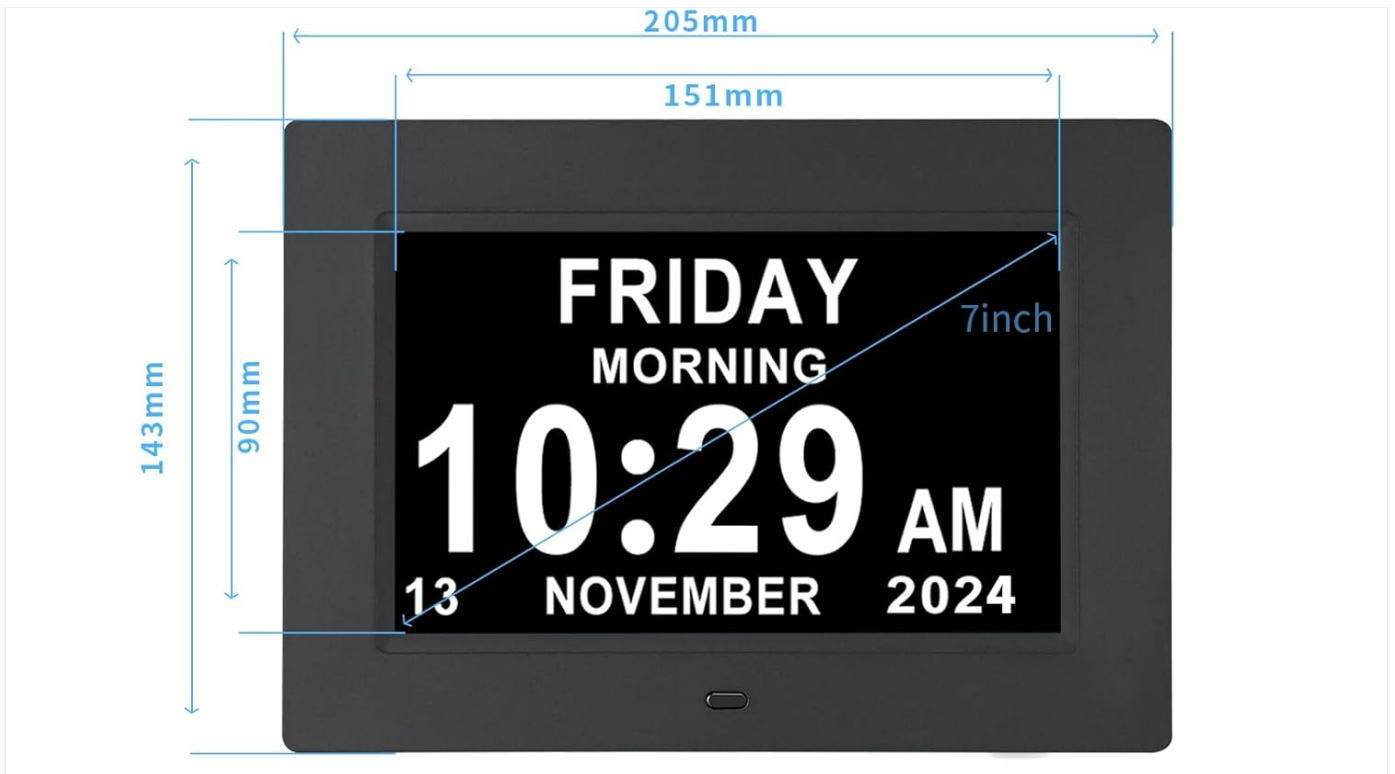

8 Languages



English



Français



Polski



Nederlands



Deutsch



Italiano



Español



Cymraeg

The front of the clock features a 7-inch LED display, clearly showing the time, day of the week, month, and year in large, easy-to-read characters.

Rear View and Ports



The back of the clock includes an SD card slot, earphone jack, USB port, HDMI input, DC power input, a hanging hole for wall mounting, a speaker, and control buttons for navigation and settings. A holder/stand is also visible.

SETUP

1. Power Connection

1. Insert the DC plug of the power adapter into the "DC Power" port on the back of the clock.
2. Plug the power adapter into a standard electrical outlet. The clock will power on automatically.

2. Initial Settings (Time, Date, Language)

Upon first power-on or after a power outage (if the internal battery backup is depleted), you may need to set the time, date, and preferred language. Use the control buttons on the back of the clock to navigate the menu.

- Press the **MENU** button to access the settings.
- Use the **UP** and **DOWN** buttons to navigate through options like **Time Mode**, **Set Date**, **Date Mode**, and **Language**.

- Use the **LEFT** and **RIGHT** buttons to adjust values or select options.
- Confirm your selections by pressing the **MENU** button again or waiting for the menu to exit automatically.

The clock features a battery backup to retain settings during brief power interruptions. For extended outages, settings may need to be re-entered.

Setup Demonstration Video

 
Your browser does not support the video tag.

This video demonstrates various features and settings of the Aowasi Digital Calendar Alarm Day Clock, including changing clock displays, time formats, alarm tags, and brightness settings.

OPERATING INSTRUCTIONS

1. Display Modes

The clock offers four different display styles. To switch between them, press the **LEFT** or **RIGHT** buttons on the back of the clock when not in the settings menu.

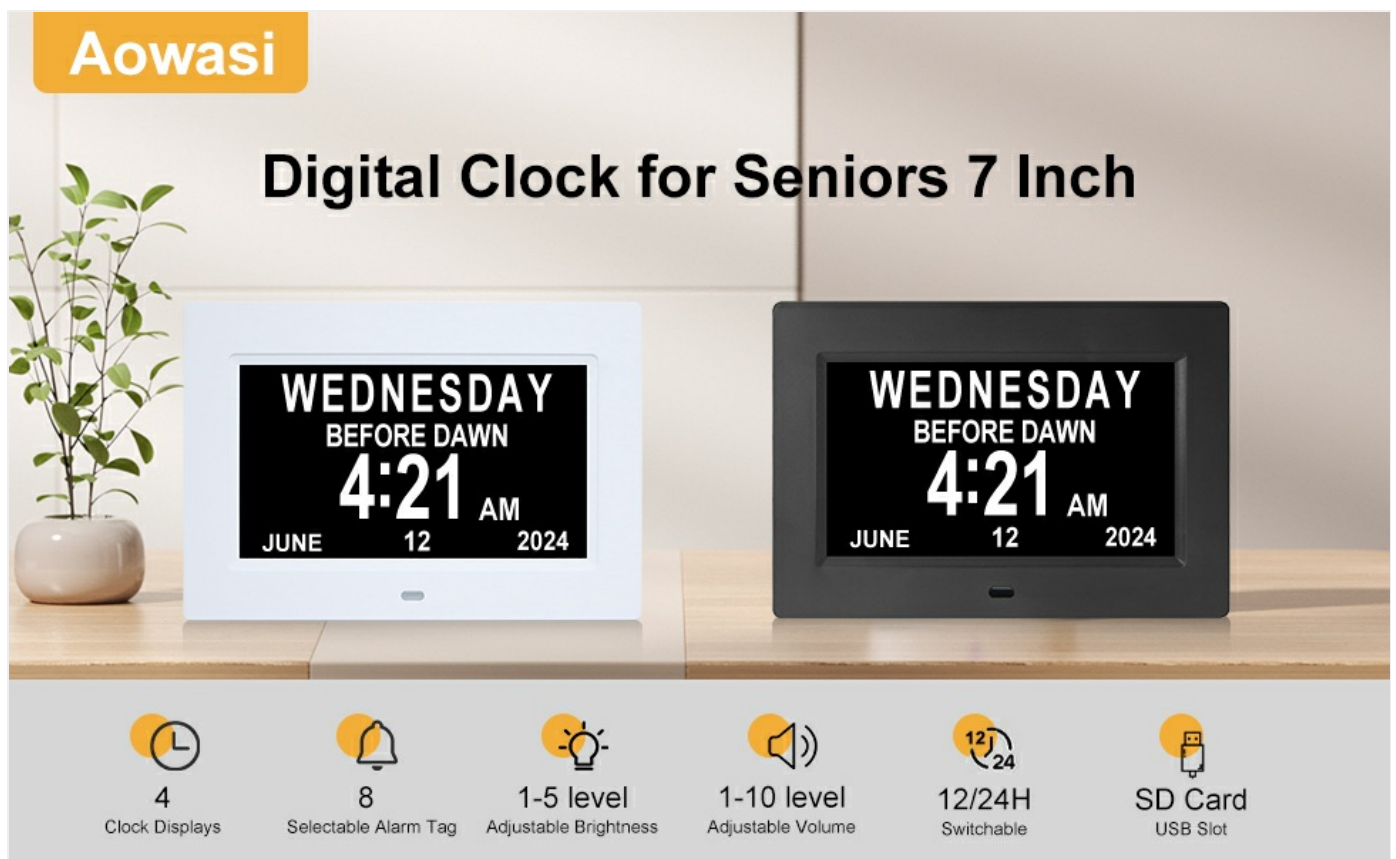

The clock provides four distinct display types, allowing users to choose their preferred visual format for time and date.

2. Time Format (12/24 Hour)

You can switch between 12-hour (AM/PM) and 24-hour time formats in the settings menu.

- Press **MENU**.
- Navigate to **Time Mode** using **UP/DOWN**.
- Use **LEFT/RIGHT** to select **12 Hours** or **24 Hours**.


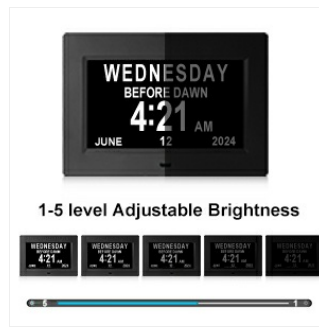


Illustration of the 12-hour and 24-hour time format options.

3. Automatic Dimming and Brightness Adjustment

The clock features an automatic dimming function that adjusts brightness between 7:00 PM and 7:00 AM. You can also manually adjust the brightness level.

 - To enable/disable automatic brightness: Press **MENU**, navigate to **Automatic Brightness**, and use **LEFT/RIGHT** to select **On** or **Off**.
- To manually adjust brightness (levels 1-5): If automatic brightness is **Off**, navigate to the brightness setting and use **LEFT/RIGHT** to select your desired level.

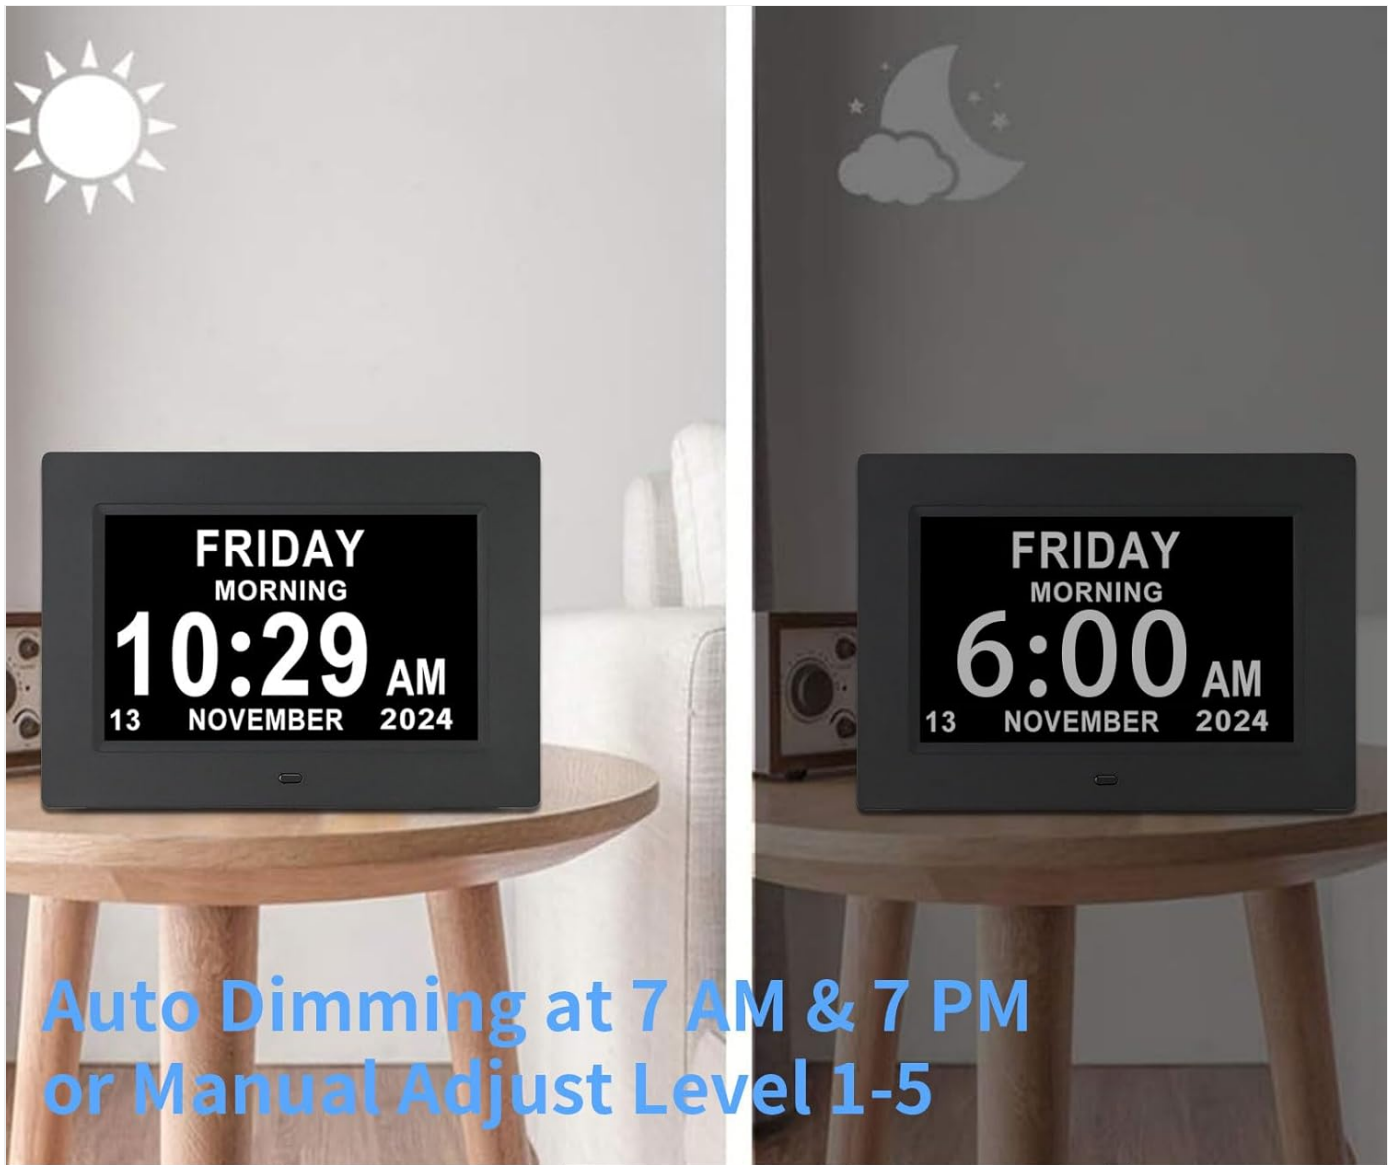

**Auto Dimming at 7 AM & 7 PM
or Manual Adjust Level 1-5**



The clock automatically dims between 7 PM and 7 AM, and offers 5 levels of manual brightness adjustment.




Visual representation of the 1-5 level adjustable brightness feature.

4. Alarm Settings

The clock supports up to 12 custom alarms with selectable tags to help remind users of various activities.

- Press **MENU** and navigate to **Alarm settings**.

- Select an alarm slot (e.g., Alarm 1, Alarm 2).
- Set the desired time for the alarm.
- Choose a repeat setting (e.g., daily, weekdays, specific days).
- Select an alarm tag from options like **Meal**, **Medicine**, **Clinic**, **Shower**, **Gardening**, **Cleaning**, **Appointment**, or **Walk Dog**.
- Ensure **Alarm switch** is set to **On** for the alarm to be active.

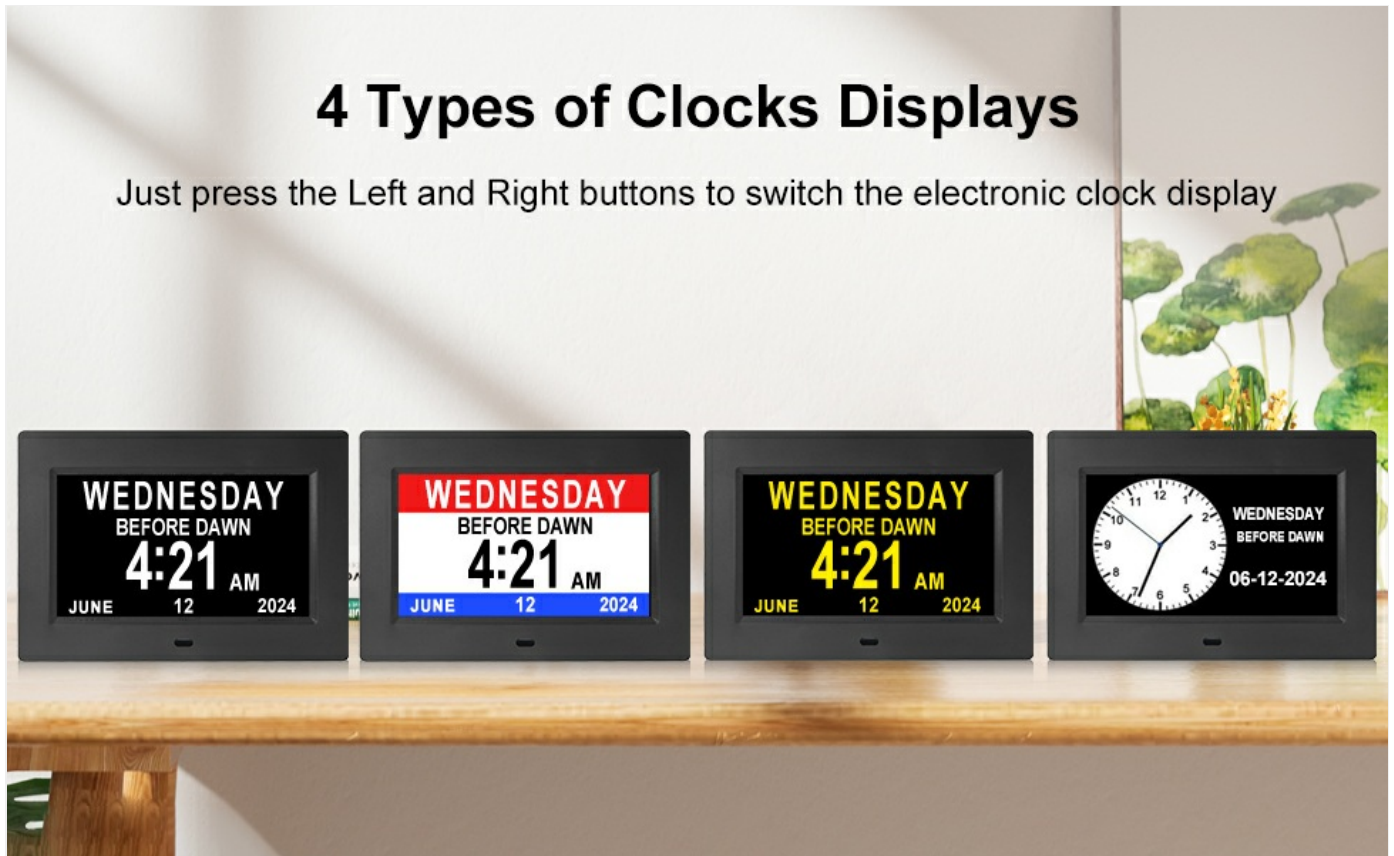


The clock offers 8 selectable alarm tags to customize reminders for various daily activities.

5. Volume Adjustment

The alarm volume can be adjusted from level 1 to 10.


- Press **MENU** and navigate to **Volume**.
- Use **LEFT/RIGHT** to set the desired volume level.

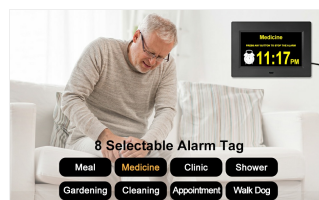

Visual representation of the 1-10 level adjustable volume feature.

6. Placement Options

The Aowasi Digital Calendar Alarm Clock can be placed on a tabletop using its integrated stand or mounted on a wall using the hanging hole on the back.

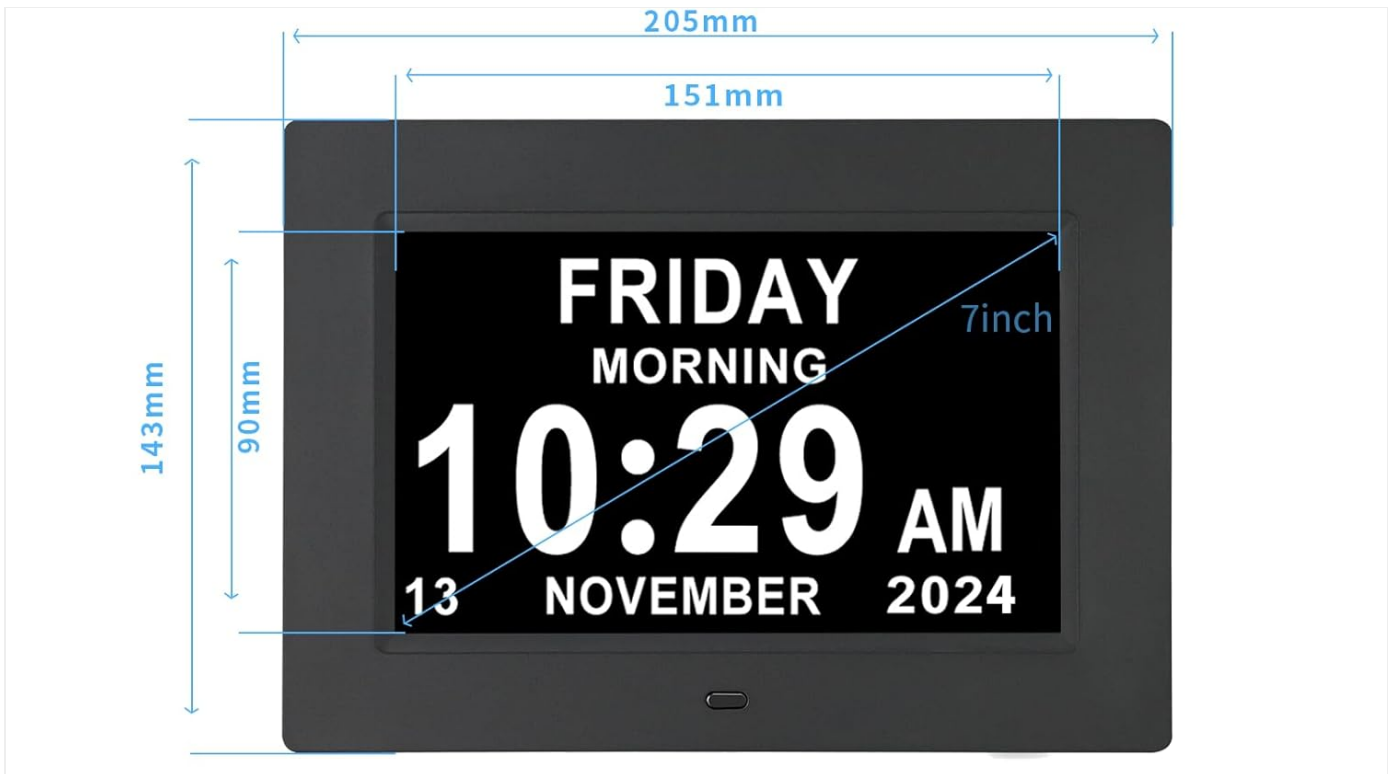

8 Languages



English



Français



Polski



Nederlands



Deutsch



Italiano

 


Español



Cymraeg

The clock is designed for convenient tabletop placement.

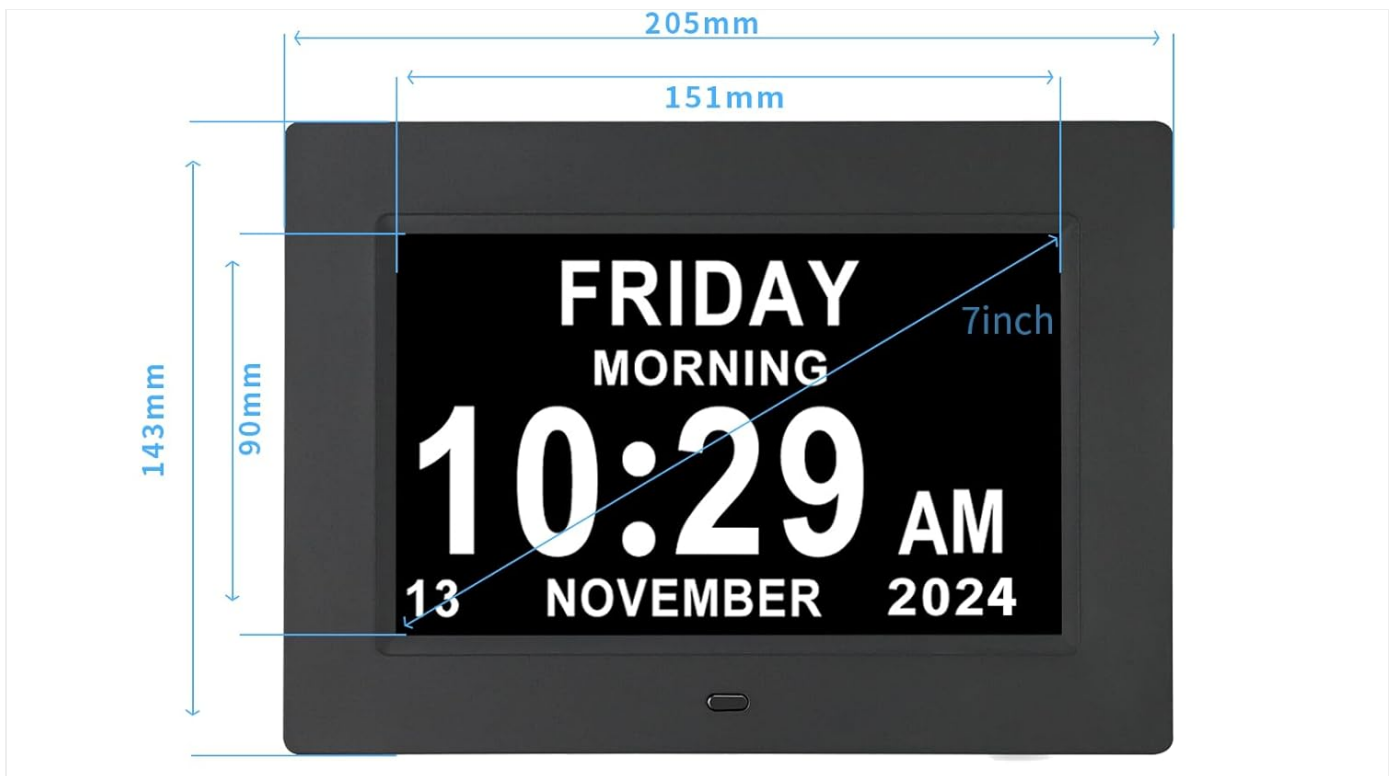

8 Languages



English



Français



Polski



Nederlands



Deutsch



Italiano



Español



Cymraeg

The clock can also be wall-mounted for optimal visibility.

MAINTENANCE

- To clean the display and casing, use a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to direct sunlight for prolonged periods, as this may affect the display's lifespan.

TROUBLESHOOTING

Problem	Possible Solution
Clock does not power on.	Ensure the power adapter is securely connected to both the clock and a working electrical outlet. Try a different outlet.

Problem	Possible Solution
Display is too dim or too bright.	Check the Automatic Brightness setting in the menu. If it's Off , adjust the brightness level manually (1-5).
Alarm does not sound.	Verify that the specific alarm is enabled (Alarm switch set to On) and the volume is not set to 0. Check the repeat settings for the alarm.
Incorrect time or date.	Access the settings menu to manually adjust the time and date. Ensure the correct time zone is implicitly considered during manual setup.

SPECIFICATIONS

Feature	Detail
Brand	Aowasi
Model Number	7010U-B
Display Type	LED
Screen Size	7 Inch
Product Dimensions	8"W x 5.6"H
Power Source	Corded Electric
Alarm Options	12 Custom Alarms
Brightness	Auto-dimming (7 PM - 7 AM), 5 manual levels
Languages	English, French, German, Dutch, Italian, Polish, Spanish, Welsh
Battery Backup	Retains settings during power failure (not battery operated for main function)
Mounting Type	Tabletop or Wall-mount
Material	Plastic

WARRANTY AND SUPPORT

Aowasi products are designed for reliability and performance. For warranty information, technical support, or any questions regarding your product, please refer to the contact information provided with your purchase or visit the official Aowasi website. Our customer service team is available to assist you.

