

[Manuals.plus](#) /

› [Censinda](#) /

› Censinda LED Camping Lantern Instruction Manual

Censinda Tentlamp001

Censinda LED Camping Lantern Instruction Manual


Model: Tentlamp001

INTRODUCTION

This instruction manual provides detailed information for the safe and effective use of your Censinda LED Camping Lantern. Designed for versatility and durability, this portable light source is ideal for various outdoor activities and emergency situations, including camping, hiking, fishing, and hurricane preparedness.



Description: A compact, rechargeable LED camping lantern featuring an orange carabiner-style hook for easy hanging. The lantern has a dark grey body with a gold band and a frosted white light diffuser. It includes a USB output port for charging other devices.

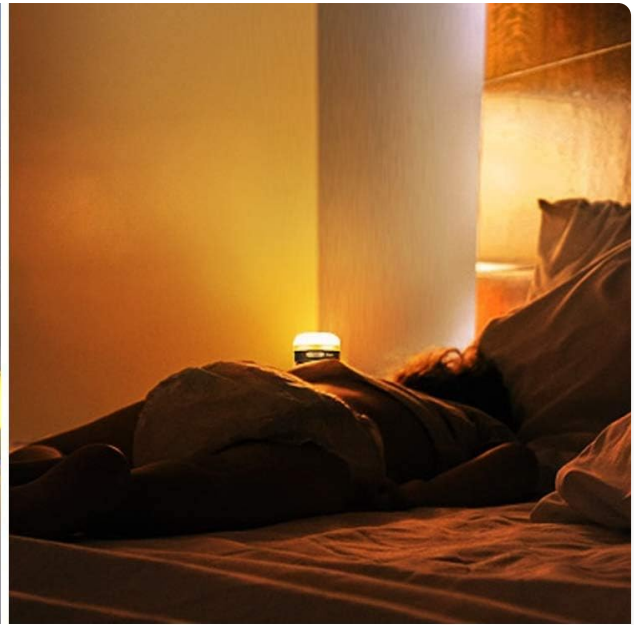

Description: A collage of four images demonstrating the lantern's versatility: illuminating a tent at night, providing light for reading in bed, lighting up a car engine bay, and illuminating a campsite with a tent.

SETUP

Your Censinda LED Camping Lantern comes with a built-in rechargeable battery.

1. **Initial Charge:** Before first use, fully charge the lantern. Locate the INPUT port, typically covered by a rubber flap for water resistance.
2. **Charging:** Connect the provided USB cable to the INPUT port of the lantern and plug the other end into a compatible USB power source (e.g., wall adapter, power bank, computer USB port).
3. **Charging Indicator:** A green light will flash while the lantern is charging. The light will stop flashing when the battery is fully charged.

Ensure the rubber flap covering the charging port is securely closed after charging to maintain the lantern's IP45 waterproof rating.



Description: A split image showing the lantern being charged by a laptop via a USB cable on the top right, and the lantern charging a smartphone via a USB cable on the bottom right. The main image shows the lantern with its USB output port visible.

OPERATING INSTRUCTIONS

The Censinda LED Camping Lantern offers multiple lighting modes and convenient features for diverse needs.

Light Modes

Press the power button to cycle through the available light modes:

- **Strong Light (300LM):** Provides maximum brightness for extensive illumination. Ideal for general lighting in large areas or when strong visibility is required.
- **Weak Light (150LM):** Offers a softer, more diffused light, suitable for ambient lighting, reading inside a tent, or conserving battery life.
- **Fast Flash:** A rapid flashing mode, useful for signaling or attracting attention in emergency situations.
- **Slow Flash (SOS):** A slower, rhythmic flashing pattern, typically used as an SOS signal for distress. To activate, press and hold the power button for 3 seconds.

4 Modes



Bright flashlight
Lighting mode



Dim lamp mode



warning lights
flashing mode



press the switch for
3 seconds-SOS
Blink Slowly Mode

Description: A visual representation of the lantern's four light modes: Bright flashlight lighting mode, Dim lamp mode, Warning lights flashing mode, and SOS Blink Slowly mode, with corresponding images of the lantern's brightness.

Power Bank Function

The lantern can also serve as an emergency power bank to charge your mobile devices.

- **To Charge a Device:** Locate the OUTPUT port. Connect your device's charging cable to the OUTPUT port of the lantern. The lantern's internal 1800mAh battery will begin charging your device.
- This feature is designed for emergency use to provide a small charge to critical devices.

Hanging and Mounting

The lantern offers versatile placement options:

- **Integrated Hook:** Utilize the sturdy hook at the top of the lantern to hang it from tent loops, tree branches, backpacks, or other suitable fixtures.
- **Magnetic Base:** The built-in magnet in the base allows the lantern to be securely attached to metal surfaces, such as car hoods, metal poles, or toolboxes, providing hands-free illumination.

► Two Hanging Methods



Hang by the hook



Built in magnet on the top of the lamp, so it can also be installed on metal item

Description: A split image illustrating two ways to use the lantern: hanging by its hook from a bar, and attached to a metal surface using its magnetic base.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Censinda LED Camping Lantern.

- **Cleaning:** Wipe the lantern with a soft, damp cloth to remove dirt or debris. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The lantern has an IP45 waterproof rating, meaning it is protected against splashing water from any direction. Ensure all port covers are securely closed to maintain water resistance. Do not submerge the lantern in water.
- **Storage:** Store the lantern in a cool, dry place when not in use. For long-term storage, it is recommended to charge the battery every 3-6 months to maintain battery health.
- **Battery Care:** Avoid fully depleting the battery frequently, as this can reduce its overall lifespan.

IP65 Waterproof



Description: An image of the Censinda LED Camping Lantern with water droplets on its surface, visually representing its IP65 waterproof rating.

TROUBLESHOOTING

If you encounter issues with your Censinda LED Camping Lantern, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Lantern does not turn on or light is dim.	Low battery.	Charge the lantern fully using the provided USB cable.
Lantern is not charging.	Loose cable connection; faulty cable/adaptor; dirty charging port.	Ensure USB cable is securely connected. Try a different USB cable or power adapter. Check the charging port for debris and clean if necessary.
Device not charging from lantern (power bank function).	Lantern battery too low; incorrect cable; device not compatible.	Ensure the lantern has sufficient charge. Use the correct charging cable for your device. Some devices may draw too much power or be incompatible.
Water ingress/damage.	Port covers not sealed; submerged in water.	Always ensure all rubber port covers are tightly sealed. The lantern is IP45 rated, not fully submersible. Avoid heavy rain or submersion.

SPECIFICATIONS

Brand	Censinda
Model Number	Tentlamp001
Product Dimensions	2.76"L x 2.76"W x 3.15"H
Item Weight	4.2 ounces
Light Source Type	Light Emitting Diode (LED)
Brightness	300 Lumen
Number of Light Modes	4 (Strong, Weak, Fast Flash, Slow Flash)
Battery Type	Lithium Polymer (1800mAh)
Battery Life	Up to 8 hours (Weak Light Mode), 4 hours (Strong Light Mode)
Input Voltage	5 Volts
Water Resistance Level	IP45 (Waterproof)
Mounting Type	Ceiling Mount (via hook), Magnetic Base
Material	Acrylonitrile Butadiene Styrene (ABS)

Color	Green
UPC	191171112101



Description: An image detailing the physical dimensions of the lantern (80mm height, 70mm diameter, 50mm thickness when compressed) and labeling its LED indicators, power on/off button, input port, and output port.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Censinda customer service directly. Keep your purchase receipt for any warranty claims.

