

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 10.5" Dual Portable DVD Player User Manual

WONNIE W-1020



WONNIE 10.5" Dual Portable DVD Player

USER MANUAL

Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your WONNIE 10.5" Dual Portable DVD Player (Model W-1020). Please read this manual thoroughly before using the product to ensure proper function and longevity.



The WONNIE 10.5" Dual Portable DVD Player system, including the main player, slave monitor, headphones, and remote control.

What's in the Box

 
Upon opening your WONNIE Dual Portable DVD Player package, verify that all the following components are included:

- 1 x Main DVD Player + 1 x Slave Monitor
- 2 x Headphones + 2 x Headrest Straps
- 1 x AC Adapter + 1 x Car Charger
- 1 x AV Cable + 1 x DC Cable
- 1 x Remote Control + 1 x RCA Cable + 1 User Manual



Main player

Slave Monitor

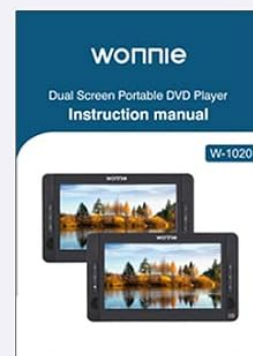

User Manual



Two Headphones



Two Headrest
Mount Straps



Remote Control



3.5mm-RCA Cable



DC Cable



AV Cable



AC Adapter



 
Car Charger

All accessories and components included with your WONNIE Dual Portable DVD Player system.

Setup Instructions

1. Connecting the Main Player and Slave Monitor

To enable synchronized playback across both screens, connect the main DVD player to the slave monitor using the provided AV cable and DC cable. The AV cable transmits video and audio signals, while the DC cable provides power to the slave monitor from the main player.

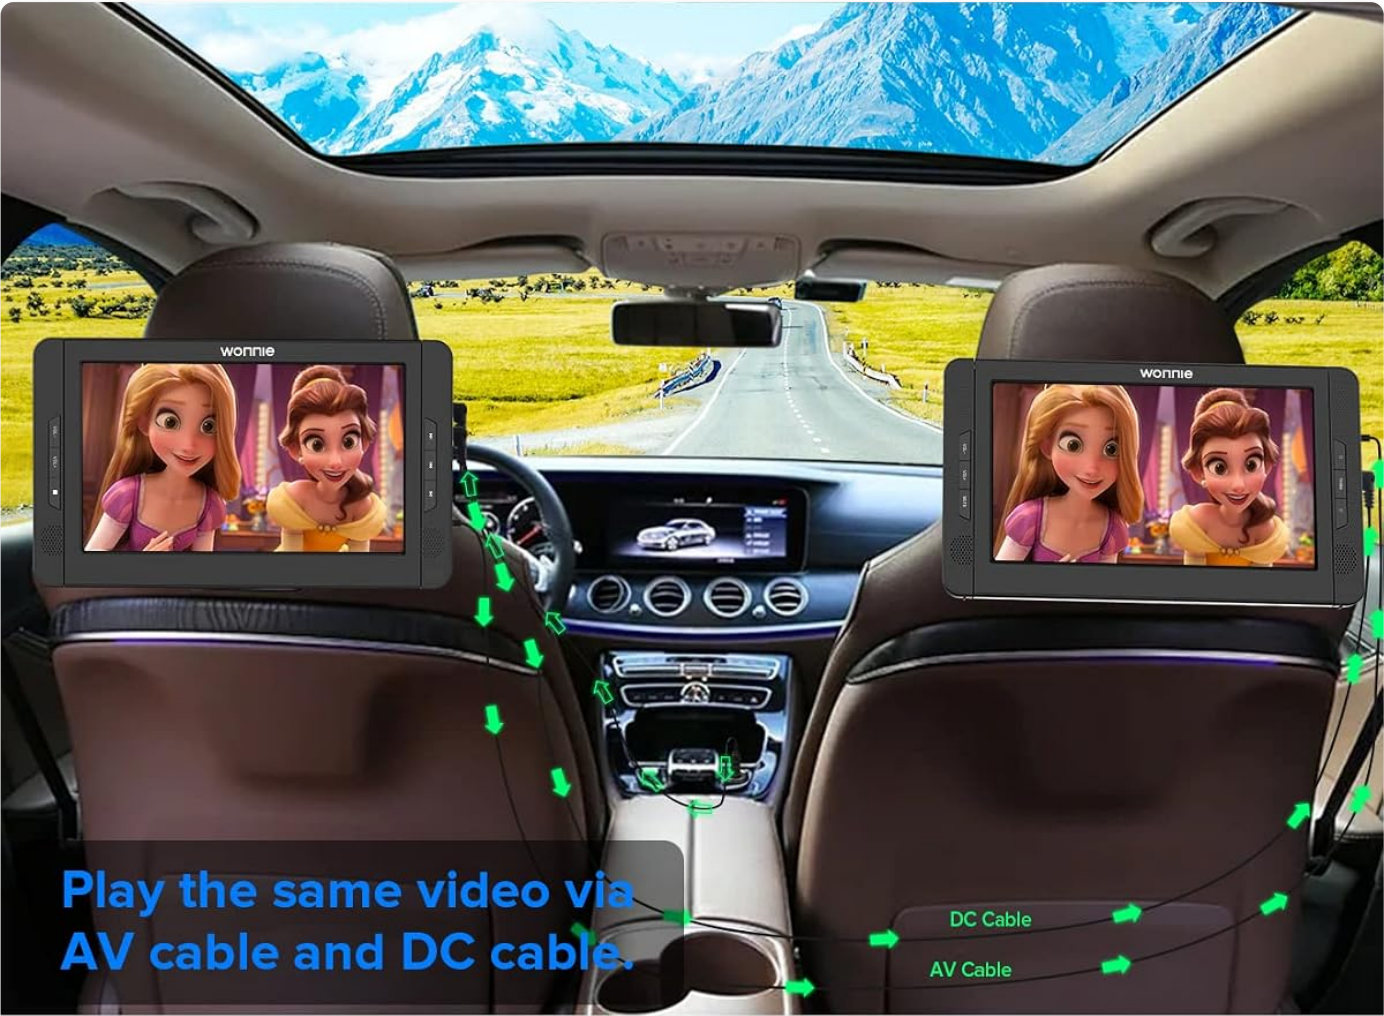

Share The Same Movie



Connect the main DVD player to the slave monitor using the AV and DC cables for synchronized playback in a vehicle.

Your browser does not support the video tag.

This video demonstrates the setup and connection of the WONNIE 10.5" Dual Screen Car DVD Player, highlighting its HD display and

features.

 
2. Powering the Devices

The main player has a built-in rechargeable battery providing up to 5 hours of playback. For extended use, especially with both units, connect to a power source. You have three options:

- **Rechargeable Battery:** Provides portable power for up to 5 hours (main player only) or 2.5-3 hours (both units).
- **Car Charger:** Use the included car charger to power the units and charge the battery while in your vehicle.
- **AC Adapter:** Use the included AC adapter for home use or when a standard power outlet is available.

3 POWER SYSTEMS

Enjoy Your Movies Anytime, Anywhere

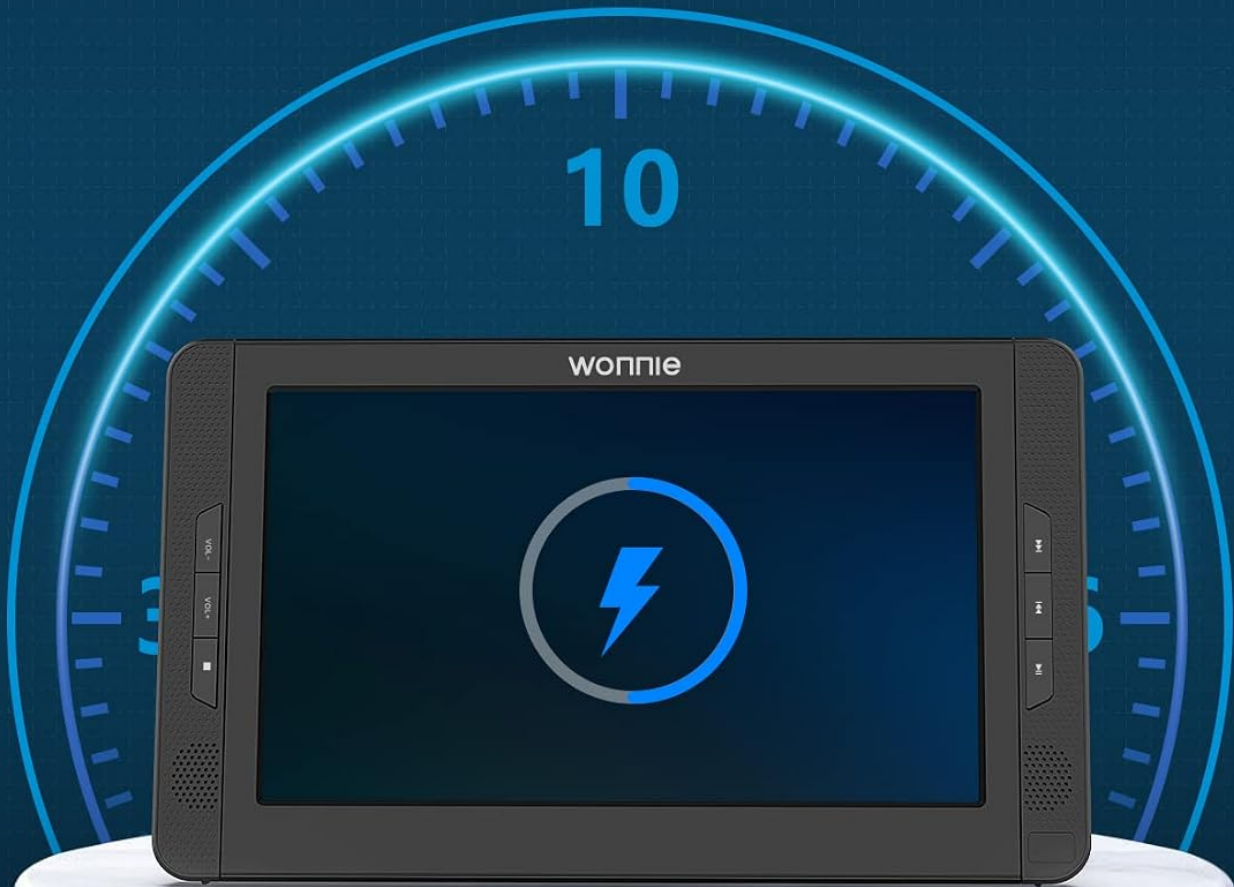

The main player can solely play up to 5 hours or two units for about 2.5-3 hours !



High-capacity
Rechargeable Battery



Car Charger



AC Adapter

The three versatile power options for your WONNIE DVD player: built-in battery, car charger, and AC adapter.

Operating Instructions

1. Media Playback

The WONNIE DVD player supports a wide range of media formats, making it versatile for various content types. Insert your DVD/CD disc into the main player or connect a USB drive/SD card to the designated ports.

- **DVD Formats:** DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, SVCD (Blu-Ray not supported).
- **Video Formats:** VOB, AVI, MPEG1, MPEG2, XVID.
- **Audio Formats:** MP3, WMA.
- **Image Formats:** JPG, JPEG.

MULTIPLE FORMATS SUPPORTED

Region Free: Play Various DVD/CD Discs and Media Files from Any Region



DVD Formats:

DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, SVCD (Blu-Ray not Support)



Video Formats:

VOB, AVI, MPEG1, MPEG2, XVID



Audio Formats:

MP3, WMA



Image Formats:

JPG, JPEG



The player supports various media formats for versatile entertainment options.

2. Connecting to External Displays (TV/Projector)

Enhance your viewing experience by connecting the main DVD player to a larger screen such as a TV or projector. Use the provided RCA cable for TV connection or an AV cable for projector connection.

ENJOY MOVIES WITH FAMILY

Sync Screen to TV with the 3.5mm RCA Cable (Included)



Enjoy movies with family by syncing the screen to a TV using the 3.5mm RCA Cable.

Your browser does not support the video tag.

This video demonstrates how to connect the WONNIE DVD player to a projector for a movie theater effect.

Your browser does not support the video tag.

This video illustrates how to sync playback from the WONNIE Car DVD Player to a large TV screen.

3. Adjusting Volume and Settings

Volume can be adjusted directly on the main player using the volume buttons or via the remote control. The slave monitor's volume can be adjusted independently using its dedicated buttons. Access other settings like picture (contrast, color) and system options through the menu buttons on the player or remote.

Built-in Dual Stereo Speakers

Hearing Every Moment Loud and Clear



 
The players feature built-in dual stereo speakers for clear audio. Volume can be adjusted on the unit or via remote.

4. Last Memory Function


The player features a "Last Memory" function, allowing it to resume playback from where you left off, even after powering off the device. This ensures a seamless viewing experience.

Last Memory Function

Start from where you left off

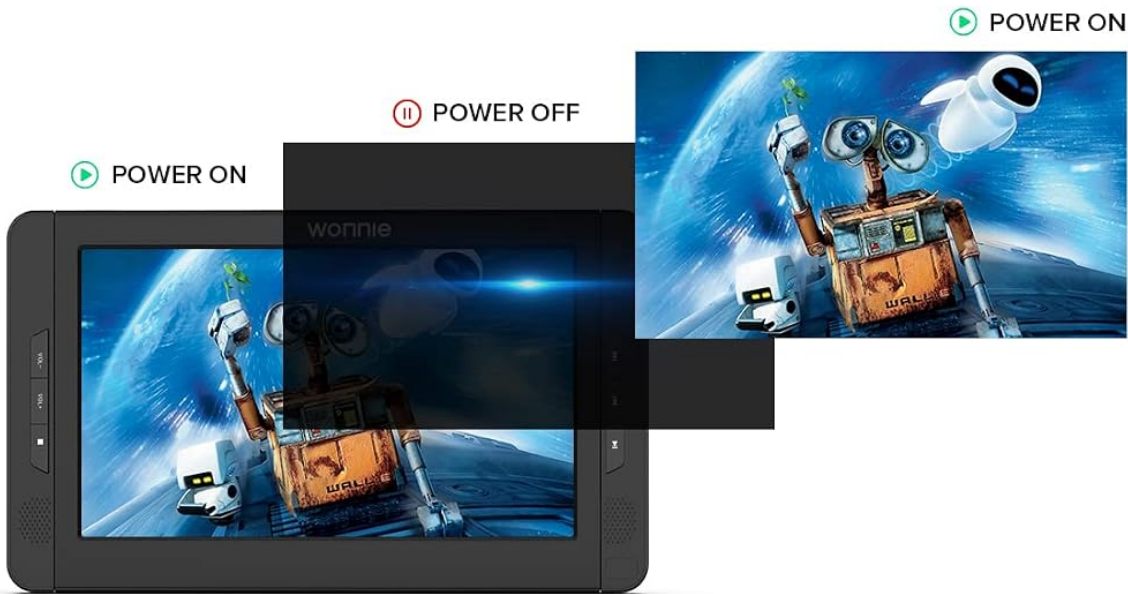

Function overview

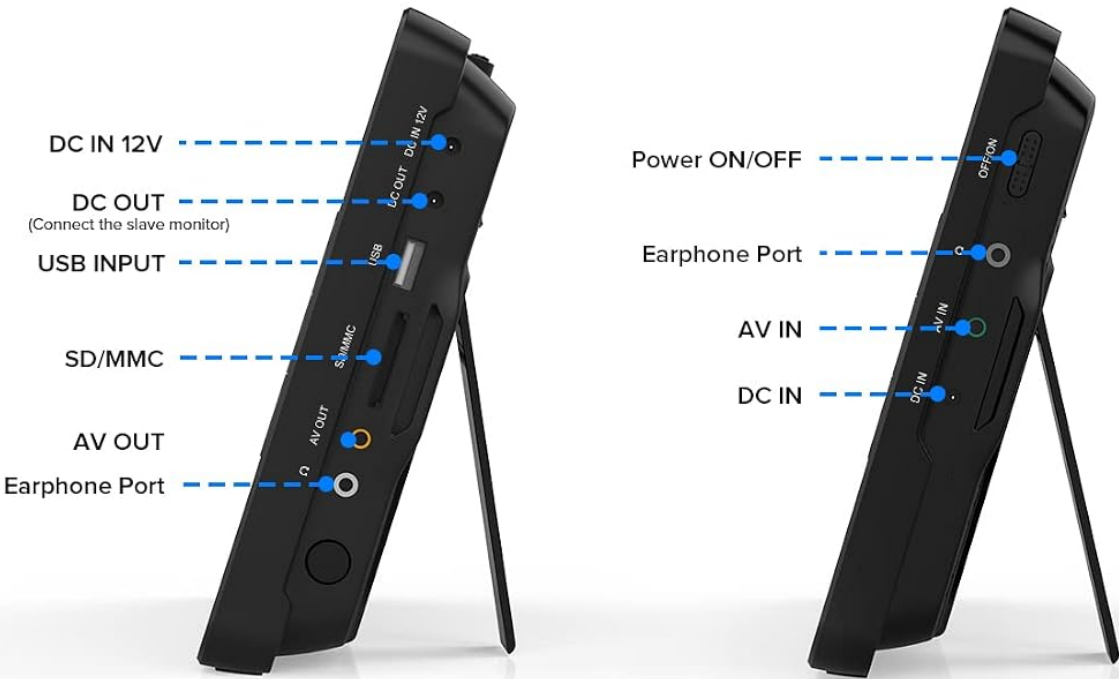 

The Last Memory Function allows the player to resume from the last watched point.

Maintenance


Proper maintenance ensures the longevity and optimal performance of your WONNIE Dual Portable DVD Player. Follow these guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the screens and exterior. Avoid abrasive cleaners or solvents. For the DVD lens, use a specialized DVD lens cleaner disc.
- **Storage:** When not in use, store the players and accessories in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for a long period, charge the battery to about 50% every few months.
- **Handling Discs:** Always handle discs by their edges. Keep them clean and free from scratches to prevent playback issues.

Troubleshooting

If you encounter issues with your WONNIE Dual Portable DVD Player, refer to the common problems and solutions below. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
No Power	Battery drained, power adapter/charger not connected properly, power switch off.	Ensure power adapter/car charger is securely connected. Check if the power switch is in the 'ON' position. Charge the battery.
Disc Not Reading	Disc is dirty, scratched, or incompatible format. Lens is dirty.	Clean the disc with a soft cloth. Try a different disc. Ensure the disc format is supported. Use a lens cleaner disc.
No Sound	Volume too low, headphones not connected properly, audio settings incorrect.	Increase volume using player buttons or remote. Check headphone connection. Verify audio settings in the menu.
Poor Picture Quality	Disc quality, screen settings (brightness, contrast), external connection issues.	Try a different disc. Adjust brightness and contrast settings. Check AV/RCA cable connections if using an external display.
Slave Monitor Not Displaying	DC cable or AV cable not connected correctly between main and slave units.	Ensure both the DC OUT and AV OUT ports on the main player are correctly connected to the DC IN and AV IN ports on the slave monitor.

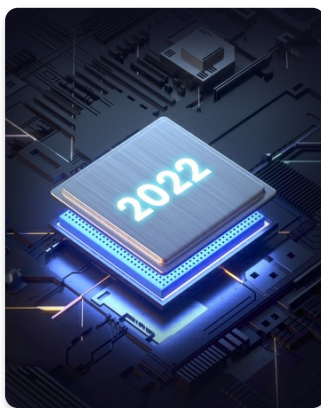

If issues persist, please refer to the troubleshooting section or contact customer support.

Specifications

Feature	Detail
Brand	WONNIE
Model Number	W-1020
Screen Size	10.5 Inches (Visible screen diagonal: 11" / 27 cm)
Display Type	LCD
Color	Black
Media Type Supported	DVD, DVD-R/+R, DVD-RW/DVD+RW, USB, SD, MMC, SVCD, VCD, CD, CD-R/+R, CD-RW/+RW, MP3/WMA/WAV, JPEG, MPEG2/AVI/DIVX
Battery	1 A battery required (included), Built-in 5 Hours Rechargeable Battery
Item Weight	5.61 pounds
Package Dimensions	13.62 x 12.68 x 5.24 inches

Warranty and Support

WONNIE is committed to providing high-quality products and excellent customer service. If you encounter any issues or have questions regarding your Dual Portable DVD Player, please do not hesitate to contact our professional support team.

- **Customer Service:** WONNIE offers professional teams dedicated to helping you solve any problems within 24 hours.
- **Product Support:** Our team can assist with technical queries, operational guidance, and troubleshooting.

- **Warranty:** While specific warranty terms may vary, WONNIE is known for its responsive support, including replacements and refunds for product issues, as evidenced by customer feedback. Please retain your proof of purchase for any warranty claims.

For direct support, please visit the official WONNIE website or contact us through the platform where you purchased the product.

© 2024 WONNIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08K8S99W7>

More documents and user manuals: <https://manuals.plus/>