

Winia WOR07R3ZEC

Winia WOR07R3ZEC Retro Microwave Instruction Manual

Model: WOR07R3ZEC | Capacity: 0.7 Cu. Ft.

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the microwave oven to prevent fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- **Grounding Instructions:** This appliance must be grounded. Connect only to a properly grounded outlet.
- **Supervision:** Close supervision is necessary when the appliance is used by or near children.
- **Ventilation:** Ensure adequate ventilation around the microwave. Do not block any ventilation openings.
- **No Metal:** Do not place metal containers, foil, or utensils in the microwave oven.
- **Flammable Materials:** Do not store or use flammable materials near the oven.
- **Liquids:** Liquids such as water, coffee, or tea can overheat beyond the boiling point without appearing to boil. Exercise extreme caution when removing containers.
- **Eggs:** Do not heat whole eggs with shells or hard-boiled eggs in the microwave oven as they may explode.
- **Cleaning:** Clean the oven regularly and remove any food deposits. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- **Damage:** Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.

2. SETUP AND INSTALLATION

Follow these steps to properly set up your Winia Retro Microwave.

2.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not install if damaged.

2.2 Placement

Place the microwave on a flat, stable surface such as a countertop. Ensure there is sufficient space for ventilation:

- Minimum 3 inches (7.5 cm) of clearance on both sides.
- Minimum 12 inches (30 cm) of clearance above.
- Minimum 3 inches (7.5 cm) of clearance at the rear.

Do not place the microwave near heat sources or in a damp environment.



Image: The microwave with its dimensions labeled: 17.6 inches wide, 12.7 inches deep, and 10.6 inches high. This illustrates the compact size suitable for countertop placement.

2.3 Turntable Assembly

Place the turntable ring inside the oven cavity. Then, place the glass turntable plate securely on top of the turntable ring. Ensure it sits correctly in the center support.



Image: An interior view of the microwave oven, showing the glass turntable plate resting on the roller ring inside the cavity. This demonstrates the correct placement of the turntable components.

2.4 Power Connection

Plug the power cord into a standard 3-prong, 120V AC, 60Hz grounded electrical outlet.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various cooking functions.



Image: A close-up of the microwave's control panel, highlighting the digital display, the central rotary dial, and the 'Auto Cook', 'Defrost', 'Popcorn', 'Power Level', 'Start +30sec', and 'Stop Clear' buttons.

3.1 Control Panel Overview

- **Digital Display:** Shows cooking time, power level, and auto-cook selections.
- **Rotary Dial:** Used to set cooking time or select auto-cook options.
- **Auto Cook Button:** Selects pre-programmed cooking options.
- **Defrost Button:** Activates defrost by weight or time.
- **Popcorn Button:** Dedicated button for popcorn.
- **Power Level Button:** Adjusts microwave power.
- **Start +30sec Button:** Starts cooking or adds 30 seconds to current cooking time.
- **Stop Clear Button:** Stops cooking or clears settings.

3.2 Setting Cook Time

1. Place food in the microwave.
2. Turn the **Rotary Dial** to set the desired cooking time.
3. Press the **Start +30sec** button to begin cooking.

3.3 Quick Start (30 Seconds)

For quick heating at full power, simply press the **Start +30sec** button. Each press adds 30 seconds to the cooking time.

3.4 Adjusting Power Levels

The microwave has 5 power levels. To adjust:

1. Press the **Power Level** button.
2. Turn the **Rotary Dial** to select a power level from 1 to 5 (P-1 to P-5).

3. Set the cooking time using the **Rotary Dial**.
4. Press **Start +30sec** to begin.

3.5 Auto Cook Programs

The microwave features 5 auto-cook programs for common foods:

- **Beverage:** For heating drinks.
- **Baked Potato:** For cooking potatoes.
- **Popcorn:** For popping popcorn.
- **Fresh Vegetable:** For cooking fresh vegetables.
- **Frozen Vegetable:** For cooking frozen vegetables.

To use an auto-cook program:

1. Press the **Auto Cook** button repeatedly to cycle through the options.
2. Press **Start +30sec** to confirm and begin cooking.

3.6 Defrost Function (2-Way)

The defrost function allows thawing by weight or time.

1. Press the **Defrost** button.
2. Turn the **Rotary Dial** to select either defrost by weight (dEF1) or defrost by time (dEF2).
3. Adjust the weight or time using the **Rotary Dial**.
4. Press **Start +30sec** to begin defrosting.

3.7 Zero On Energy Saving Function

This microwave features a 'Zero On' function. When idle for a period, the microwave automatically enters a sleep mode to conserve energy. It will reactivate when the door is opened or a button is pressed.

3.8 Child Lock Safety Function

To activate the child lock, press and hold the 'Stop Clear' button for 3 seconds. The display will show 'LOCK'. To deactivate, press and hold the 'Stop Clear' button again for 3 seconds.

4. CARE AND MAINTENANCE

Regular cleaning and proper care will ensure the longevity and optimal performance of your microwave oven.

4.1 Cleaning the Interior

- Wipe the interior cavity with a damp cloth after each use.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for 2-3 minutes. The steam will loosen the residue, making it easier to wipe clean.
- Do not use abrasive cleaners or harsh chemicals.

4.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid getting water into the ventilation openings.

4.3 Turntable Care

- The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher.
- Ensure the turntable components are completely dry before placing them back in the oven.

5. TROUBLESHOOTING GUIDE

If you encounter issues with your microwave, consult this guide before contacting service.

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated.	Ensure cord is securely plugged in; Close door firmly; Check household fuse/circuit breaker; Deactivate child lock (press and hold 'Stop Clear' for 3 seconds).
Food not heating.	Door not closed properly; Incorrect cooking time/power level set; Metal objects inside.	Close door firmly; Adjust cooking time and power level; Remove any metal items.
Turntable not rotating.	Turntable not properly seated; Obstruction under turntable; Motor malfunction.	Ensure turntable and roller ring are correctly positioned; Remove any obstructions; If problem persists, contact service.
Unusual noises during operation.	Turntable components misaligned; Food container touching oven walls.	Re-seat turntable components; Use smaller, microwave-safe containers.
Display shows 'LOCK'.	Child lock is active.	Press and hold 'Stop Clear' button for 3 seconds to deactivate.

6. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Winia
Model Name	WOR07R3ZEC
Capacity	0.7 Cubic Feet
Wattage	700 watts
Product Dimensions (D x W x H)	12.7"D x 17.6"W x 10.6"H
Color	Cream
Material	Metal
Number of Power Levels	5
Number of Auto Cook Programs	5
Special Features	Concave Reflex System, Auto Cook, 2-Way Defrost, Quick Start, Add Time, Zero On

Feature	Specification
Installation Type	Countertop
UPC	084157200865

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This Winia microwave oven is covered by a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

7.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your product, please contact Winia customer support. Refer to the contact information provided in your product packaging or visit the official Winia website for details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question