

VINABTY MXQ T10

VINABTY MXQ T10 Remote Control Instruction Manual

Model: MXQ T10

INTRODUCTION

This manual provides instructions for the VINABTY MXQ T10 Replacement Remote Control. This remote is designed as a direct replacement for your original remote control for compatible Android Set Top Smart TV Boxes.

Compatible Models: MXQ Pro, T10, T10+


No programming or setup is required for this remote control. Simply insert the batteries, and it is ready for use.

SETUP

1. Battery Installation

The VINABTY MXQ T10 remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

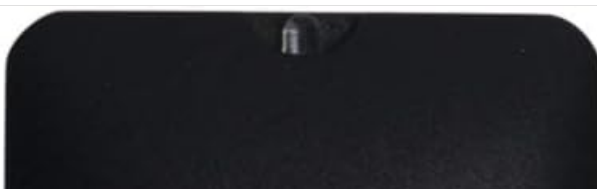

MXQ T10 T10+
MXQ Pro

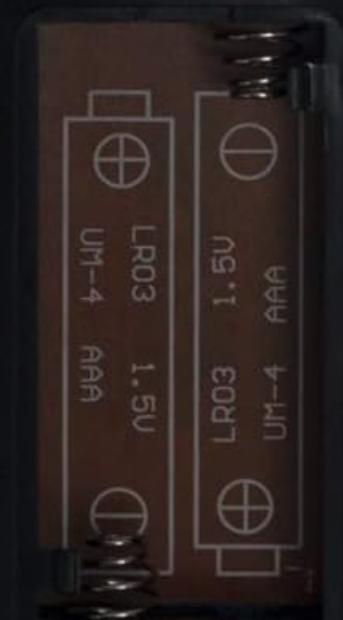




Image: Back view of the remote control, illustrating the battery compartment and the required AAA battery type.

2. Initial Use

Once batteries are installed, the remote is ready to use. No pairing or programming is necessary. Point the remote directly at your Android Set Top Smart TV Box.

OPERATING INSTRUCTIONS

The VINABTY MXQ T10 remote control features a standard layout for easy navigation and control of your compatible Android Set Top Smart TV Box. Below are common button functions:





Image: Front view of the remote control, displaying the full button layout.

- **Power Button (●):** Turns the device on or off.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select items.
- **Volume Buttons (VOL+, VOL-):** Adjusts the volume level.
- **Mute Button:** Mutes or unmutes the audio.
- **Home Button:** Returns to the main home screen of your device.
- **Return Button:** Goes back to the previous screen or menu.
- **Menu Button:** Accesses context-sensitive menus.
- **Number Pad (0-9):** For direct input of channels or other numerical data.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Dedicated App Buttons (KODI, APPS, VIDEO, WEB):** Quick access to specific applications or functions.

Ensure there is a clear line of sight between the remote control and your device for optimal performance. The maximum operating range is approximately 10 meters (33 feet).

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

If you encounter issues with your VINABTY MXQ T10 remote control, please refer to the following common solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.
 - Ensure there are no obstructions between the remote control and the device's infrared receiver.
 - Make sure you are within the operating range (approximately 10 meters).
- **Some buttons are not working:**
 - This could indicate low battery power. Try replacing the batteries.
 - Ensure the remote is clean and there is no debris obstructing the buttons.
- **Remote does not control my device:**
 - Verify that your device is one of the compatible models: MXQ Pro, T10, T10+. This remote is specifically designed for these models and may not work with others.
 - Ensure your device's infrared receiver is functioning correctly.

If the problem persists after trying these steps, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Number	MXQ T10
Compatible Devices	Android Set Top Smart TV Box (MXQ Pro, T10, T10+)
Controller Type	Infrared Remote Control
Maximum Range	10 Meters (33 feet)
Battery Type	2 x AAA (LR03 1.5V)
Color	Black

WARRANTY AND SUPPORT

Warranty Information

This VINABTY remote control comes with a 3-month warranty from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

If you experience any issues with your product or require further assistance, please do not hesitate to contact our customer service team. We are committed to providing a satisfactory response within 24 hours.

For support, please refer to the contact information provided with your purchase or on the VINABTY official website.