

Hasbro C2124

Hasbro Guess Who? (Vem där?) Instruction Manual

Model: C2124

INTRODUCTION

Welcome to the classic Guess Who? game by Hasbro. This manual provides comprehensive instructions for setting up, playing, maintaining, and troubleshooting your game. The objective of Guess Who? is to be the first player to guess the mystery character chosen by your opponent.

PACKAGE CONTENTS

- 2 Game Boards (Red and Blue)
- 48 Character Cards (2 sets of 24)
- 24 Mystery Cards
- Instructions

SETUP

1. **Unpack Components:** Carefully remove all game pieces from the box.
2. **Assemble Boards:** Each player selects a game board (one red, one blue).
3. **Insert Character Cards:** For each board, insert one set of 24 character cards into the frames. Ensure all character faces are visible and upright.
4. **Prepare Mystery Cards:** Shuffle the 24 mystery cards thoroughly and place them face down in a pile within reach of both players.
5. **Select Mystery Character:** Each player draws one mystery card from the pile. Place this card in the designated slot at the front of your game board, ensuring your opponent cannot see it. This is your opponent's mystery character.



Image: The Guess Who? game box and two assembled game boards, ready for play. Each board displays multiple character cards.

OPERATING (HOW TO PLAY)

The game is played with two players. The goal is to deduce your opponent's mystery character by asking strategic yes/no questions.

1. **Starting the Game:** Decide who goes first. The youngest player typically starts.
2. **Asking Questions:** On your turn, ask your opponent a single yes/no question about their mystery character. Examples include:
 - "Does your character have a hat?"
 - "Is your character wearing glasses?"
 - "Is your character a woman?"
 - "Does your character have red hair?"
3. **Eliminating Characters:** Based on your opponent's answer, flip down all character cards on your board that do not match the description. For example, if the answer is "No, my character does not have a hat," you would

flip down all characters on your board that *do* have a hat.

4. **Opponent's Turn:** After you have asked your question and eliminated characters, it is your opponent's turn to ask a question.
5. **Making a Guess:** When you believe you know your opponent's mystery character, you can make a guess instead of asking a question. You can only make one guess per game. If your guess is correct, you win the game! If your guess is incorrect, you lose the game. It is generally advisable to only guess when you are confident.
6. **Winning the Game:** The first player to correctly identify their opponent's mystery character wins.



Image: An adult and child engaged in a game of Guess Who?, demonstrating the interactive gameplay.



Image: A child raising their arms in excitement, having successfully won a game of Guess Who?.

MAINTENANCE

Proper care will ensure the longevity of your Guess Who? game.

- **Storage:** Store all game components in the original box when not in use. Keep the box in a cool, dry place away from direct sunlight.
- **Cleaning:** To clean the game boards and plastic components, use a dry, soft cloth. Avoid using abrasive cleaners or harsh chemicals, as these may damage the surfaces or printed images.
- **Card Care:** Handle character and mystery cards carefully to prevent bending or tearing.

TROUBLESHOOTING

If you encounter any issues with your Guess Who? game, refer to the following common solutions.

- **Missing Pieces:** If any components are missing upon opening the box, please contact Hasbro customer

support for assistance.

- **Difficulty Understanding Rules:** Re-read the "Operating (How to Play)" section carefully. For visual learners, searching for official gameplay videos online may also be helpful.
- **Character Cards Not Fitting:** Ensure you are inserting the correct size character cards into the frames. Gently push them into place without forcing.

SPECIFICATIONS

Feature	Detail
Model Number	C2124
ASIN	B08KC1YT2N
Brand	Hasbro
Publisher	Brädspel.se
Release Date	June 12, 2020
Original Product Language	Swedish
Item Weight	670 g
Dimensions (Box)	30.8 x 4.4 x 26.9 cm

CUSTOMER SUPPORT

For further assistance, questions about missing parts, or other inquiries, please refer to the official Hasbro customer support channels available in your region. Specific warranty information is typically provided with the product packaging.

© 2024 Hasbro. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question