

[Manuals.plus](#) /

› [Superer](#) /

› Superer Power Adapter Instruction Manual for Nordictrack Elliptical Exercisers (Model DCT12W050200US-B0)

Superer DCT12W050200US-B0

Superer Power Adapter Instruction Manual

Model: DCT12W050200US-B0

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your Superer Power Adapter, Model DCT12W050200US-B0. This adapter is designed to provide power to various Nordictrack elliptical exercisers, including models such as A.C.T. Pro, Audiostrider 800, 600, 900, GX4.0, GX2.0, U300, R400, E5.5, E5.7, T7SI, E7SV, CX920, CX925, CX938, CX1000, ASR 630, and 700.

Please read this manual thoroughly before use and retain it for future reference.

2. WHAT'S IN THE BOX

Your Superer Power Adapter package includes the following components:

- 1 x Superer Power Adapter (Model DCT12W050200US-B0)
- 2 x USB Cable (Note: While listed, these USB cables are typically for other devices and may not be directly used with the elliptical adapter.)

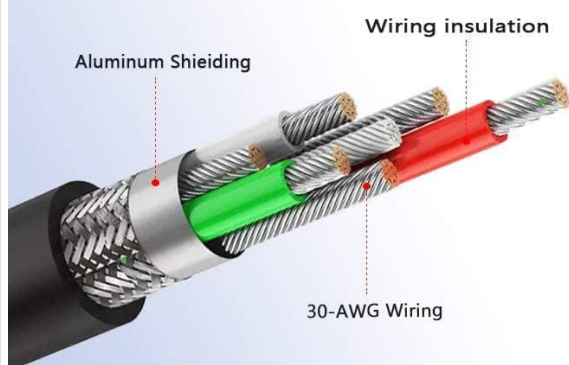


Image 1: Superer Power Adapter (Model DCT12W050200US-B0). This image displays the black power adapter unit with a standard US two-prong plug and a coiled power cord ending in a barrel connector.

3. SETUP INSTRUCTIONS

1. **Verify Compatibility:** Before connecting, ensure your Nordictrack elliptical exerciser requires a power adapter with the specifications of Model DCT12W050200US-B0 (Output: 5V, 2A, Wattage: 10W, Connector Type: Barrel Connector). Check your elliptical's original adapter or manual for voltage and amperage requirements.
2. **Locate Power Port:** Identify the power input port on your Nordictrack elliptical exerciser. This is typically located near the base or console of the machine.
3. **Connect Adapter to Elliptical:** Insert the barrel connector end of the Superer Power Adapter cord firmly into the elliptical's power input port.
4. **Connect Adapter to Power Outlet:** Plug the two-prong end of the Superer Power Adapter into a standard wall power outlet (100-240V AC).
5. **Power On:** Once connected, your elliptical exerciser should receive power. Turn on your elliptical using its power button, if applicable.

About our Customer Service



Extra Long Power Cord

Total 5Ft Power Cable provides more convenience for your life

Portable Design

The small size makes it easier to Carry and use whether you are Working / Traveling / Learning



Image 2: A clear view of the Superer Power Adapter, showing the main unit and the power cord with its barrel connector, ready for connection.

4. OPERATING INSTRUCTIONS

The Superer Power Adapter is designed for continuous operation to power your compatible Nordictrack elliptical exerciser. No specific operational steps are required for the adapter itself beyond proper connection.

- Ensure the adapter is securely plugged into both the elliptical and the wall outlet.
- If your elliptical has a power switch, turn it on to begin operation.
- The adapter provides a stable power supply for your exercise equipment.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Superer Power Adapter, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and the elliptical before cleaning. Use a soft, dry cloth to wipe the adapter and cord. Do not use liquid cleaners or abrasive materials.

- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cord to prevent damage.
- **Inspection:** Periodically inspect the power cord and adapter housing for any signs of damage, such as cuts, fraying, or cracks. If damage is observed, discontinue use immediately and replace the adapter.
- **Ventilation:** Ensure the adapter is placed in an area with adequate ventilation to prevent overheating during prolonged use.

6. TROUBLESHOOTING

If you encounter issues with your Superer Power Adapter, refer to the following troubleshooting steps:

Problem	Possible Cause	Solution
Elliptical does not power on.	Adapter not properly connected. Wall outlet is not functioning. Elliptical's power switch is off. Incompatible voltage/amperage (e.g., elliptical requires 6V, adapter provides 5V). Damaged adapter or cord.	Ensure both ends of the adapter are securely plugged in. Test the wall outlet with another device. Turn on the elliptical's power switch. Verify the elliptical's power requirements against the adapter's specifications (Model DCT12W050200US-B0 provides 5V/2A output). If your elliptical requires a different voltage (e.g., 6V), this adapter may not be suitable. Inspect the adapter and cord for damage. If damaged, replace the adapter.
Adapter feels excessively hot during use.	Normal operation (slight warmth is expected). Poor ventilation. Overload or internal fault.	A slight warmth is normal. Ensure the adapter is in a well-ventilated area, not covered. If excessively hot, disconnect immediately and contact support.



Over temperature protection



Overcurrent protection



Overvoltage protection



Short circuit protection



Overload protection



Under voltage protection



Image 3: This image illustrates the built-in safety features of the Superer Power Adapter, including over-temperature, overcurrent, overvoltage, short circuit, overload, and undervoltage protection.

7. SPECIFICATIONS

Feature	Detail
Brand	Superer
Model Number	DCT12W050200US-B0
Product Dimensions	1.78 x 1.42 x 0.4 inches
Item Weight	3.52 ounces
Input Voltage	100-240 Volts AC
Output Voltage	5 Volts DC

Feature	Detail
Output Amperage	2 Amps
Wattage	10 watts
Connector Type	Barrel Connector
Special Feature	Short Circuit Protection, Over Temperature Protection, Overcurrent Protection, Overvoltage Protection, Overload Protection, Under Voltage Protection
Color	Black
Included Components	1 x Power Adapter, 2 x USB Cable

8. WARRANTY AND SUPPORT

Superer products are designed for reliability and performance. This power adapter comes with the following:

- **30-Day Money Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **1-Year Warranty:** The Superer Power Adapter is covered by a 1-year warranty against manufacturing defects. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes.

For technical support, warranty claims, or any questions regarding your Superer product, please visit the official Superer store on Amazon or contact their customer service directly. You can find more information at the [Superer Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08KCP15QT>

More documents and user manuals: <https://manuals.plus/>