

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cuisinart](#) /

› [Cuisinart GK-1 Digital Gooseneck Kettle Instruction Manual](#)

Cuisinart GK-1

Cuisinart GK-1 Digital Gooseneck Kettle Instruction Manual

Model: GK-1

INTRODUCTION

Experience the full, flawless flavor of pour-over tea or coffee with the Cuisinart Digital Gooseneck Kettle. Custom-designed to perfect the craft of pour-over brewing, this ingenious kettle features a precision pour spout that ensures a slow, steady pour for optimal flavor extraction. The touchpad base features a center plate for quick heat-up and a front panel with digital temperature display and controls. Adjustable temperature control lets you select from 140°F to 212°F. Its 1.0-liter capacity holds enough water for four cups of authentic pour-over coffee or tea.



Experience the full, flawless flavor of pour-over tea or coffee with the Cuisinart® Digital Gooseneck Kettle. Custom-designed to perfect the craft of pour-over brewing.

Figure 1: Cuisinart GK-1 Digital Gooseneck Kettle in black with its heating base on a kitchen counter.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

COMPONENTS

The Cuisinart GK-1 Digital Gooseneck Kettle includes the following main components:

- Kettle Body with Gooseneck Spout
- Power Base with Digital Controls



Figure 2: The Cuisinart GK-1 Digital Gooseneck Kettle and its power base.

SETUP

Unpacking

Carefully remove all packaging materials and labels from your new Cuisinart Digital Gooseneck Kettle. Retain the instruction manual for future reference.

Initial Cleaning

Before first use, fill the kettle with water to the MAX fill line. Bring the water to a boil (212°F), then discard the water. Repeat this process two to three times to remove any manufacturing residues. Wipe the exterior of the kettle and the power base with a damp cloth.

Placement

Place the power base on a flat, stable, heat-resistant surface. Ensure the power cord is not dangling or in a position where it can be pulled or tripped over.

OPERATING INSTRUCTIONS

Filling the Kettle

Open the kettle lid and fill with fresh, cold water. Do not fill below the MIN mark or above the MAX mark (1.0 liter). Overfilling may cause boiling water to spill out.

Temperature Selection

Place the kettle securely on its power base. The digital display on the base will show the current water temperature. Use the '+' and '-' buttons to adjust the desired temperature between 140°F and 212°F. The kettle is designed to heat water to precise temperatures for various beverages.

			
CRAFT POUR-OVER 1.0-Liter capacity heats enough water for up to 4 cups of authentic pour-over coffee or tea. The precision pour spout ensures a slow, steady pour for optimal flavor extraction.	GOOSENECK DESIGN Gooseneck spout designed for precise pour control, gives complete control over water distribution leading to better extraction and better tasting coffee and tea.	EASY TO USE Touchpad control panel features real-time temperature display and easily adjusts from 140°F to 212°F. 30-minute keep warm option maintains selected temperature while brewing.	SLEEK DESIGN Stainless-steel kettle body and lid with matte black finish. The base features a center heat-up and a front panel with digital display and touchpad controls.

Figure 3: Features of the Cuisinart GK-1 Digital Gooseneck Kettle, including the touchpad control panel.

Heating Water

Once the desired temperature is set, press the power button to begin heating. The digital display will show the water temperature increasing. The kettle will automatically shut off once the target temperature is reached.

Keep Warm Function

The kettle features a 30-minute 'Keep Warm' option. After the water reaches the set temperature, you can activate this function to maintain the temperature for up to 30 minutes.

Your browser does not support the video tag.

Video 1: This video demonstrates the Cuisinart Digital Gooseneck Kettle's features, including temperature selection and the heating process.

Pouring

The precision gooseneck spout is designed for optimal pour control, making it ideal for pour-over coffee and tea. Lift the kettle from the base and pour slowly and steadily.



Figure 4: Demonstrating precise pouring with the gooseneck spout.

MAINTENANCE AND CLEANING

General Cleaning

Always unplug the kettle from the power outlet and allow it to cool completely before cleaning. The kettle body should be hand washed. Do not immerse the power base in water or any other liquid.

Descaling

Over time, mineral deposits (limescale) may build up inside the kettle, which can affect its performance. To descale, fill the kettle with a solution of equal parts white vinegar and water. Let it sit for at least 30 minutes, or boil the solution and let it sit for 15-20 minutes. Discard the solution and rinse the kettle thoroughly with fresh water. Repeat if necessary.

TROUBLESHOOTING

If you encounter issues with your Cuisinart Digital Gooseneck Kettle, refer to the following common problems and solutions:

- **Kettle not turning on:** Ensure the power base is securely plugged into a working outlet and the kettle is properly seated on the base.
- **Water not heating:** Check that the desired temperature is set and the power button has been pressed. Ensure there is sufficient water in the kettle (above MIN line).
- **"Over-temperature" alert:** If the power control flashes with an "over-temperature" warning, this is a safety feature. Remove the kettle from the base, allow it to cool, and ensure no water remains in the kettle. Adding a small amount of cold water can help reset the sensor.
- **Slow heating:** Limescale buildup can reduce heating efficiency. Refer to the "Descaling" section for cleaning instructions.

SPECIFICATIONS

Feature	Detail
Brand	Cuisinart
Model Name	Digital Gooseneck Kettle
Item Model Number	GK-1
Capacity	1 Liter
Material	Stainless Steel
Color	Black
Product Dimensions	11.81"L x 5.55"W x 6.93"H
Item Weight	16 ounces (1 pound)
Wattage	1200-Watt
Special Feature	Manual Temperature Control, Gooseneck Spout



Figure 5: Product dimensions of the Cuisinart GK-1 Digital Gooseneck Kettle.

WARRANTY AND SUPPORT

This product comes with a **LIMITED 3-YEAR WARRANTY**. For detailed warranty information, troubleshooting steps, or any questions regarding your Cuisinart GK-1 Digital Gooseneck Kettle, please refer to the full user manual provided with your product or visit the official Cuisinart website for customer support.

This product is BPA free.