

groov e GVWC06BK

groov e Atlas Radio Alarm Clock with Wireless Charger GVWC06BK User Manual

Model: GVWC06BK

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your groov e Atlas Radio Alarm Clock with Wireless Charger. Please read this manual thoroughly before using the device to ensure proper function and to maximize your user experience. Keep this manual for future reference.

PACKAGE CONTENTS

Verify that all items are present in the package:

- groov e Atlas Radio Alarm Clock
- Power Adapter
- User Manual

PRODUCT FEATURES

- **Wireless Charging (5W):** Conveniently charge compatible smartphones by placing them on the top surface.
- **FM Radio:** Tune into your favorite FM stations.
- **LED Display:** Clear digital time display.
- **Mains Powered:** Reliable power supply for continuous operation.
- **USB Charging Station:** Additional USB port for charging other devices.
- **Dual Alarm:** Set two independent alarms for different wake-up times.
- **Display Dimmer:** Adjust the brightness of the LED display.

SETUP

1. **Connect Power:** Insert the power adapter into the 'DC IN' port on the back of the alarm clock, then plug the adapter into a wall outlet. The display will light up.
2. **Set Time:**
 - Press and hold the 'TIME SET' button located on the back of the unit.
 - Use the 'TUN-' or 'TUN+' buttons on the top panel to adjust the hour.
 - Press 'TIME SET' again to confirm the hour and move to minutes.
 - Use 'TUN-' or 'TUN+' to adjust the minutes.
 - Press 'TIME SET' once more to confirm and exit time setting.
 - To switch between 12-hour and 24-hour format, press the '12/24H' button on the back.



Image: Rear view of the Groove Atlas alarm clock, highlighting the DC IN power input and the USB charging port. The '12/24H TIME SET' and 'SLEEP' buttons are also visible.

OPERATING INSTRUCTIONS

Setting Alarms (ALM1 / ALM2)

1. Press the 'ALM1' or 'ALM2' button to select the alarm you wish to set. The alarm icon will flash on the display.
2. Use the 'TUN-' or 'TUN+' buttons to adjust the alarm hour.
3. Press the 'ALM1' or 'ALM2' button again to confirm the hour and move to minutes.
4. Use 'TUN-' or 'TUN+' to adjust the alarm minutes.
5. Press the 'ALM1' or 'ALM2' button a third time to confirm the alarm time. The alarm icon will remain lit, indicating the alarm is active.
6. To deactivate an alarm, press the corresponding 'ALM1' or 'ALM2' button until the alarm icon disappears from the display.

FM Radio Operation

1. **Turn On/Off:** Press the 'ON/OFF' button to turn the radio on or off.

2. **Auto Scan:** Press the 'SCAN' button to automatically scan and save available FM stations.
3. **Manual Tuning:** Use the 'TUN-' or 'TUN+' buttons to manually adjust the frequency. Press and hold for faster tuning.
4. **Preset Stations:** Use 'MEM-' or 'MEM+' to cycle through saved preset stations.
5. **Adjust Volume:** Use the 'VOL-' or 'VOL+' buttons to control the radio volume.



Image: Top view of the groov e Atlas alarm clock, illustrating the layout of the control buttons for volume, tuning, memory, scan, and power.

Wireless Charging

1. Ensure your smartphone is compatible with 5W Qi wireless charging.
2. Place your compatible smartphone centrally on the wireless charging pad located on the top surface of the alarm clock.
3. The phone's display should indicate that charging has begun. If not, adjust the phone's position.



Image: A smartphone placed on the grooved Atlas alarm clock's top surface, showing the charging indicator on the phone's screen, confirming wireless charging is active.

USB Charging

1. Connect a USB charging cable (not included) to the USB port on the back of the alarm clock.
2. Connect the other end of the cable to your device.
3. Your device will begin charging.

Display Dimmer

Press the 'SNOOZE/DIMMER' button to cycle through different brightness levels for the LED display. This allows you to adjust the display to your preferred visibility, especially in dark environments.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the alarm clock. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, unplug the device and store it in a cool, dry place.
- **Safety:** Do not expose the device to water, high humidity, or extreme temperatures. Avoid dropping or subjecting the device to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely plugged into the device and a working wall outlet. Try a different outlet.

Problem	Possible Cause	Solution
Wireless charging not working.	Phone not Qi-compatible or not positioned correctly.	Verify your phone supports Qi wireless charging. Reposition the phone centrally on the charging pad. Remove any thick phone cases.
Alarm does not sound.	Alarm not activated or volume too low.	Check if the alarm icon is lit on the display. Increase the alarm volume using the 'VOL+' button.
Radio reception is poor.	Weak signal or antenna position.	Extend and adjust the position of the FM antenna wire on the back of the unit for better reception.

SPECIFICATIONS

- **Model Number:** GVWC06BK
- **Brand:** groov e
- **Color:** Black
- **Display Type:** Digital LED
- **Power Source:** Mains Powered (AC Adapter included)
- **Wireless Charging Output:** 5W
- **USB Charging Output:** 5V/1A
- **Alarm Features:** Dual Alarm, Snooze
- **Radio:** FM
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Shape:** Rectangular
- **Mounting Type:** Table Mount
- **Movement Type:** Quartz
- **Batteries:** Not included (requires 1 battery for backup, type not specified in data)

WARRANTY AND SUPPORT

Your groov e Atlas Radio Alarm Clock GVWC06BK comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact groov e customer service through their official website or the contact information provided on your warranty card.

Please retain your proof of purchase for any warranty-related inquiries.