

DALY 8S 24V 200A

DALY BMS 8S 24V 200A LiFePO4 Battery Protection Module Instruction Manual

1. PRODUCT OVERVIEW

The DALY BMS 8S 24V 200A LiFePO4 Battery Protection Module is designed to manage and protect 8-series LiFePO4 battery packs. It ensures safe and efficient operation by monitoring various parameters such as voltage, current, and temperature, providing essential protection functions.





Figure 1: Front view of the DALY BMS 8S 24V 200A module.



Figure 2: Angled view of the DALY BMS 8S 24V 200A module.



Figure 3: DALY BMS 8S 24V 200A module showing connection ports.

2. SPECIFICATIONS

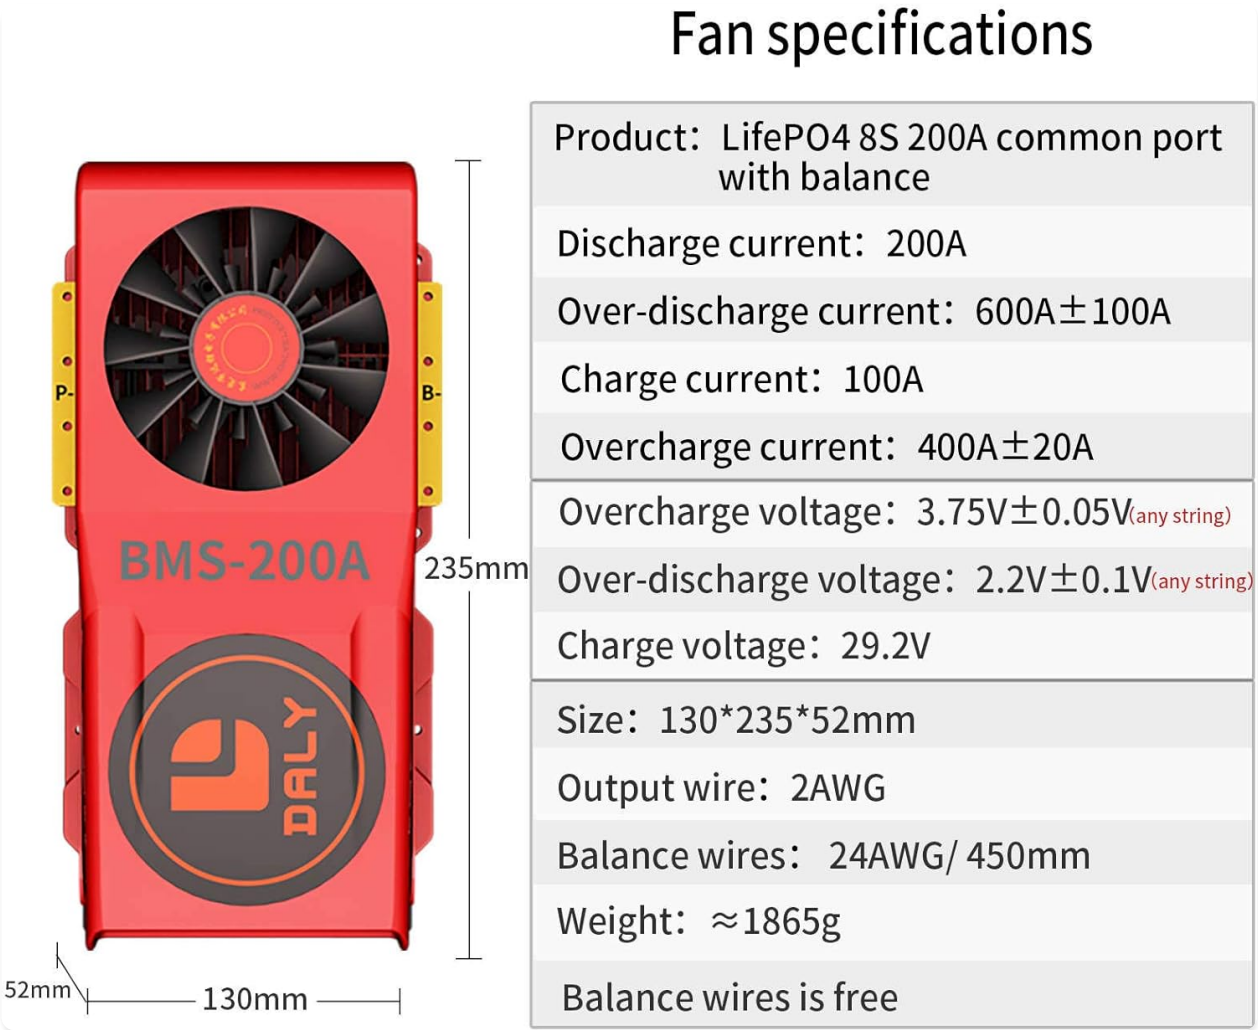


Figure 4: Fan specifications for the DALY BMS.

General Specifications

Feature	Value
Product Dimensions	4.72 x 9.25 x 2.05 inches
Item Weight	4.11 pounds (1865 Grams)
Input Voltage	24 Volts (DC)
Brand	DALY
Manufacturer	Dongguan Daly Electronics Co., Ltd
Color	Multicolor

Detailed Product Parameters (LiFePO4 8S BMS)

Product Parameters



Lifepo4 8S (BMS)

Description	Description	Specification														Unit
		20A	30A	40A	50A	60A	80A	100A	120A	150A	200A	250A	300A	400A	500A	
Discharge	Continue discharge current	20A	30A	40A	50A	60A	80A	100A	120A	150A	200A	250A	300A	400A	500A	A
	Over discharge current detect	60±10	100±20	160±30	160±30	220±40	360±50	360±50	260±50	260±50	500±100	500±100	500±100	1000±200	1000±200	A
Inner Resistance	Main Circuit Conduct Inner resistance	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	mΩ
Charge	Charge voltage	LifePO4: S*3.65 Li-ion: S*4.2 LTO: S*2.8														V
	Charge current	10	15	20	25	30	40	50	60	75	100	125	150	200	250	A
	Over Charge current detect delay	25±3	40±5	60±10	60±10	80±10	140±20	140±20	100±20	100±20	200±30	200±30	200±30	400±100	400±100	A
Over charge protection	Over charge detect voltage	3.65±0.05														V
	over charge protection delay	1														S
	over charge release voltage	3.55±0.05														V

Figure 5: Part 1 of the detailed product parameters for LiFePO4 8S BMS.

Balance	Balance detect Voltage	3.525		V
	Balance release voltage	3.525		V
	Balance current	30±5		mA
Over discharge protection	Over discharge detect	2.3±0.05		V
	Over discharge detect delay	1		S
	Over discharge release voltage	2.7±0.05		V
Over Charge current protection	Over discharge current detect delay	1		S
	Over discharge current protection	Off load		
Short Circuit protection	Short Circuit protection condition	Short circuit of external load		
	Short circuit detect delay	200~500	The actual results are based on the DALY test sent back by the customer.	uS
	Short circuit protection release	Off load		
Temp Protect	Temperature protection degrees	Charge : -20~55, Discharge: -40~75		°C
Self Consumption	Working current	100~200		uA
	Sleeping current(over-discharge)	0		uA
Working Temp	Temp range	-20~60		°C
Storing Temp	Temp range	-40~85		°C

Figure 6: Part 2 of the detailed product parameters for LiFePO4 8S BMS.

Detailed Product Parameters (LiFePO4 8S Smart BMS)

Lifepo4 8S (Smart BMS)

Description	Description	Specification													Unit
		30A	40A	50A	60A	80A	100A	120A	150A	200A	250A	300A	400A	500A	
Discharge	Continue discharge current	30	40	50	60	80	100	120	150	200	250	300	400	500	A
	Over discharge current detect voltage	45	60	75	90	120	150	180	225	300	375	450	600	750	A
Inner Resistance	Main Circuit Conduct Inner resistance	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	<20	mΩ
Charge	Charge voltage	LifePO4: S*3.65 Li-ion: S*4.2 LTO: S*2.8													V
	Charge current	15	20	25	30	40	50	60	75	100	125	150	200	250	A
	Over Charge current detect delay	45	60	75	90	120	150	180	225	300	375	450	600	750	A
Over charge protection	Over charge detect voltage	3.75±0.05													V
	over charge protection delay	1													S
	over charge release voltage	3.55±0.05													V
Balance	Balance detect Voltage	3.2													V
	Balance release voltage	3.2													V

Figure 7: Part 1 of the detailed product parameters for LiFePO4 8S Smart BMS.

	Balance current	30±5		mA
Over discharge protection	Over discharge detect	2.2±0.05		V
	Over discharge detect delay	1		S
	Over discharge release voltage	2.3±0.05		V
Over Charge current protection	Over discharge current detect delay	1		S
	Over discharge current protection	Off load		
Short Circuit protection	Short Circuit protection condition	Short circuit of external load		
	Short circuit detect delay	200~500	、	uS
	Short circuit protection release	Off load		
Temp Protect	Temperature protection degrees	Charge: -40~65, Discharge: -40~70		°C
Self Consumption	Working current	35		mA
	Sleeping current(over-discharge)	800		uA
Working Temp	Temp range	-20~60		°C
Storing Temp	Temp range	-40~85		°C

Figure 8: Part 2 of the detailed product parameters for LiFePO4 8S Smart BMS.

3. PRODUCT STRUCTURE

The DALY BMS is engineered with multiple layers for optimal performance and protection. Key components include:

- **Insulated Flame-Retardant Shell:** Provides external protection and safety.
- **Smart and Powerful Fan:** Ensures efficient cooling to maintain optimal operating temperatures.

- **Pure Aluminum Heat Sink:** Dissipates heat effectively from internal components.
- **High Current Copper Plate:** Features a 3mm pure copper interface for robust current handling.
- **DALY BMS Control Board:** The core intelligence for battery management and protection.
- **Thermal Conductive Compound:** Enhances heat transfer between components and heat sinks.
- **Insulation Fixing Plate:** Secures and insulates internal components.



Figure 9: Exploded view illustrating the internal structure of the DALY BMS.

4. WIRING INSTRUCTIONS

Proper wiring is critical for the safe and correct operation of your DALY BMS. Please follow these steps carefully. Tools needed: soldering machine (suggested 662°F/350°C), scissors, double-sided tape, tin wire, multimeter.

4.1. Preparation and Sampling Point Determination

Before starting, ensure you have all necessary tools and materials. The sampling points on your battery pack must be correctly identified and marked. For a 10-battery series (e.g., 8S LiFePO₄), there will be 11 sampling points, including the total negative (B-) and total positive (B+) terminals.

Your browser does not support the video tag.

Video 1: Guide on preparing materials and determining sampling points for DALY BMS wiring.


Your browser does not support the video tag.

Video 2: Detailed instructions on how to determine the correct sampling points for DALY BMS.

4.2. Balance Lead Connection

Note: You **must** disconnect balance wires end and BMS connection port before welding black and red balance wires on the battery pack.

1. After assembling your LiFePO₄ battery pack, mark battery B-, B1, B2,..., until battery pack B+.
2. Fix balance wires on the battery pack where the black wire can reach battery pack B-. The 1st red wire can reach B1, 2nd red wire can reach B2,..., until the last red wire can reach battery pack B+ with double-sided tape.
3. Cut off excess length with scissors, welding the black wire's end at Battery pack B-, welding the 1st red wire's end at B1, 2nd red wire's end at B2,..., until the last red wire's end at Battery pack B+.
4. Measure balance wires white end's 2 neighboring metal points voltage; if voltage range is 2.0V-3.6V, that means wiring is correct.
5. Connect balance wires white end with BMS connection port, use multimeter ohm detection function and turn on the buzzer; connect multimeter's black test pen with BMS P- and multimeter's red test pen with BMS B-, when there is beep sound, the BMS circuit conduction is OK and continue.
6. Use multimeter DC voltage function to measure battery pack's voltage (between Battery B- and Battery B+) and through BMS output voltage (between BMS B- and Battery B+), if they are the same voltage, the BMS can work normally already and fix BMS to avoid poor contact due to severe vibration during use.

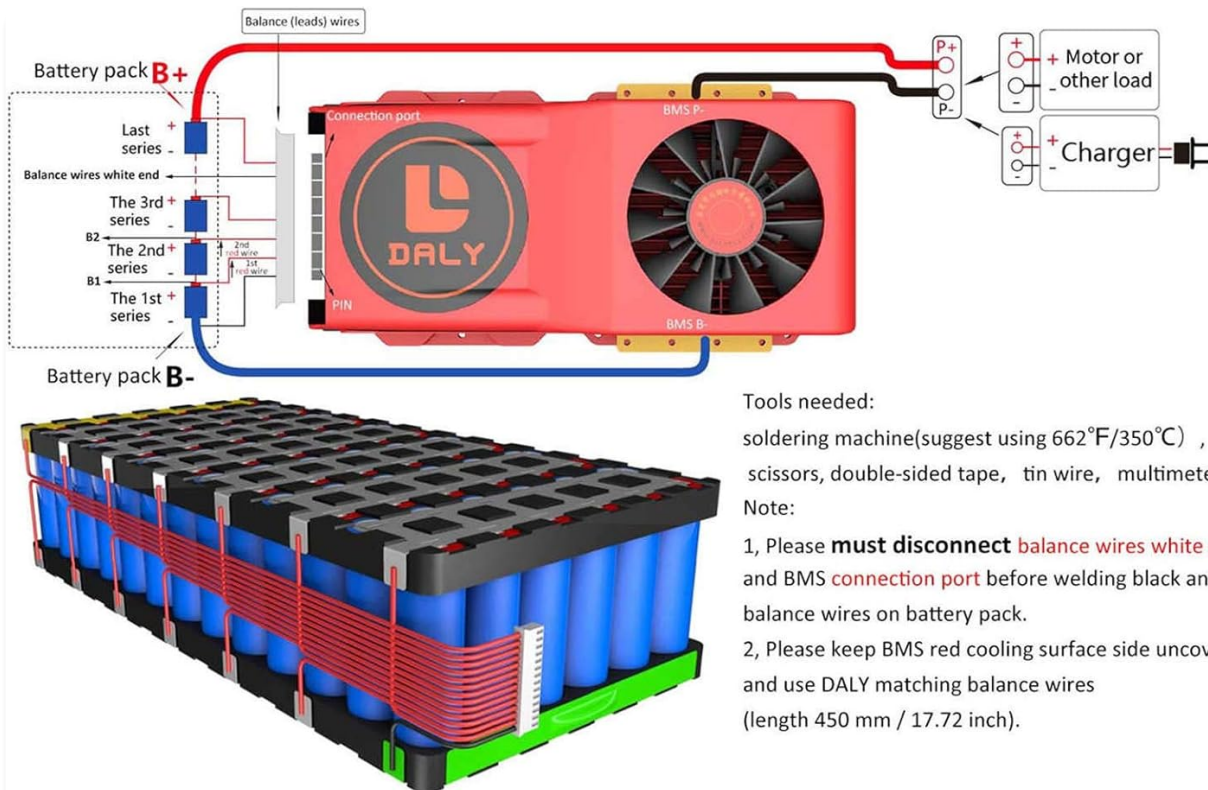

Tools needed:

soldering machine(suggest using 662°F/350°C) ,
scissors, double-sided tape, tin wire, multimeter.

Note:

- 1, Please **must disconnect balance wires white end** and BMS **connection port** before welding black and red balance wires on battery pack.
- 2, Please keep BMS red cooling surface side uncovered and use DALY matching balance wires (length 450 mm / 17.72 inch).

① After you assembled your **LiFePO4** battery pack, mark battery B-, B1, B2,...,until battery pack B+.

Fix balance wires on the battery pack where black wire can reach battery pack B-, 1st red wire can reach B1, 2nd red wire can reach B2,..., until last red wire can reach battery pack B+ with double-sided tape.

Cut off excess length with scissors, welding black wire's end at Battery pack B- ,welding the 1st red wire's end at B1, 2nd red wire's end at B2,...,until last red wire's end at Battery pack B+.

Measure balance wires white end's 2 neighboring metal points voltage, if voltage range is 2.0V-3.6V, that means wiring is correct.

② Connect balance wires white end with BMS connection port, use multimeter ohm detection function and turn on the buzzer , connect multimeter's black test pen with BMS P- and multimeter's red test pen with BMS B- , when there is beep sound, the BMS circuit conduction is OK and continue.

③ Use multimeter DC voltage function to measure battery pack's voltage (between Battery B- and Battery B+) and through BMS output voltage(between BMS B- and Battery B+), if they are the same voltage, the BMS can work normally already and fix BMS to avoid poor contact due to severe vibration during use.

BMS Wiring Instructions Manual

Figure 10: Diagram illustrating the balance lead wiring process for the DALY BMS.

Your browser does not support the video tag.

Video 3: Step-by-step guide on soldering DALY BMS wires to the battery pack.

5. COMMON WIRING ERRORS AND TROUBLESHOOTING

Incorrect wiring can lead to serious issues, including damage to the BMS or battery pack. Be aware of these common errors:

- **Incorrect Wiring Harness:** Using a wiring harness not specifically designed or compatible with your DALY BMS model can cause connection issues, poor contact, or even short circuits. Always use the provided or recommended wiring.
- **Inserting BMS Before Wiring:** Never insert the BMS connection port before all balance wires are correctly soldered and verified. Doing so can cause immediate damage to the BMS due to voltage spikes or incorrect current paths.
- **Virtual Welding/Poor Solder Joints:** Inadequate soldering can result in poor electrical contact, leading to voltage drops, overheating, and unreliable performance. Ensure all solder joints are strong and secure.

- **No Inspection After Wiring:** Failing to inspect and verify all connections and voltages with a multimeter after wiring but before connecting the BMS can lead to catastrophic failure. Always check individual cell voltages and the overall pack voltage.
- **Incorrect P- and B- Line Connection:** The P- line (output/charge negative) and B- line (total battery negative) must be connected correctly. Reversing these or connecting them improperly can cause short circuits within the protective plate, burn out sampling lines, or damage the entire protective plate.

Your browser does not support the video tag.

Video 4: Explanation of 5 common wiring errors to avoid when installing DALY BMS.

6. APPLICATIONS

DALY BMS modules are versatile and suitable for a wide range of applications requiring robust battery management. These include:

- Two-wheelers (e.g., electric bikes, scooters)
- AGV Forklifts
- Electric Scooters
- Photovoltaic Energy Storage Systems
- RV Energy Storage Systems
- Home Energy Storage Systems



Figure 11: Visual representation of various applications for DALY BMS products.

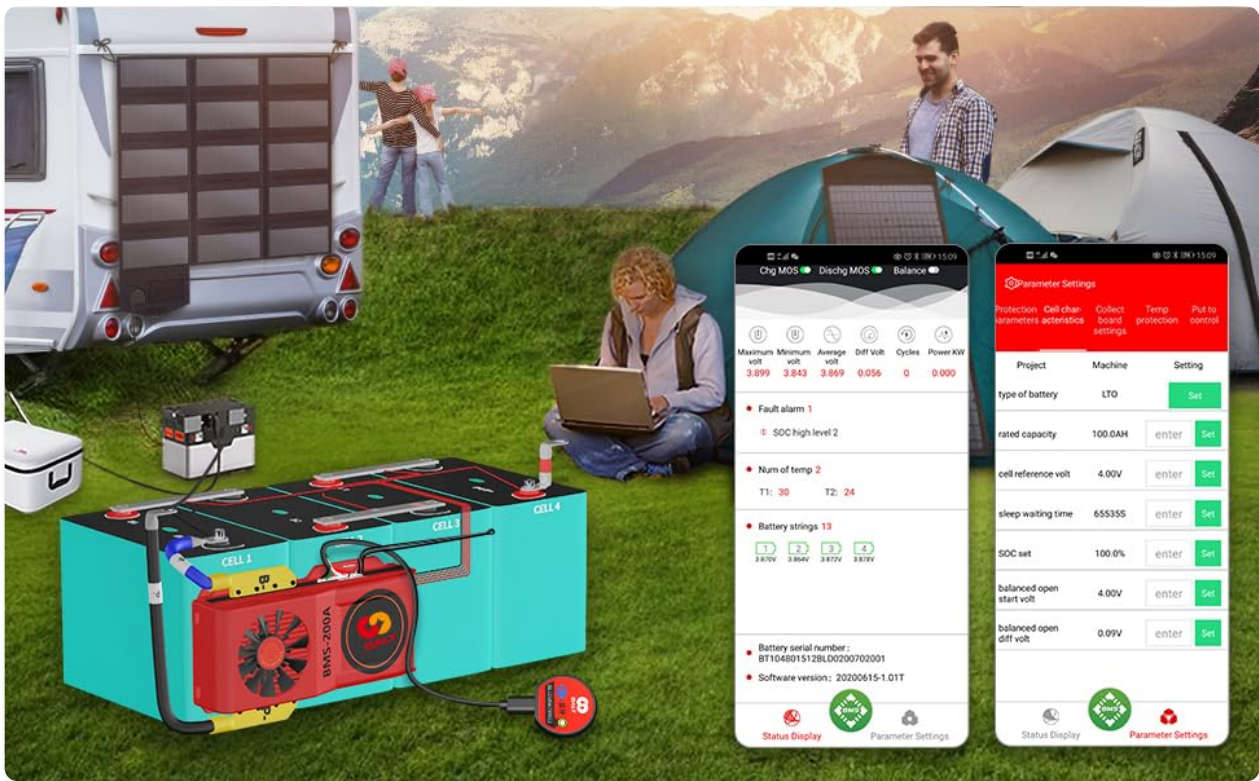


Figure 12: Example of a DALY BMS in an energy storage application with mobile app monitoring.

7. SAFETY PRECAUTIONS

- Always wear appropriate personal protective equipment (PPE) when handling batteries and performing wiring.
- Ensure all connections are secure and insulated to prevent short circuits.
- Do not attempt to modify the BMS or battery pack beyond the instructions provided.
- Keep the BMS and battery pack away from moisture, heat, and flammable materials.
- In case of any malfunction or unusual behavior, disconnect the battery pack immediately and seek professional assistance.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your DALY BMS, please refer to the official DALY website or contact your authorized dealer. Ensure you retain your proof of purchase for warranty claims.