

Electriq EQDWTTGF

Electriq Freestanding Mini Table Top Portable Dishwasher

Model: EQDWTTGF

PRODUCT OVERVIEW

The electriQ Freestanding Mini Table Top Portable Dishwasher (Model EQDWTTGF) is designed for compact spaces, offering efficient dish cleaning without requiring permanent plumbing. It features a 2-place setting capacity, accommodating up to 22 items, making it ideal for small households, apartments, or caravans. This appliance can be used on a countertop and operates with a built-in water tank, providing flexibility in installation. Key features include multiple wash programs, a quick wash cycle for lightly soiled items, and specialized programs for baby care and fruit washing. A delay timer allows for convenient scheduling of wash cycles.



Figure 1: Front view of the Electriq Mini Table Top Portable Dishwasher, showing dishes loaded inside.

SETUP AND INSTALLATION

This dishwasher is designed for ease of setup, requiring no permanent plumbing. It is suitable for countertop placement.

Unboxing and Initial Placement

- Carefully remove the dishwasher and all accessories from its packaging.
- Place the dishwasher on a stable, level countertop surface. Ensure there is adequate space around the unit for ventilation and operation.
- The dimensions of the unit are approximately 43.5 cm (D) x 42 cm (W) x 43.5 cm (H).



Figure 2: The dishwasher positioned on a kitchen countertop, demonstrating its compact size.

Water Supply

The dishwasher features a built-in water tank, eliminating the need for a direct water line connection. Water is manually added to the top of the unit.

- Open the water inlet cover on the top of the dishwasher.
- Using the provided jug, slowly pour clean water into the inlet. The dishwasher will emit a beep sound when the tank is full (approximately 5-6 litres).
- Close the water inlet cover securely.

Drainage Connection

The dishwasher includes a drainage pipe for automatic water discharge.

- Connect the drainage pipe to the waste outlet at the back of the dishwasher.
- Position the other end of the drainage pipe into a sink or suitable drain to allow for wastewater disposal. Ensure the

pipe is securely placed to prevent spills.



Figure 3: Rear view of the dishwasher, highlighting the drainage pipe connection point.

Dishwasher Salt

For optimal performance and to prevent limescale buildup, it is recommended to use dishwasher salt.

- Locate the salt container inside the dishwasher.
- Unscrew the cap of the salt container.
- Pour approximately 1 litre of water into the container, followed by 130g of dishwasher salt.
- Securely screw the cap back on. This process may need to be repeated every 5-6 washes, depending on water hardness.

Loading Dishes

Proper loading ensures effective cleaning. The dishwasher has a 2-place setting capacity.

- Scrape off any large food particles from dishes before loading. Rinsing is recommended for heavily soiled items.
- Place plates, bowls, and cups in the designated racks. Ensure items do not block the spray arms.
- The maximum plate size that can be accommodated is approximately 9.5 inches (24 cm).
- Place cutlery in the cutlery basket, ensuring handles are facing down for better cleaning.



Figure 4: An example of how to load dishes and cutlery into the dishwasher for optimal cleaning.



Figure 5: Illustration of the maximum plate size (9.5 inches) that fits inside the dishwasher.

Adding Detergent

Use standard dishwasher tablets or powder detergent.

- Place one dishwasher tablet or the recommended amount of powder detergent into the detergent dispenser.
- Close the dispenser cover.

Program Selection

The dishwasher offers various wash programs to suit different needs.



Figure 6: The control panel displaying various program options and the digital timer.

Wash Programs Overview

Program	Description	Typical Duration
Rapid Wash	For lightly soiled dishes, quick cleaning.	29-30 minutes
1-Hour Cycle	Standard wash, rinse, and dry cycle.	1 hour
Baby Care	Thorough cleaning for baby bottles and accessories, includes steaming/sterilizing.	Approx. 2 hours
Fruit Wash	Gentle wash for fruits, can be hot or cold. Includes a fruit basket.	Variable
Other Programs	Refer to the control panel for additional programs (e.g., P1 ECO, P2, P3).	Variable

Delay Timer

The delay timer allows you to postpone the start of a wash cycle.

- Press the delay button to set the desired delay time, typically from 1 to 24 hours.

- Once set, the dishwasher will automatically start the selected program after the delay period.

Starting a Cycle

- Ensure the water tank is filled and detergent is added.
- Select your desired wash program.
- Press the Start button to begin the cycle.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning Filters

- Periodically check and clean the filters located at the bottom of the dishwasher tub.
- Remove any food debris or residue from the filters under running water.
- Reinstall the filters securely after cleaning.

Refilling Dishwasher Salt

- Monitor the salt level indicator (if available) or refill approximately every 5-6 washes as described in the Setup section.

General Cleaning

- Wipe down the exterior of the dishwasher with a soft, damp cloth.
- Clean the interior periodically to remove any buildup or odors.

TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common problems and solutions.

Common Troubleshooting Guide

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters, heavily soiled items.	Ensure dishes are loaded correctly, clear spray arms, use appropriate detergent, clean filters, pre-rinse heavily soiled items.
Water not draining	Clogged drain pipe, kinked drain hose, blocked sink drain.	Check and clear the drain pipe, ensure the hose is not kinked, verify sink drain is clear.
Dishwasher not starting	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is fully latched, select a wash program.
Excessive noise	Dishes interfering with spray arms, foreign object inside.	Rearrange dishes, check for and remove any foreign objects.
Baby bottles greasy after wash	Specific residue, improper loading for bottle type.	Ensure bottles are thoroughly rinsed before loading. Experiment with loading positions to ensure water reaches all surfaces. Consider manual pre-cleaning for stubborn residue.

SPECIFICATIONS

Feature	Detail
Brand	Electriq
Model	EQDWTTGF (WQP4 -2605)
Form Factor	Freestanding, Table Top
Capacity	2 Place Settings (approx. 22 items)
Dimensions (D x W x H)	43.5 cm x 42 cm x 43.5 cm
Voltage	240 Volts
Operating Frequency	50 Hz
Noise Level	58 dB
Special Features	Portable, Touch Panel, Built-In Water Tank
Controls Type	Touch
Material	Glass (door), other materials
Included Components	Dishwasher, fruit basket (for fruit wash program)

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation provided with your purchase or contact Electriq customer service. Electriq is committed to providing top-notch customer service for its products.

Please retain your proof of purchase for any warranty claims.

