

Midea MKE15D2BDW

Midea Electric Kettle Instruction Manual

Model: MKE15D2BDW

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Midea electric kettle. Keep this manual for future reference.

- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Always place the kettle on a firm, flat, heat-resistant surface.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Keep the appliance out of reach of children.
- Do not fill above the maximum fill line or below the minimum fill line to prevent boiling dry or splashing.
- Always close the lid securely before operating.
- Exercise caution when pouring hot water.
- Unplug the kettle from the outlet when not in use and before cleaning.

2. PRODUCT OVERVIEW

The Midea MKE15D2BDW electric kettle is designed for efficient and safe water heating with precise temperature control.

Key Features:

- **Double-Wall Construction:** Features an inner layer of food-grade 304 stainless steel and an outer layer of PP material for insulation and anti-scald protection.
- **Precise Temperature Control:** Offers 7 preset temperature settings (45°C to 100°C) for various beverages.
- **Rapid Heating:** 2200W power for quick boiling of 1.5L water in approximately 4-5 minutes.
- **Keep Warm Function:** Maintains desired temperature for up to one hour.
- **Strix Thermostat Technology:** Ensures automatic shut-off and boil-dry protection for enhanced safety and durability.

- **Digital Display:** Shows real-time water temperature.
- **Easy Cleaning:** Wide opening lid and seamless stainless steel interior.



Über Midea

Midea wurde 1968 gegründet und ist die Haushaltsgerätemarke der Midea Group - einem führenden Global Fortune 500-Unternehmen mit Präsenz in 195 Ländern und 21 Produktionsstätten weltweit.

Wir verpflichten uns, überraschend freundliche Lösungen anzubieten, damit unsere Kunden die kleinen Momente zu Hause genießen können.

Image: Illustration of the kettle's double-wall construction, showing the inner stainless steel layer and outer insulation layer for anti-scald protection.



Image: Visual representation of the 7 personalized temperature settings for different beverages, including milk (45°C), coffee (85°C), and various teas.

3. SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.
2. **First Use Cleaning:** Before first use, fill the kettle with clean water up to the maximum fill line. Boil

the water (100°C), then discard it. Repeat this process 2-3 times to remove any manufacturing residues.

3. **Placement:** Place the power base on a stable, flat, and dry surface away from the edge of the countertop. Ensure the power cord is not dangling where it can be pulled or tripped over.

4. OPERATING INSTRUCTIONS

Filling the Kettle:

1. Remove the kettle from its power base.
2. Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX mark (1.5L).
3. Close the lid firmly.
4. Place the kettle back onto its power base.

Selecting Temperature and Boiling:

1. Plug the power cord into a suitable electrical outlet. The digital display will illuminate.
2. Press the 'TEMP' button repeatedly to cycle through the available temperature settings (e.g., 45°C, 75°C, 80°C, 85°C, 90°C, 100°C). The selected temperature will be displayed.
3. Press the 'START/CANCEL' button to begin the heating process. The kettle will start heating, and the display will show the current water temperature.
4. The kettle will automatically switch off once the selected temperature is reached.

Using the Keep Warm Function:

1. After selecting your desired temperature and pressing 'START/CANCEL', you can activate the keep warm function.
2. Press the 'WARM' button. The kettle will maintain the selected temperature for up to one hour.
3. To cancel the keep warm function or any heating cycle, press the 'START/CANCEL' button again.



Image: Depicts the kettle's 2200W rapid boiling capability and its 1.5L capacity, suitable for up to 6 cups.



Image: Highlights the Strix thermostat technology, emphasizing precise temperature control, automatic shut-off, and long lifespan.



Image: Close-up view of the kettle's digital display, removable filter, anti-splash lid, and retractable cord panel for convenience.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and lifespan of your kettle.

- Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely.
- Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Interior Cleaning:** The seamless stainless steel interior can be cleaned with a soft brush or sponge.

For stubborn stains or mineral deposits, use a descaling solution.

4. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling solution. Boil the mixture, then let it stand for 30 minutes to an hour. Empty the kettle and rinse thoroughly several times with fresh water.
5. **Filter Cleaning:** The removable filter can be gently rinsed under running water. Ensure it is dry before reinserting.



Image: Illustrates the kettle's easy cleaning features, including the one-button switch, large opening lid, and seamless monobloc interior.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; no power; kettle not properly seated on base; boil-dry protection activated.	Check power connection; ensure kettle is correctly placed on base; allow kettle to cool if boil-dry protection activated.
Water has an unusual taste.	First use residues; limescale buildup.	Perform first-use cleaning (boil and discard water several times); descale the kettle.
Kettle switches off before boiling.	Limescale buildup; faulty thermostat.	Descale the kettle. If problem persists, contact customer support.
Lid does not close properly.	Obstruction; damaged lid.	Check for any obstructions; ensure lid is aligned correctly.

7. SPECIFICATIONS

- **Model Number:** MKE15D2BDW
- **Brand:** Midea
- **Capacity:** 1.5 Liters
- **Power:** 2200 Watts
- **Voltage:** 220V
- **Material:** Stainless Steel (interior), PP (exterior)
- **Special Feature:** Double Wall, Temperature Control
- **Dimensions (L x W x H):** 20.1 x 28 x 23.1 cm
- **Item Weight:** 1.42 Kilograms

Wortklassen Erkennung



Image: Diagram showing the dimensions of the Midea electric kettle and its power base.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Midea customer service. Specific warranty terms may vary by region.

Please retain your proof of purchase for any warranty claims.