

Midea MC-IF7454BJ1-A

Midea Induction Hob User Manual

Model: MC-IF7454BJ1-A

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Midea Induction Hob with 4 Cooking Zones. Please read this manual thoroughly before using the appliance and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage when using the appliance, follow basic safety precautions, including the following:

- Ensure the appliance is connected to a 220-240V hardwired electrical supply by a qualified electrician. The appliance comes without a plug and must be connected directly to the fixed wiring.
- Do not touch hot surfaces. Use handles or knobs.
- Always supervise children when the appliance is in use. The hob features a child lock to minimize risk of injury.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only cookware with a magnetic base and a diameter greater than 10 cm for proper induction heating.
- Do not place metallic objects such as knives, forks, spoons, and lids on the hob surface as they can get hot.
- Clean the ceramic glass surface regularly. Do not use abrasive cleaners or sharp metal scrapers.
- The hob generates heat only to the cookware, keeping the hob surface relatively cool, but residual heat indicators will show if a zone is still hot.

PRODUCT OVERVIEW

The Midea Induction Hob features four independent cooking zones, each with adjustable power levels, controlled via a sensitive touch panel. Its sleek ceramic glass surface is designed for easy cleaning and durability.

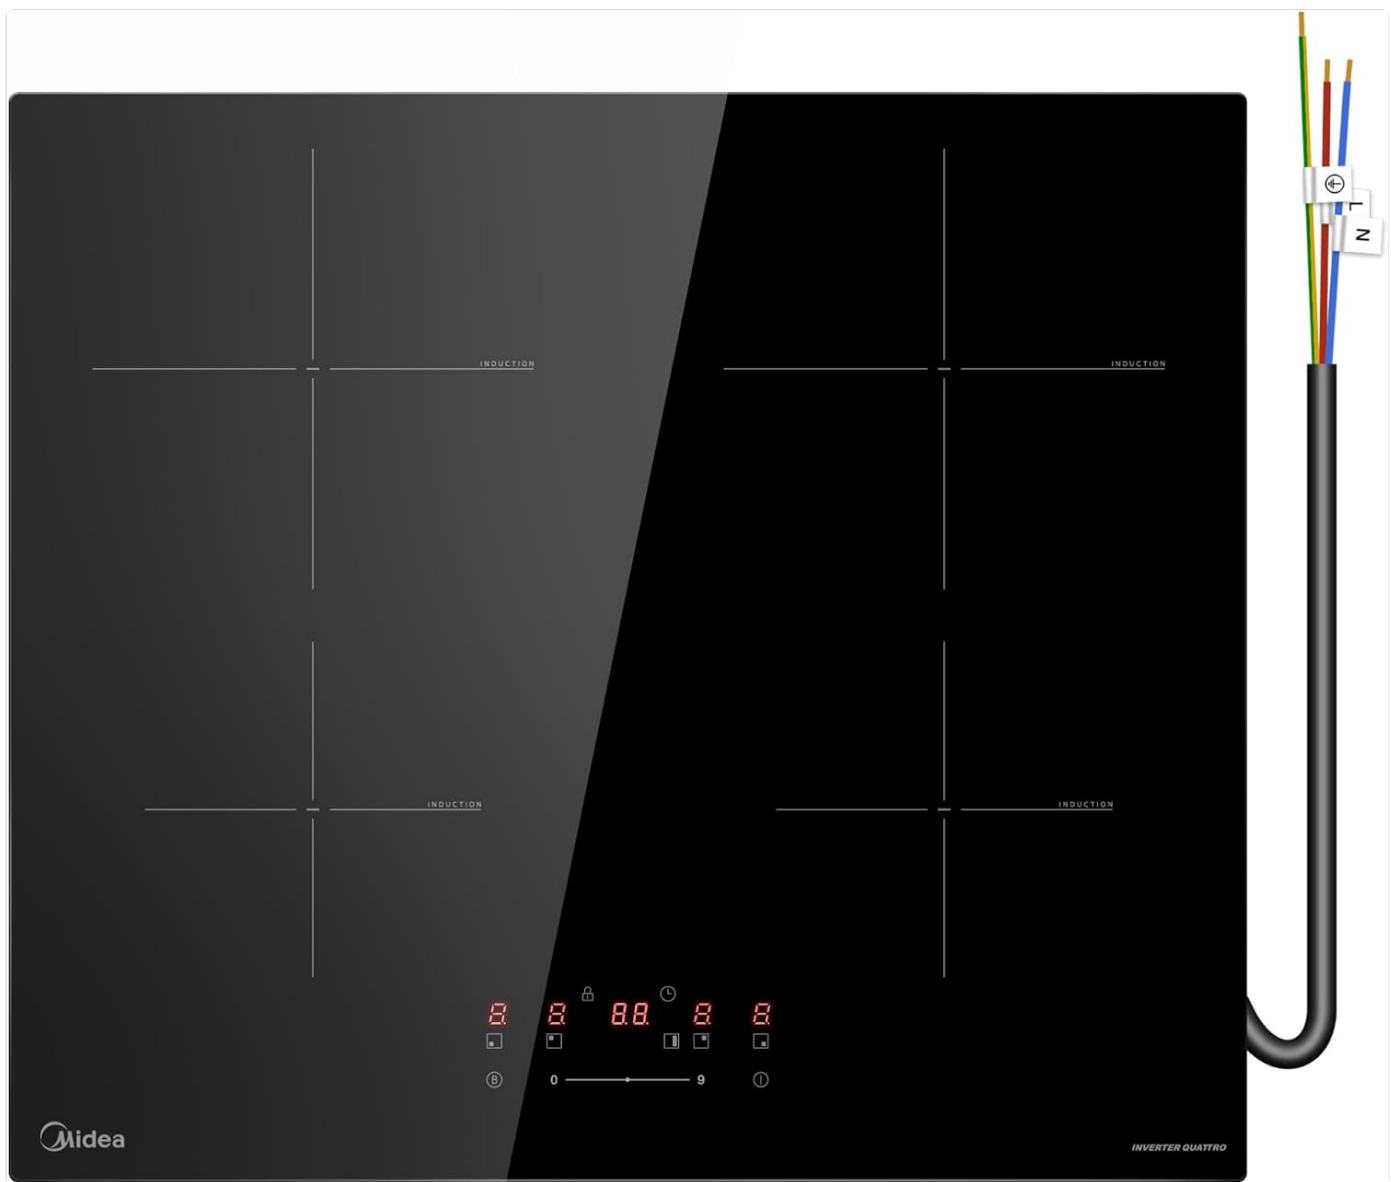 


Image: Top view of the Midea Induction Hob, showing the four cooking zones and the central touch control panel. The hob is black with white markings for the zones and red digital displays for power levels.

Eingebautes Induktionskochfeld 7400 Watt Berührungssteuerung



Höchst
leistung



9-stufige
Leistungs
einstellung



Sicherheit
für
Kinder



Zeitschaltuhr



Überhitzungs
schutz



Image: A Midea Induction Hob on a kitchen counter, with graphical icons highlighting its key features: high power output (7200W), 9 power level settings, child safety lock, timer function, and overheat protection.

INSTALLATION

The Midea Induction Hob is designed for built-in installation. Proper installation by a qualified professional is crucial for safety and optimal performance. Ensure adequate ventilation around the appliance.

Dimensions and Cut-out

The hob dimensions are approximately 59 x 52 x 6.2 cm. The required cut-out dimensions for installation are 560mm x 490mm. Ensure sufficient space below the hob for ventilation.

9 Leistungsstufen mit Boost-Funktion

P1

Schmelzen Erwärmung

P2

P3

Simmer

P4

Dampf

P5

Pfannkuchen Sautieren

P6

P7

Pasta

P8

Rührbraten

P9

Kochend



Image: Side profile of the Midea Induction Hob, illustrating its compact depth for built-in installation.

7400-Watt-Kochfeld mit vier Brennern ,die gleichzeitig arbeiten können

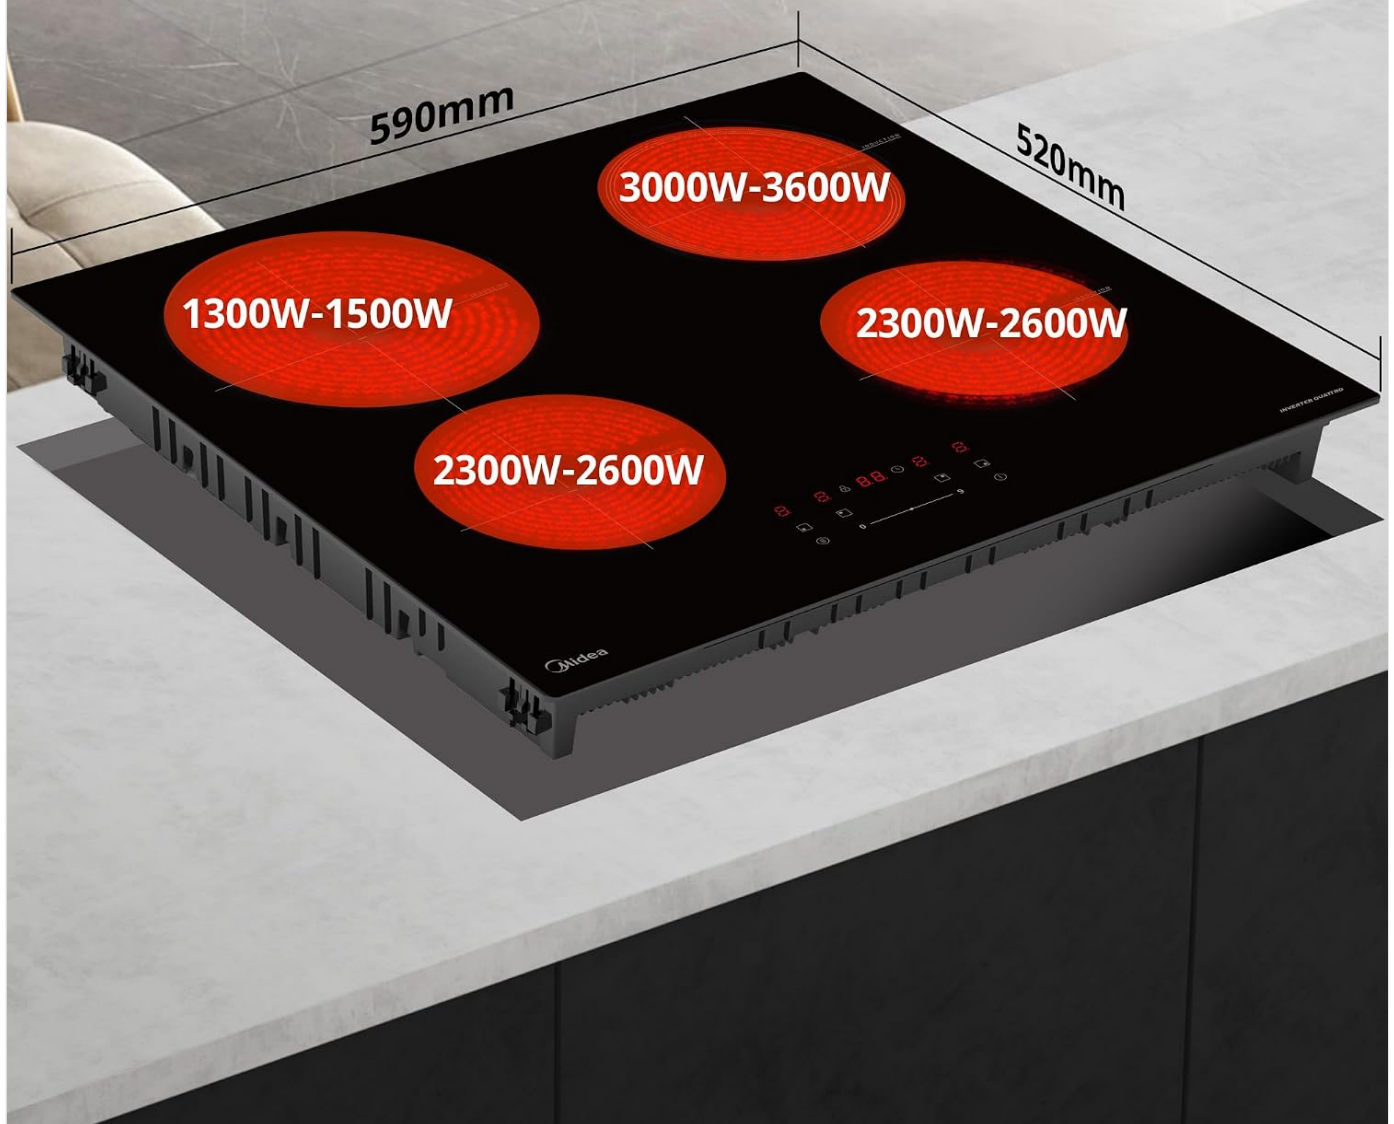 


Image: Rear view of the Midea Induction Hob, displaying the electrical connection points and the cable entry for hardwiring.

Eingebautes Induktionskochfeld

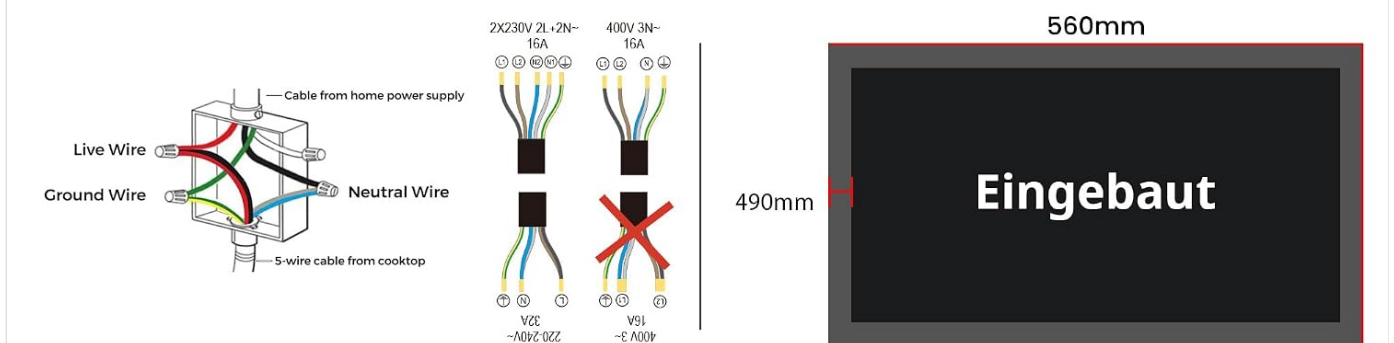 


Image: A detailed diagram illustrating the overall dimensions of the Midea Induction Hob (590mm x 520mm x 62mm) and the required cut-out size (560mm x 490mm). It also includes wiring diagrams for different electrical configurations (2x230V 2L+2N, 400V 3N, 220-240V).

Electrical Connection

The hob requires a 220-240V electrical supply and must be hardwired. It does not come with a plug. Consult the wiring diagrams provided in the installation image for correct connection. Ensure the power supply is disconnected before any wiring work.

OPERATING INSTRUCTIONS

Touch Control Panel

The hob is operated using sensitive touch controls located on the front panel. Simply touch the corresponding symbols to activate functions, adjust power levels, or set timers.

Power Levels and Boost Function

Each cooking zone offers 9 power levels, allowing precise control over cooking temperature. A boost function is available

for rapid heating, providing maximum power for a short period.

Kompatibel mit magnetischen Kochgeschirren



Emaillierter Eisentopf



Edelstahltopf



Pfanne aus Gusseisen



Eiserner Pat



Image: A visual representation of the 9 power levels (P1-P9) available on the Midea Induction Hob, with suggested uses for each level, ranging from melting and warming (P1-P2) to boiling and stir-frying (P9).

Cookware Compatibility

Induction hobs require cookware with a magnetic base. Compatible materials include enameled iron, stainless steel, and cast iron. Ensure the base diameter of your cookware is at least 10 cm for efficient heating.

Eingebautes Induktionskochfeld

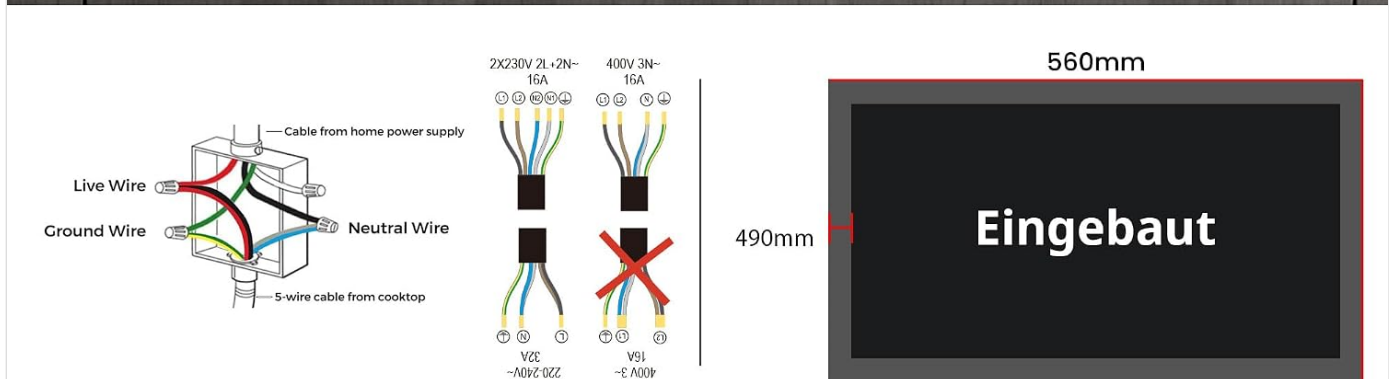 


Image: Illustrations demonstrating compatible cookware types for induction hobs, such as enameled iron pots, stainless steel pots, cast iron pans, and iron pans. It also highlights the requirement for cookware to have a base diameter greater than 10 cm.

Safety Features

- **Child Lock:** Activates to prevent accidental operation, ensuring safety, especially around children.
- **Automatic Shut-Off:** The hob will automatically turn off if left unattended for an extended period or if a cooking zone overheats.
- **Residual Heat Indicator:** After cooking, the display will show an 'H' to indicate that the cooking zone is still hot to the touch, even if the power is off.

MAINTENANCE AND CLEANING

The ceramic glass surface of your Midea Induction Hob is designed for easy cleaning. Always ensure the hob is cool before cleaning.

- Wipe spills immediately with a damp cloth.

- For stubborn stains, use a ceramic hob cleaner and a soft cloth.
- Avoid using abrasive sponges, scouring pads, or harsh chemical cleaners as they can scratch or damage the surface.
- Do not use steam cleaners.

TROUBLESHOOTING

If you encounter issues with your Midea Induction Hob, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hob not turning on.	No power supply; child lock activated.	Check power connection; deactivate child lock.
Cooking zone not heating.	Incompatible cookware; pan not centered; pan too small.	Use magnetic cookware; center pan; ensure pan diameter is >10cm.
Hob beeps loudly and shuts off.	Liquid spill on control panel; overheating.	Wipe control panel dry; allow hob to cool down.
Fan noise is loud.	Normal operation; high power setting.	Fan noise is normal during operation, especially at higher power levels. Ensure proper ventilation around the hob.

SPECIFICATIONS

Feature	Detail
Brand	Midea
Model Number	MC-IF7454BJ1-A
Product Dimensions	59 x 52 x 6.2 cm
Item Weight	8 kg
Installation Type	Built-in (Freestanding listed in product data, but product is built-in)
Burner Type	Induction
Heating Elements	4
Voltage	220 Volts
Wattage	7200 watts
Material Type	Ceramic Metal
Special Features	Digital Display, Temperature Control, Automatic Shut-Off, Child Lock

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Midea website. Keep your proof of purchase for any warranty claims.

For technical assistance or service, please contact Midea customer service through their official channels. You may also find additional support resources on the [Midea Store on Amazon](#).

© 2025 Midea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question