

LEMEGA MSY2

LEMEGA MSY2 Compact Hi-Fi Music System User Manual

Model: MSY2 (4K-ED4922)

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your LEMEGA MSY2 Compact Hi-Fi Music System. Please read this manual thoroughly before using the device to ensure proper functionality and safety. The LEMEGA MSY2 is an all-in-one music system featuring DAB/DAB+ and FM radio, a CD player, Bluetooth connectivity, USB playback and charging, and a dual alarm clock.

2. SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Avoid placing the unit near heat sources or in direct sunlight.

3. PACKAGE CONTENTS

Verify that all items are present:

- LEMEGA MSY2 Music System
- Remote Control
- Power Adapter
- User Manual

4. PRODUCT OVERVIEW

The LEMEGA MSY2 combines multiple audio sources in a compact design.



The LEMEGA MSY2 music system, featuring a wooden casing, silver front panel with a color display, control buttons, and a CD slot. The accompanying remote control is shown to the left.



MSY2 All-In-One Music System



CD Player



DAB/DAB+ Radio



Bluetooth



FM Radio



USB Charging



Dual Alarms

An overview of the LEMEGA MSY2's capabilities, including CD playback, DAB/DAB+ digital radio, Bluetooth connectivity, FM radio, USB charging, and dual alarm functionality.

Front Panel Controls:

- **Display Screen:** Shows current mode, track information, time, etc.
- **CD Slot:** For inserting audio CDs.
- **Control Buttons:** Power, Source, Menu, Presets, Alarm, Sleep, Info, Dim, EQ, Play/Pause, Skip, Volume.
- **Rotary Knob:** For volume control and menu navigation.

Rear Panel Connections:

- **Antenna:** Extendable telescopic antenna for radio reception.
- **USB Ports:** Two dedicated USB ports for MP3 playback and 1A USB charging.
- **AUX-IN Port:** For connecting external audio sources.
- **Headphone Output:** 3.5mm jack for private listening.
- **DC IN:** Power input.

5. SETUP

5.1 Power Connection

1. Connect the supplied power adapter to the DC IN port on the rear of the MSY2.
2. Plug the adapter into a wall outlet.

5.2 Antenna

For optimal DAB/DAB+ and FM radio reception, fully extend the telescopic antenna.

5.3 Initial Power-On and Auto Scan

1. Press the **Power** button to turn on the unit.
2. Upon first use, the system may automatically perform a scan for available DAB/DAB+ and FM stations. This process is quick and sets up your favorite stations for easy access.

6. OPERATING INSTRUCTIONS

6.1 General Controls

- **Volume:** Rotate the main knob or use the +/- buttons on the remote.
- **Source:** Press the **Source** button to switch between DAB, FM, CD, Bluetooth, USB, and AUX-IN modes.
- **Menu:** Press the **Menu** button to access settings for the current mode.

6.2 DAB/DAB+ Radio



DAB/DAB+ AND FM RADIO

Enjoy all of your favourite DAB / DAB+ and FM stations with superior quality sound. Easy set-up and quick Auto-Scan to access your favorite stations quickly.

The LEMEGA MSY2 unit on a kitchen counter, with its screen showing 'Digital Radio' and station information, illustrating its DAB/DAB+ and FM radio capabilities.

1. Select **DAB** mode using the **Source** button.
2. The system will scan for available stations.
3. Use the **Skip** buttons (forward/backward) or the rotary knob to navigate through the station list.
4. Press the rotary knob or **OK** on the remote to select a station.
5. **Presets:** To save a station, press and hold the **Presets** button. Select a preset number (1-20) and confirm. To recall a preset, briefly press the **Presets** button and select the desired station.

6.3 FM Radio

1. Select **FM** mode using the **Source** button.
2. Press and hold the **Skip** buttons to auto-scan for the next available station. Briefly press to fine-tune.
3. **Presets:** Saving and recalling FM stations works similarly to DAB radio (20 presets available).

6.4 CD Player



SLOT-IN CD PLAYER & REMOTE CONTROL

Enjoy outstanding sound and breathe new life into your CD collection with full remote control and song display on the 2.4" colour display.

The LEMEGA MSY2 music system on a desk, with its screen indicating 'CD Playing' and track details. The remote control is visible nearby, emphasizing the slot-in CD player and remote functionality.

The MSY2 supports CD, CD-R, and CD-RW discs.

1. Select **CD** mode using the **Source** button.
2. Gently insert a CD into the slot. The unit will automatically load and begin playback.
3. Use the **Play/Pause**, **Skip** (forward/backward), and **Stop** buttons on the unit or remote control to manage playback.

6.5 Bluetooth Mode



BLUETOOTH & USB FEATURES

With Wireless Bluetooth listen to your own music from your smartphone or tablet.

With two dedicated USB ports allowing both playback of MP3 files and 1A USB charger

The LEMEGA MSY2 unit on a table, wirelessly streaming music from a smartphone via Bluetooth, while simultaneously charging another smartphone through its USB port.

1. Select **Bluetooth** mode using the **Source** button. The display will show "Pairing".
2. On your smartphone or tablet, enable Bluetooth and search for available devices.
3. Select "LEMEGA MSY2" from the list to pair. Once connected, you can stream audio wirelessly.

6.6 USB Playback and Charging

The MSY2 features two USB ports for MP3 file playback and 1A USB charging.

1. **MP3 Playback:** Insert a USB drive containing MP3 files into one of the USB ports. Select **USB** mode. The unit will automatically detect and play MP3 files.
2. **USB Charging:** Connect your device (e.g., smartphone) to the other USB port for charging.

6.7 AUX-IN

Connect an external audio device (e.g., MP3 player) to the AUX-IN port using a 3.5mm audio cable. Select **AUX-IN** mode to play audio from the connected device.

6.8 Equalizer Settings



ENJOY PERSONAL EQ SETTING

Enjoy different music taste as what your EQ setting via 3.5mm earphones.

The LEMEGA MSY2 unit on a coffee table, with its dimensions (20cm width, 28cm depth, 16cm height) indicated. The screen shows equalizer settings, demonstrating personalized audio adjustments.

Adjust the audio output to your preference:

1. Press the **EQ** button on the unit or remote.
2. Use the navigation buttons or rotary knob to select from various equalizer presets (e.g., Normal, Classic, Jazz, Pop, Rock) or a custom setting.

6.9 Alarm Clock, Snooze, and Sleep Timer



DUAL ALARMS CLOCK/SLEEP/SNOOZE

Dual independent alarms to schedule your alarms/snooze/sleep timer, take your favorite radio stations or music as the alarm ringtone to wake you up.

The LEMEGA MSY2 unit on a bedside table, displaying a clock face on its screen, highlighting its dual alarm, sleep, and snooze functions.

The MSY2 features two independent alarms.

1. **Setting Alarms:** Press the **Alarm** button. Follow the on-screen prompts to set alarm time, source (buzzer, DAB, or FM), and frequency (daily, weekdays, weekends).
2. **Snooze:** When an alarm sounds, press the **Snooze** button to temporarily silence it.
3. **Sleep Timer:** Press the **Sleep** button to set a timer for the unit to automatically turn off after a specified duration.

6.10 Display Settings

Adjust the display brightness:

1. Press the **Dim** button to cycle through brightness levels (low, medium, high) or access display settings via the menu.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Storage:** If storing the unit for an extended period, disconnect it from the power supply.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Check power connections. Try a different outlet.
Poor radio reception	Antenna not extended or weak signal.	Fully extend the telescopic antenna. Reposition the unit for better signal.
CD not playing	CD inserted incorrectly, dirty, or unsupported format.	Ensure CD is inserted correctly. Clean the CD. Verify CD type (CD, CD-R, CD-RW only).
Bluetooth pairing failed	Device too far, Bluetooth not enabled, or already paired.	Ensure device is within range. Enable Bluetooth on your device. Forget previous pairings and try again.
No sound	Volume too low, mute activated, or incorrect source selected.	Increase volume. Check if mute is active. Ensure correct audio source is selected.







9. SPECIFICATIONS

Feature	Detail
Brand	LEMEGA
Model Number	4K-ED4922
Connectivity Technology	Auxiliary, Bluetooth
Supported Standards	CD, CD-R, CD-RW, DAB/DAB+, FM, MP3 (via USB)
Speaker Type	Stereo
Number of Speakers	2
Audio Output Mode	Stereo
Power Source	Powered by mains adapter (not battery)
USB Charging Output	1A
Display	2.4-inch Color Display

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official LEMEGA website. Keep your proof of purchase for warranty claims.

Related Documents - MSY2

	<p>LEMEGA M5P Music System User Manual - CD, DAB, Internet Radio, Bluetooth</p> <p>Comprehensive user manual for the LEMEGA M5P Music System. Learn how to set up, operate, and troubleshoot your CD player, DAB radio, internet radio, Bluetooth streamer, and more. Includes safety instructions, control descriptions, connectivity options, and technical specifications.</p>
	<p>LEMEGA MSY6 All-in-One Music System Owner's Manual</p> <p>Comprehensive owner's manual for the LEMEGA MSY6 All-in-One Music System, covering safety instructions, features, operation, troubleshooting, and technical specifications.</p>
	<p>LEMEGA MSY6 All-in-One Music System Owner's Manual</p> <p>Comprehensive owner's manual for the LEMEGA MSY6 All-in-One Music System, covering safety instructions, setup, operation of CD, DAB, FM, Bluetooth, USB playback, and technical specifications.</p>
	<p>LEMEGA MSY6 All-in-One Music System Owner's Manual</p> <p>This owner's manual provides comprehensive instructions for the LEMEGA MSY6 All-in-One Music System, covering safety, setup, operation of FM, DAB, CD, Bluetooth, and USB playback, as well as troubleshooting and technical specifications.</p>
	<p>LEMEGA M5+ Smart Audio System User Manual</p> <p>Comprehensive user manual for the LEMEGA M5+ Smart Audio System, covering setup, features, operation of Internet radio, DAB, FM, Spotify Connect, Bluetooth, CD playback, alarms, troubleshooting, and technical specifications.</p>
	<p>LEMEGA M3P Smart Radio with Bluetooth User Manual</p> <p>This user manual provides comprehensive instructions for the LEMIGA M3P Smart Radio with Bluetooth, covering setup, features, operation of various modes (Internet Radio, DAB, FM, Bluetooth, Spotify Connect), alarms, sleep functions, software updates, troubleshooting, and technical specifications.</p>

 
Documents - LEMEGA – MSY2



[LE MEGA MSY2 All-in-One Music System User Manual](#)

Comprehensive user manual for the LE MEGA MSY2 All-in-One Music System, covering setup, features, operation of DAB/FM radio, Bluetooth, USB, CD playback, alarms, troubleshooting, and technical specifications.

lang:en score:39 filesize: 620.45 K page_count: 20 document date: 2021-04-19

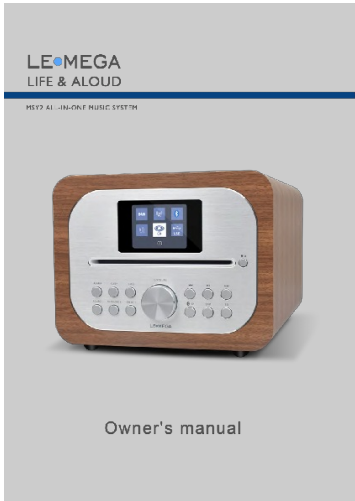


[\[pdf\]](#) User Manual

Jwoodaudio User Manual LEMEGA MSY2 DAB Radio with CD Player Bluetooth Hi Fi Compact Music System FM Digital Headphone out USB charger MP3 player Dual Alarms Clock Remote control Walnut Electronics Photo C12XqUgoJYL m media amazon images I |||

Table of content 1. Introduction 3 1.1 ... d for 60 seconds and then plug it back in firmly. 1.2 Features This manual describes how to use the **MSY2**: DAB/DAB digital radio with a wide choice of channels and digital quality sound broadcast fre...

 lang:en score:39 filesize: 5.44 M page_count: 20 document date: 2022-06-24

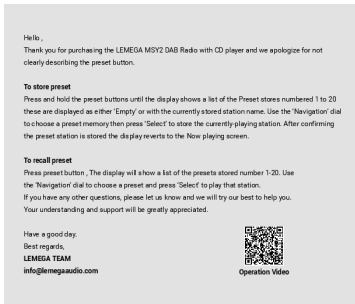


[\[pdf\]](#) Frequently Asked Questions Recall

MSY2 LEMEGA CD Player FM Digital Radio Bluetooth Speaker Wooden Box Headphone Out USB Charger MP3 Alarms and Clock Colour Display Remote Control Black Oak Finish FAQ 81MUF8Je4hL m media amazon images I |||

Hello , Thank you for purchasing the LEMEG**AMSY2** DAB Radio with CD player and we apologize for not clearly describing the preset button. To store preset Press and hold the preset buttons until the display shows a list of the Preset stores numbered 1 to 20 these are displayed as either Empty or wi...

 lang:en score:33 filesize: 433.9 K page_count: 1 document date: 2022-04-09

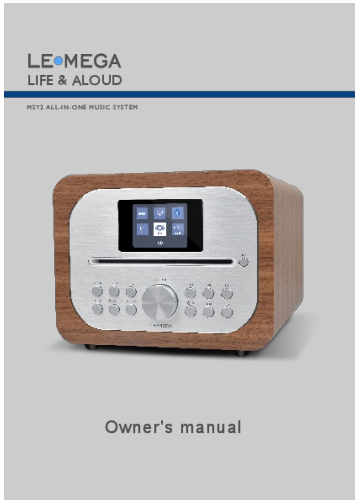

[\[pdf\]](#) User Manual Owner's Manual

Jwoodaudio Owner s manual c518d70bdc8ba4107ed7059475df84e lemegaaudio d file Support Owners 2022 04 07 |||

LIFE ALOUD **MSY2** ALL-IN-ONE MUSIC SYSTEM Owner s manual Table of content 1. Introduction 3 1.1 Safety 3 1.2 Features 5 ...

lang:en score:32 filesize: 20.19 M page_count: 20 document date: 2020-09-07




[\[pdf\]](#)

Jwoodaudio Bedienungsanleitung 1 Einleitung 2 Bedienelemente Anschlüsse und Display 3 Starten einrichten ad5a7ee7f1ee5724acd5c092e9601d22 lemegaaudio d file Support Owners 2021 11 17 |||

MSY2 ALL-IN-ONE-MUSIKSYSTEM Bedienungsanleitung Inhalt

1 Einleitung	
3 1.1 Sicherheitshinweise	
3 1.2 Merkmale	

 lang:de score:21 filesize: 674.05 K page_count: 18 document date: 2020-11-13

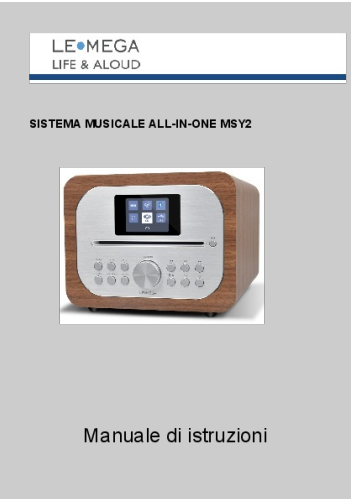

[\[pdf\]](#)

Jwoodaudio fb2c7026991a5b95ddcf43a33c6e2953 lemegaaudio d file Support Owners 2023 03 18 |||
SISTEMA MUSICALE ALL-IN-ONE MSY2 Manuale di istruzioni Indice 1 Introduzione

3 1.1 Istruzioni per la sicurezza	
3 1.2 Caratteristiche	

lang:it score:21 filesize: 710.23 K page_count: 18 document date: 2020-11-25



[\[pdf\]](#) Instructions

Jwoodaudio 915d70984ae8e89013951141ed57c938 lemegaaudio d file Support Owners 2023 03 18

|||

SYSTME DE MUSIQUE TOUT EN UN **MSY2** Manuel de l'utilisateur Table des
matires 1 Introduction 3 1.1
Instructions de scurit 3 1.2 Caractr...
lang:fr score:20 filesize: 713.25 K page_count: 18 document date: 2020-11-24