

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Globber](#) /

› [Globber One K 125 Kick Scooter User Manual](#)

Globber One K 125 (670-110-2)

Globber One K 125 Kick Scooter User Manual

Model: One K 125 (670-110-2)

INTRODUCTION

The Globber One K 125 is a high-quality kick scooter designed for urban commuting and recreational use. It features a patented 1-second kick and fold system for effortless portability, making it ideal for users on the go. The robust aluminum deck with a non-slip grip band ensures stability, while the aluminum rear brake provides efficient stopping power and extends wheel durability. This compact scooter is equipped with a 3-way height-adjustable aluminum T-bar, foldable handlebars, and an anti-shock clamp for a comfortable ride. Its highly reflective print design enhances visibility, and the ergonomic two-tone TPR handlebar grips offer superior comfort. The scooter is fitted with strong 125mm (35mm wide) PU cast wheels mounted on ABEC 7 bearings for a smooth and reliable experience.

SAFETY INFORMATION

Please read and understand all safety instructions before operating the Globber One K 125 scooter. Failure to do so may result in serious injury.

- Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Ensure all clamps, bolts, and quick-release mechanisms are securely tightened before each ride.
- Do not ride in wet conditions, on uneven surfaces, or at night without adequate lighting.
- Observe all local traffic laws and regulations.
- The maximum weight limit for this scooter is 100 kilograms (220 pounds). Do not exceed this limit.
- Adult supervision is recommended for younger riders.
- Avoid riding on public roads with heavy traffic.
- Regularly inspect the scooter for wear and tear, especially the wheels, bearings, and brake system.

PARTS LIST

The Globber One K 125 scooter comes with the following components:

- Globber One K 125 Scooter (pre-assembled)
- Wrench for minor adjustments
- User Manual





Image: The Globber One K 125 scooter in its fully unfolded, ready-to-ride state, showcasing its pink frame, black wheels, and adjustable T-bar.

SETUP AND ASSEMBLY

The Globber One K 125 scooter comes largely pre-assembled. Follow these steps for initial setup:

- 1. Unboxing:** Carefully remove the scooter and any accessories from its packaging. Retain packaging for future storage or transport if needed.
- 2. Unfolding the Scooter:**
 - Locate the patented 1-second kick and fold system mechanism, usually near the front wheel or base of the T-bar.
 - Press the release button or lever and gently pull the T-bar upwards until the scooter clicks into its fully upright, locked position. Ensure it is securely locked before use.



Image: The Globber One K 125 scooter in its compact, folded state, showing the handlebars tucked down and the deck folded for easy carrying or storage.

- 3. Adjusting Handlebar Height:**
 - Loosen the quick-release clamp on the T-bar stem.
 - Adjust the T-bar to one of the three height settings, ensuring the spring-loaded pin clicks securely into place.
 - Tighten the quick-release clamp firmly to prevent the T-bar from slipping during use.
- 4. Handlebar Grips:** Ensure the ergonomic two-tone TPR handlebar grips are securely in place and not rotating freely.

OPERATING INSTRUCTIONS

Riding the Scooter

- Place one foot firmly on the deck of the scooter.
- Use your other foot to push off the ground, gaining momentum.
- Once moving, place both feet on the deck, one behind the other, or side-by-side if comfortable.

- Steer by leaning your body and gently turning the handlebars.

Braking

The Globber One K 125 is equipped with an aluminum rear brake.

- To slow down or stop, gently press your foot down on the rear fender brake located above the back wheel.
- Apply gradual pressure to avoid sudden stops, which can lead to loss of balance.

Folding for Transport and Storage

To fold the scooter for easy transport or storage:

1. Ensure the scooter is stationary and on a flat surface.
2. Locate the folding mechanism (the same one used for unfolding).
3. Activate the release mechanism and gently push the T-bar downwards until the scooter folds into its compact position. Ensure it locks securely in the folded state.
4. The handlebars can also be folded down for an even more compact form. Loosen the clamp on the handlebars, fold them inwards, and re-tighten the clamp.



Image: The Globber One K 125 scooter in its most compact folded configuration, ideal for storage or carrying, showing the T-bar and handlebars folded down.

Trolley Mode

The Globber One K 125 is designed with a trolley mode for effortless transportation when not riding.

- Once folded, the scooter can be easily pulled along like a trolley, utilizing its wheels. This feature is particularly useful for navigating crowded areas or public transport.

MAINTENANCE

Regular maintenance will ensure the longevity and safe operation of your Globber One K 125 scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth after use. Avoid using harsh chemicals or abrasive cleaners. Do not hose down the scooter.
- **Wheel and Bearing Inspection:** Regularly check the wheels for wear and tear. Ensure they spin freely. If bearings feel rough or noisy, they may need cleaning or replacement.
- **Brake Check:** Verify that the rear brake is functioning effectively. Ensure the brake pad is not excessively worn.

- **Tighten Bolts and Clamps:** Periodically check all bolts, screws, and quick-release clamps (especially on the T-bar and folding mechanism) and tighten them if necessary using the provided wrench. Loose components can affect performance and safety.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Scooter not unfolding/folding smoothly.	Mechanism is stiff or dirty.	Apply a small amount of silicone-based lubricant to the folding mechanism. Ensure no debris is obstructing the movement.
Brake not effective.	Brake pad worn, or mechanism loose.	Check the wear of the rear brake pad. If worn, it may need replacement. Ensure the brake mechanism is clean and free of debris.
Wheels not spinning freely or making noise.	Dirty or damaged bearings.	Clean the wheels and bearings. If noise persists or wheels don't spin well, bearings may need replacement.
Handlebar slips down during use.	Quick-release clamp is not tight enough.	Fully open the quick-release clamp, ensure the T-bar is at the desired height with the pin engaged, then close the clamp firmly. Adjust the tension screw on the clamp if necessary.

SPECIFICATIONS



Image: A top-down view of the Globber One K 125 scooter, highlighting the non-slip deck with the "GLOBBER" logo and the ergonomic handlebar grips.

Brand: Globber

Model Name: One K 125

Item Model Number: 670-110-2

Color: Pink

Weight Limit: 100 Kilograms (220 lbs)

Number of Wheels: 2

Wheel Material: Polyurethane (PU)

Frame Material: Aluminum

Item Weight: 4.1 Kilograms (9.02 pounds)

Handlebar Type: Adjustable (3-way height)

Wheel Size: 125 Millimeters

Wheel Type: Solid

Suspension Type: Rigid

Grip Type: TPR (Thermo-Plastic Rubber)

Brake Style: Rear Braking (Aluminum)

Product Dimensions (L x W x H): Approximately 19.79 x 9.15 x 14.27 inches (folded/packaged)

Special Feature: Patented 1-second kick & fold system, Trolley mode compatible, Highly reflective print design, Non-slip deck.

WARRANTY AND SUPPORT

Warranty Information

The Globber One K 125 scooter comes with a **Lifetime Warranty**. Please refer to the official Globber website or your purchase documentation for full details regarding warranty terms and conditions, including what is covered and any exclusions.

Customer Support

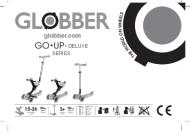
For further assistance, technical support, or spare parts, please contact Globber customer service. You can typically find contact information on the official Globber website (www.globber.com) or through the retailer where you purchased the product.

When contacting support, please have your product model number (One K 125, 670-110-2) and proof of purchase readily available.

© 2024 Globber. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - One K 125 (670-110-2)

	<p><u>Globber Elite Deluxe Lights Scooter - User Information</u></p> <p>Information about the Globber Elite Deluxe Lights scooter, including its features, specifications, and safety guidelines. This scooter is designed for children aged 3 and up, with a maximum weight capacity of 50kg.</p>
	<p><u>Globber GO-UP-DELUXE Series 3-in-1 Scooter User Manual</u></p> <p>Comprehensive user manual for the Globber GO-UP-DELUXE Series scooter, detailing assembly, safety guidelines, usage modes (ride-on, walking bike, scooter), and maintenance for children.</p>
	<p><u>Globber ONE K E-MOTION.23 Foldable Electric Scooter User Manual</u></p> <p>Comprehensive user manual for the Globber ONE K E-MOTION.23 foldable electric scooter, covering specifications, safety guidelines, maintenance, and troubleshooting. Features 350W motor, 25 km/h max speed, and 100kg max user weight.</p>
	<p><u>Globber GO-UP DELUXE Series User Manual</u></p> <p>Comprehensive user manual for the Globber GO-UP DELUXE series scooters, detailing assembly, usage, safety instructions, and maintenance for various modes including ride-on, walking bike, and scooter.</p>
	<p><u>Globber My Free Kolobežka IN AU370 - Užívateľský Manuál</u></p> <p>Kompletný užívateľský manuál pre kolobežku Globber My Free (model IN AU370) od inSPORTline. Obsahuje technické špecifikácie, bezpečnostné pokyny, návod na montáž, údržbu a záručné podmienky.</p>
	<p><u>Startfun X3 Pro Electric Scooter User Manual</u></p> <p>Comprehensive user manual for the Startfun X3 Pro electric scooter for kids, covering specifications, assembly, riding instructions, safety tips, and warranty information.</p>