

[Manuals.plus](#) /

› [Necchi](#) /

› Necchi NC10 Sewing Machine Instruction Manual

Necchi NC10

Necchi NC10 Sewing Machine Instruction Manual

Model: NC10

1. INTRODUCTION

Welcome to the instruction manual for your new Necchi NC10 sewing machine. This manual provides essential information for the safe and efficient operation, setup, maintenance, and troubleshooting of your machine. Please read this manual thoroughly before using the machine to ensure proper function and to prevent damage or injury.

The Necchi NC10 is a practical and compact coverstitch machine designed for various sewing tasks. It offers high operational efficiency and the capability to handle diverse fabric types, from delicate to thick materials like wool. Its robust construction, ease of use, and quiet operation make it a versatile tool for your sewing projects.



Figure 1: Front view of the Necchi NC10 Coverstitch Machine. This image displays the machine's compact design, including the threading guides, presser foot, needle area, and control dials on the right side. Stitch diagrams are visible on the front panel.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage to the machine, please observe the following safety guidelines:

- Always use the product in environments protected from humidity. Avoid operating the machine near water or in damp conditions.
- This appliance is not intended for use by children under 8 years of age. Children should be supervised to ensure they do not play with the appliance.
- Always unplug the machine from the power outlet when not in use, when cleaning, or when performing maintenance.
- Keep fingers away from all moving parts, especially the needle, looper, and cutting blades.
- Use only accessories recommended by the manufacturer.
- Never operate the machine if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.

- Do not pull on the power cord to unplug the machine; grasp the plug itself.
- Ensure the machine is placed on a stable, level surface during operation.

3. PRODUCT FEATURES

The Necchi NC10 coverstitch machine is equipped with several features designed to enhance your sewing experience:

- **7 Sewing Programs:** Includes various coverstitch options and a 3-position chain stitch.
- **Easy Threading:** Features color-coded threading paths for simplified setup.
- **Integrated Thread Cutter:** For convenient thread trimming after sewing.
- **Adjustable Coverstitch Width:** Ranging from 3 mm to 6 mm.
- **Adjustable Stitch Length:** From 0.5 mm to 4 mm.
- **Differential Feed Adjustment:** Range of 0.5-2.5 for managing various fabric types and preventing stretching or puckering.
- **Adjustable Presser Foot Pressure:** Allows for optimal handling of different fabric thicknesses.
- **Robust Construction:** Die-cast aluminum interior with an ABS shell for durability.

4. SETUP

4.1 Unpacking and Placement

1. Carefully remove the machine from its packaging. Retain the packaging for future storage or transport.
2. Place the Necchi NC10 on a stable, flat surface, ensuring adequate space around the machine for comfortable operation.
3. Connect the foot pedal and power cord to the machine and then to a suitable electrical outlet.

4.2 Threading the Machine

The NC10 features a color-coded threading system to simplify the process. Refer to the diagrams on the machine's front panel and follow the corresponding color paths for each thread.

- Raise the presser foot and needle to their highest positions.
- Place the thread spools on the spool pins.
- Follow the color-coded guides for each thread, ensuring proper tension disc engagement.
- Thread the loopers and needles according to the specific stitch program you intend to use. The side cover can be opened to access the looper area for easier threading.

5. OPERATING INSTRUCTIONS

5.1 Selecting Stitch Programs

The Necchi NC10 offers 7 different sewing programs, including various coverstitch types (narrow, wide, triple) and a chain stitch. Select the desired program using the control dials on the machine, referring to the stitch diagrams for guidance.

5.2 Adjusting Stitch Settings

- **Stitch Length:** Adjust the stitch length dial to set the desired length between 0.5 mm and 4 mm.
- **Coverstitch Width:** The coverstitch width can be adjusted between 3 mm and 6 mm.
- **Differential Feed:** Use the differential feed dial to adjust the fabric feeding ratio (0.5-2.5). This is crucial for working with stretchy or delicate fabrics to prevent stretching or puckering.

- **Presser Foot Pressure:** The presser foot pressure can be adjusted to match the thickness of your fabric, ensuring smooth feeding and consistent stitches.
- **Thread Tension:** Fine-tune the individual thread tensions as needed for balanced stitches.

5.3 Sewing

1. Place the fabric under the presser foot.
2. Lower the presser foot.
3. Gently press the foot pedal to start sewing. Guide the fabric smoothly.
4. Upon completion, lift the presser foot, pull the fabric away, and use the integrated thread cutter to snip the threads.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Necchi NC10 machine.

6.1 Cleaning

- Always unplug the machine before cleaning.
- Use a soft brush to remove lint and dust from the feed dogs, looper area, and around the needle plate.
- Wipe the exterior of the machine with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

6.2 Needle Replacement

- Turn off and unplug the machine.
- Loosen the needle clamp screw and remove the old needle.
- Insert a new needle, ensuring the flat side of the needle faces the back of the machine, and push it up as far as it will go.
- Tighten the needle clamp screw securely.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Necchi NC10.

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading, incorrect tension.	Replace needle with correct type/size, re-thread machine carefully, adjust tension.
Thread Breakage	Incorrect threading, too much tension, poor quality thread, burrs on thread path.	Check threading, reduce tension, use quality thread, inspect thread path for obstructions.
Uneven Stitches / Puckering	Incorrect differential feed setting, improper presser foot pressure, tension imbalance.	Adjust differential feed, adjust presser foot pressure, balance thread tensions.
Machine Not Starting	Power cord not plugged in, foot pedal not connected, main power switch off.	Check all power connections, ensure main switch is on.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact customer support.

8. SPECIFICATIONS

- **Brand:** Necchi

- **Model Number:** NC10
- **Color:** White
- **Product Dimensions (L x W x H):** 35 x 29 x 31 cm
- **Item Weight:** 7 Kilograms
- **Material:** Die-cast aluminum interior, ABS shell
- **Power Source:** Electric cable
- **Automatic Stop Function:** No
- **Stitch Programs:** 7 (including narrow, wide, triple coverstitch, and 3-position chain stitch)
- **Coverstitch Width:** 3 mm to 6 mm
- **Stitch Length Adjustment:** 0.5 mm to 4 mm
- **Differential Feed Adjustment:** 0.5 - 2.5
- **Presser Foot Pressure:** Adjustable

9. WARRANTY AND SUPPORT

Necchi provides support for its products. Spare parts for the Necchi NC10 are available for a period of 10 years from the date of purchase.

For warranty claims, technical assistance, or further inquiries, please refer to the contact information provided with your purchase documentation or visit the official Necchi website.

© 2023 Necchi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question