

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PHILCO](#) /

› [PHILCO Digital Multifunctional Pressure Cooker Gold PPP05G User Manual](#)

## PHILCO PPP05G

# PHILCO Digital Multifunctional Pressure Cooker Gold PPP05G User Manual

Model: PPP05G | Brand: PHILCO

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the PHILCO Digital Multifunctional Pressure Cooker Gold PPP05G. Retain this manual for future reference.

- **Voltage Compatibility:** Ensure the electrical grid voltage matches the product's specified voltage (127 Volts) before connecting. Incorrect voltage can cause damage or injury.
- **Supervision:** Close supervision is necessary when the pressure cooker is used by or near children.
- **Hot Surfaces:** Do not touch hot surfaces. Use handles or knobs.
- **Pressure Release:** Always ensure the pressure has been fully released before opening the lid.
- **Proper Use:** Use the appliance only for its intended household purpose.
- **Maintenance:** Do not attempt to repair or disassemble the appliance yourself. Refer to qualified service personnel.

## 2. PRODUCT OVERVIEW

The PHILCO Digital Multifunctional Pressure Cooker Gold PPP05G is designed for efficient and convenient cooking. It features a digital control panel and multiple preset functions.



Figure 2.1: Front view of the PHILCO Digital Multifunctional Pressure Cooker Gold PPP05G, showcasing its digital display and control panel with various cooking functions.

### Components:

- **Main Unit:** The outer casing housing the heating element and control panel.
- **Inner Pot:** A removable, non-stick stainless steel pot for cooking.
- **Lid:** Features a safety lock and pressure release valve.
- **Condensation Collector:** Gathers excess moisture during cooking.
- **Power Cord:** Removable for easy serving and storage.
- **Accessories:** Includes a measuring cup and a rice spoon.



Figure 2.2: The inner pot being carefully placed into the main unit of the pressure cooker.



Figure 2.3: Close-up of the removable non-stick inner pot, showing internal measurement markings for precise ingredient quantities.



Figure 2.4: Rear view of the pressure cooker, highlighting the transparent condensation collector which should be emptied after each use.



Figure 2.5: The included rice spoon, designed for serving cooked rice without damaging the inner pot's non-stick coating.

### 3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and accessories.

2. **Cleaning:** Wash the inner pot, lid, and accessories with warm soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.
3. **Placement:** Place the pressure cooker on a stable, level, heat-resistant surface, away from heat sources and water.
4. **Insert Inner Pot:** Place the clean inner pot into the main unit.
5. **Connect Power:** Insert the removable power cord into the appliance and then into a compatible electrical outlet.

## 4. OPERATING INSTRUCTIONS

The PHILCO Digital Multifunctional Pressure Cooker offers various cooking functions. Always ensure the lid is properly closed and locked before starting any pressure cooking program.

### General Operation:

1. **Add Ingredients:** Place your ingredients and liquids into the inner pot. Do not exceed the MAX fill line.
2. **Close Lid:** Place the lid on the cooker and rotate it clockwise until it locks into place. Ensure the pressure release valve is set to the 'Sealing' position for pressure cooking.
3. **Select Function:** Use the digital control panel to select your desired cooking function (e.g., Rice, Beans, Meat, Soup).
4. **Adjust Time/Pressure (if applicable):** Some functions allow for manual adjustment of cooking time or pressure level. Refer to specific recipe guidelines.
5. **Start Cooking:** Press the 'Start' button to begin the cooking cycle. The cooker will automatically build pressure.
6. **Pressure Release:** Once cooking is complete, allow the pressure to release naturally or use the quick release method (refer to safety guidelines for quick release).
7. **Open Lid:** Once pressure is fully released, rotate the lid counter-clockwise to open.

### Specific Functions:

- **Pressure Cooking:** Ideal for fast cooking of beans, meats, and stews.
- **Slow Cooking:** Use for recipes requiring longer cooking times at lower temperatures.
- **Sauté/Sear:** Allows browning ingredients before pressure cooking.
- **Keep Warm:** Automatically activates after cooking to maintain food temperature.
- **Delay Start:** Program the cooker to start at a later time (up to 24 hours).

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your pressure cooker.

1. **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Inner Pot:** Wash the non-stick inner pot with warm soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads.
3. **Lid:** Wash the lid, including the sealing ring and pressure release valve, with warm soapy water. Ensure all food particles are removed from the valve mechanism.
4. **Sealing Ring:** Periodically remove the silicone sealing ring from the lid for thorough cleaning. Ensure it is properly reinstalled before next use.
5. **Condensation Collector:** Remove and empty the condensation collector after each use. Wash it with

warm soapy water.

6. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or any other liquid.
7. **Storage:** Store the clean and dry pressure cooker in a cool, dry place.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cooker not building pressure.	Lid not properly closed or sealing ring not correctly installed. Pressure release valve in 'Venting' position. Insufficient liquid.	Ensure lid is fully locked. Check and adjust sealing ring. Set valve to 'Sealing'. Add more liquid if necessary.
Steam leaking from lid.	Sealing ring damaged or dirty. Food debris on lid rim.	Clean or replace sealing ring. Clean lid rim thoroughly.
Food is undercooked.	Insufficient cooking time. Not enough liquid.	Increase cooking time. Ensure adequate liquid for pressure to build.
Digital display not working.	Power cord not connected. Power outage.	Check power cord connection. Verify power outlet is functional.

## 7. SPECIFICATIONS

- **Brand:** PHILCO
- **Model:** PPP05G
- **Capacity:** 1 Liter
- **Voltage:** 127 Volts
- **Wattage:** 900 Watts
- **Material:** Stainless Steel
- **Product Dimensions:** 32 x 34.5 x 31 cm
- **Product Weight:** 4.84 kg
- **Energy Efficiency Label (ENCE):** A



Figure 7.1: INMETRO and SGS certification logos, indicating compliance with Brazilian safety standards.

## 8. WARRANTY AND SUPPORT

 
For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official PHILCO website.

**Manufacturer: PHILCO**

**Customer Service:** Please consult your local PHILCO service center for assistance.

© 2023 PHILCO. All rights reserved.

## Related Documents - PPP05G

 <p>USER MANUAL 用戶手冊 PC 900 SLE</p>	<p><a href="#"><u>Philco PC900SLE Range Hood User Manual and Installation Guide</u></a> Comprehensive user manual and installation guide for the Philco PC900SLE range hood, covering safety, operation, maintenance, and troubleshooting.</p>
 <p>Induction Hob Instruction Manual / Installation Manual MODEL PH2740IC</p>	<p><a href="#"><u>Philco PH2740IC Induction Hob: Instruction and Installation Manual</u></a> Comprehensive guide for the Philco PH2740IC Induction Hob, covering safety, installation, operation, features, troubleshooting, and maintenance. Learn how to use your induction cooktop safely and efficiently.</p>
 <p>FOOD DEHYDRATOR SUŠIČKA POTRAVÍN SUŠIČKA POTRAVÍN SUSZARKA DO ZYWOŃŚCI</p> <p>PHFD 5080</p> <p>Open Manual Otevřít Manuál Otwórz Manuał</p>	<p><a href="#"><u>PHILCO PHFD 5080 Food Dehydrator User Manual</u></a> Comprehensive user manual for the PHILCO PHFD 5080 Food Dehydrator, detailing operation, safety, care, and troubleshooting for optimal food drying.</p>
 <p>INDUKČNÍ VARNÁ DESKA NAVOD K OBSLUZE</p> <p>PHILCO Famous for Quality the World Over</p> <p>PHD 640 EIP</p>	<p><a href="#"><u>Návod k obsluze indukční varné desky Philco PHD 640 EIP</u></a> Podrobný návod k obsluze pro indukční varnou desku Philco PHD 640 EIP. Obsahuje informace o bezpečnosti, popisu spotřebiče, provozu, vaření, instalaci a řešení poruch.</p>

Documents - PHILCO – PPP05G



## [pdf] User Manual

Top Grill Alexandre Kubrak panela de pressao multifuncional digital gold ppp05g Prepara diversos tipos de alimentos feijão carnes arroz canjica legumes entre outros Painel com controle e fácil acesso as funções UTF 8 Q ficha t C3 A9cnica press A3o PPP 05G Gold britania my site CA sfc servlet shepherd document 0692T00000DmfgsQAB |||

Reviso: 01 / Data:23/07/2020 PANELA DE PRESSAO MULTIFUNCIONAL DIGITAL GOLD **PPP05G** CAPACIDADE DE 5 LITROS PAINEL COM DISPLAY DIGITAL 9 SISTEMAS DE SEGURANÇA Apelo Comercial Painel com display digital Revestimento Maxx Gold Função temporizador Função manter aquecido Função refogar Função cozimento lento Função aquecer

lang:pt score:25 filesize: 178.36 K page\_count: 3 document date: 2022-09-09