

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Analog Gray Dial Men's Watch-CB5886-58H User Manual

Citizen CB5886-58H

Citizen Analog Gray Dial Men's Watch - CB5886-58H

USER INSTRUCTION MANUAL

Product Overview

The Citizen CB5886-58H is a sophisticated men's watch featuring Eco-Drive technology, which powers the watch using any light source, eliminating the need for battery replacement. It boasts radio-controlled atomic clock synchronization for exceptional accuracy across 24 time zones. Key functions include a chronograph, perpetual calendar, dual time zones, and a power reserve indicator. The watch is designed with a durable two-tone stainless steel bracelet, a gray dial, and an anti-reflective sapphire crystal for enhanced readability and scratch resistance.



Figure 1: Front view of the Citizen CB5886-58H watch. This image displays the watch's gray dial, two-tone stainless steel bracelet, and the various sub-dials and indicators for its advanced functions.

Setup and Initial Configuration

Before first use, ensure your watch is adequately charged and synchronized. The Eco-Drive technology requires exposure to light for optimal performance.

1. Initial Charge

Place the watch in a location where the dial is exposed to bright light (natural sunlight is ideal, but artificial light also works). Avoid extreme heat. For a full charge from a completely depleted state, exposure to direct sunlight for several hours may be required. The power reserve indicator will show the current charge level.

2. Radio-Controlled Time Synchronization

This watch automatically synchronizes with atomic clocks via radio signals to maintain precise time. For best reception, place the watch near a window at night, away from electronic devices that may cause interference. Manual

synchronization can also be initiated if needed, typically by holding a specific button (refer to the detailed function guide for button assignments).

3. Setting Time Zone and Date

The watch supports 24 time zones. Adjust your home city setting to ensure the correct time zone is displayed. The perpetual calendar automatically adjusts for month lengths and leap years, so manual date adjustment is rarely needed once the home city is set correctly.

Operating Functions

The CB5886-58H offers a range of advanced functions accessible via its crown and pushers.

1. Basic Timekeeping

The main hands display the current time. The watch features luminous hands and markers for visibility in low-light conditions.



Figure 2: Luminous display of the watch in low light. The hands and hour markers glow brightly, ensuring readability in dark environments.

2. Chronograph Operation

The chronograph function allows for precise timing of events. Typically, the upper pusher starts and stops the chronograph, while the lower pusher resets it. Sub-dials on the watch face display elapsed time in seconds, minutes, and hours.

3. Dual Time Zones

This feature allows you to view the time in a second time zone simultaneously, ideal for travelers or those communicating across different regions. Consult the full manual for specific instructions on setting and switching between time zones.

4. Power Reserve Indicator

A dedicated indicator on the dial shows the watch's current power reserve, helping you ensure it remains adequately charged. When the indicator is low, expose the watch to light.

Maintenance and Care

Proper care will extend the life and maintain the appearance of your Citizen watch.

1. Cleaning

Wipe the watch case and bracelet regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive materials.

2. Water Resistance

The watch has a water resistance rating of WR 200 (20 Bar), making it suitable for swimming and professional marine activity, but not for diving. Ensure the crown is pushed in completely before exposing the watch to water. Do not operate the crown or pushers underwater.

3. Eco-Drive Power Source

As an Eco-Drive watch, it is powered by light and does not require battery replacement. To maintain optimal performance, avoid prolonged storage in dark places. Regular exposure to light is sufficient.

4. Bracelet Care

The stainless steel bracelet can be cleaned with a soft brush and mild soapy water if necessary, then rinsed thoroughly and dried. Avoid bending or twisting the bracelet excessively.



Figure 3: Side view of the watch. This image highlights the watch's profile, including the crown and chronograph pushers, which are essential for operating its various functions.

Troubleshooting

If you encounter issues with your watch, refer to the following common solutions.

- **Watch not running or hands not moving:** Ensure the watch is adequately charged by exposing it to bright light for several hours. Check the power reserve indicator.
- **Time is inaccurate or not synchronizing:** Place the watch near a window overnight for better radio signal reception. Avoid areas with strong electromagnetic interference. You may need to manually initiate synchronization or reset the home city setting.
- **Chronograph hands not resetting to zero:** Perform a chronograph zero-reset procedure. This typically involves pulling the crown out to a specific position and pressing the pushers to align the hands. Refer to the detailed manual for exact steps.
- **Date is incorrect:** While the perpetual calendar adjusts automatically, ensure your home city and time zone are correctly set. If the watch has been without light for an extended period, it may need to be reset.

For persistent issues, please contact Citizen customer support.

Specifications

Feature	Detail
Model Number	CB5886-58H
Movement Type	Eco-Drive (Light-Powered)
Dial Color	Gray
Dial Material	Stainless Steel
Strap Color	Grey (Bicolor)
Strap Material	Stainless Steel
Case Diameter	42 Millimetres
Water Resistance	WR 200 (20 Bar)
Calendar Type	Perpetual Calendar
Weight	182 Grams
Dimensions (LxWxH)	9 x 12 x 9 Centimeters
Crystal	Anti-reflective Sapphire



Figure 4: Rear view of the watch. This image displays the engraved case back, which includes details such as the Eco-Drive logo, water resistance rating, and model information.

Warranty Information

Your Citizen CB5886-58H watch comes with comprehensive warranty coverage:

- **International Warranty:** 1 Year
- **India Warranty:** 3 Years, 3 Months, 3 Days

The warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your watch or visit the official Citizen website.

Customer Support

For any inquiries, service requests, or technical assistance regarding your Citizen watch, please contact the authorized service center or importer:

Importer: Citizen Watches India Pvt Ltd
Address: #299, 6th Main, HAL 2nd Stage, Indiranagar, Bangalore 560038, Karnataka, India
Contact Number: +918043473777
Email: enquire@citizenwatches.co.in

Please have your watch model number (CB5886-58H) and purchase details ready when contacting support.

© 2024 Citizen Watch Co., Ltd. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

