

[manuals.plus](#) /› [Marshall](#) /› [Marshall Major IV Bluetooth Headphones User Manual](#)**Marshall 1005773**

Marshall Major IV Bluetooth Headphones User Manual

Model: 1005773

INTRODUCTION

Welcome to the Marshall Major IV Bluetooth Headphones user manual. This guide provides essential information on how to set up, operate, maintain, and troubleshoot your Major IV headphones. Designed for an immersive audio experience, the Major IV combines Marshall's signature sound with over 80 hours of wireless playtime and convenient features like wireless charging and a multi-directional control knob.



Front view of the Marshall Major IV Bluetooth Headphones.



Angled front view of the Marshall Major IV Bluetooth Headphones.



Side view of the Marshall Major IV Bluetooth Headphones.



Back view of the Marshall Major IV Bluetooth Headphones.

Product Overview Video

This video provides a brief overview of the Marshall Major IV headphones, highlighting key features such as signature sound, extended wireless playtime, wireless charging, multi-directional control knob, and collapsible design.

WHAT'S IN THE Box

Your Marshall Major IV headphones package includes the following items:

- Marshall Major IV Headphones
- 3.5 mm Audio Cable
- USB-C Charging Cable
- User Manual and Legal & Safety Information



All components included in the Marshall Major IV package.

Unboxing Video

This video demonstrates the unboxing process of the Marshall Major IV headphones, showing all included accessories and how the headphones unfold from their compact state.

SETUP

Charging the Headphones

Before first use, fully charge your Major IV headphones. They offer both USB-C wired charging and wireless charging capabilities.

- **Wired Charging:** Connect the supplied USB-C cable to the charging port on the headphone earcup and the other end to a USB power source.
- **Wireless Charging:** Place the right earcup flat on a wireless charging pad. Ensure the earcup is centered on the pad for optimal charging.

A 15-minute quick charge provides several hours of playtime, and a full charge offers over 80 hours of wireless playback.



Connecting the USB-C charging cable to the headphones.



Marshall Major IV headphones being charged wirelessly.

Power On/Off

To power on or off your Major IV headphones, press and hold the multi-directional control knob located on the right earcup for approximately 2 seconds until you hear the power on/off sound.

Bluetooth Pairing

To pair your Major IV headphones with a Bluetooth device:

1. Ensure the headphones are powered off.
2. Press and hold the multi-directional control knob for 5 seconds until the LED indicator flashes blue, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), navigate to the Bluetooth settings and select "Major IV" from the list of available devices.
4. Once connected, the LED indicator will turn solid blue.

Wired Connection

You can also connect your Major IV headphones using the supplied 3.5mm audio cable. Simply plug one end into the 3.5mm jack on the headphone earcup and the other end into your audio source. The headphones will automatically switch to wired mode when the cable is connected.

OPERATING THE HEADPHONES

Multi-directional Control Knob

The multi-directional control knob provides comprehensive control over your music and phone functions:

- **Press once:** Play/Pause audio, Answer/End call.
- **Press twice:** Skip forward.
- **Press three times:** Skip backward.
- **Press and hold:** Power on/off, Reject call.
- **Push up/down:** Adjust volume.
- **Push left/right:** Navigate tracks.



Operating the multi-directional control knob for music and call management.

Wearing the Headphones

The Major IV headphones feature an improved ergonomic design with new ear cushions and 3D hinges for enhanced comfort during extended listening sessions. Adjust the headband to ensure a snug yet comfortable fit over your ears.



A person wearing the Marshall Major IV headphones, demonstrating their on-ear fit.

Collapsible Design

The Major IV headphones are designed to be collapsible, making them easy to store and transport. Fold the earcups inwards towards the headband for a compact form factor.



The Marshall Major IV headphones in their folded, compact state.



Demonstration of how the headphones can be held compactly when folded.

MAINTENANCE

Proper care will ensure the longevity and performance of your Marshall Major IV headphones.

Cleaning

- Wipe the earcups and headband with a soft, dry cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture into any openings.

Storage

- Store the headphones in a cool, dry place away from extreme temperatures.
- Utilize the collapsible design for compact and safe storage when not in use.

TROUBLESHOOTING

If you encounter issues with your Major IV headphones, refer to the following common solutions:

No Power

- Ensure the headphones are charged. Connect them to a power source using the USB-C cable or a wireless charging pad.
- Press and hold the multi-directional control knob for 2 seconds to power on.

No Sound / Poor Sound Quality

- **Bluetooth:** Ensure the headphones are properly paired and connected to your device. Check the volume levels on both the headphones and your device. Try re-pairing the headphones.
- **Wired:** Ensure the 3.5mm audio cable is fully inserted into both the headphones and the audio source. Try a different audio cable if available.
- Check if the audio source is playing.

Pairing Issues

- Ensure the headphones are in pairing mode (LED flashing blue).
- Turn off Bluetooth on other nearby devices that might be trying to connect.
- Move the headphones closer to your device.
- Forget "Major IV" from your device's Bluetooth settings and try pairing again.

Resetting the Headphones

If issues persist, you may need to reset your headphones. Refer to the full user manual or Marshall's official support website for specific reset instructions.

SPECIFICATIONS

Feature	Specification
Brand	Marshall
Model	1005773 (Major IV)
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Battery Life	Over 80 hours (wireless playtime)
Charging Time	15 minutes (quick charge)
Weight	178 grams
Impedance	32 Ohm
Frequency Response	20 Hz - 20,000 Hz
Sensitivity	99 dB
Headphone Jack	3.5 mm
Control Type	Multi-directional Control Knob
Additional Features	Foldable, Wireless Charging

WARRANTY & SUPPORT

Marshall Major IV headphones come with a standard manufacturer's warranty. For detailed warranty information, product registration, or further technical support, please visit the official Marshall website or contact their customer service.

You can also find additional support and FAQs on the [Marshall Store on Amazon](#).