

## Cecotec 05517

# Cecotec Fast&Furious 4020 Force Vertical Garment Steamer User Manual

Model: 05517

## 1. INTRODUCTION

Thank you for purchasing the Cecotec Fast&Furious 4020 Force Vertical Garment Steamer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Always unplug the appliance from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate the appliance with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Keep the steam head away from your body and hands when the appliance is operating.
- Use only distilled or demineralized water to prevent mineral buildup.
- This appliance is for household use only.
- The appliance features an automatic shut-off safety system that turns off the steamer after 8 minutes of inactivity.

## 3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Fast&Furious 4020 Force Garment Steamer:

- Main Steamer Unit with Steam Head
- Removable Water Tank
- Power Cord
- Clean Brush Attachment



Figure 3.1: Main Steamer Unit and Clean Brush Attachment.



Figure 3.2: Steamer with included brush attachment.

## 4. SETUP

1. **Fill the Water Tank:** Remove the water tank from the main unit. Open the cap and fill the tank with up to 280 ml of distilled or demineralized water. Close the cap securely and reattach the tank to the steamer unit.
2. **Attach Accessories (Optional):** If needed, attach the Clean Brush to the steam head. Ensure it clicks into place firmly.
3. **Position the Steamer:** Place the steamer on a stable, flat surface or hold it upright.

## 5. OPERATING INSTRUCTIONS

Follow these steps to operate your garment steamer:

1. **Power On:** Plug the power cord into a suitable electrical outlet. The steamer will begin to heat up. It heats up quickly, ready in approximately 30 seconds.

2. **Select Steam Mode:** Use the touch panel to select one of the two continuous steam modes. The Power Steam technology generates an optimal and efficient continuous steam pressure of 25 g/min.



Figure 5.1: Touch panel for power and steam mode selection.

3. **Steaming Garments:** Hang the garment on a hanger. Hold the steam head close to the fabric, moving it up and down. For stubborn wrinkles, use the Clean Brush attachment to gently brush the fabric while steaming. The Clean Steam technology disinfects, cleans, and cares for your garments, and can also be used on upholstery, curtains, sheets, or mattresses.



Figure 5.2: Steaming a garment.





Figure 5.3: Effective use on various fabrics.

4. **Finishing:** Once steaming is complete, press the power button to turn off the appliance. Unplug the steamer from the outlet.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your steamer.

- **Empty Water Tank:** After each use, allow the appliance to cool down completely. Remove the water tank and empty any remaining water.
- **Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling:** If you notice reduced steam output or mineral residue, descale the appliance. Consult the full manual for detailed descaling instructions, typically involving a vinegar solution.
- **Store:** Store the steamer in a cool, dry place, away from direct sunlight.

## 7. TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam output	Water tank empty; Appliance not heated; Clogged steam head.	Refill water tank; Wait for heating indicator; Descale or clean steam head.
Water leaking from steam head	Overfilled water tank; Appliance not fully heated; Mineral buildup.	Do not overfill; Wait for full heating; Descale the appliance.
Steamer not turning on	Not plugged in; Power outlet issue; Appliance malfunction.	Ensure plug is secure; Test outlet with another device; Contact customer support.

If the problem persists after trying these solutions, please contact Cecotec customer support.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Cecotec
Model Number	05517
Color	Cranberry Color
Product Dimensions (L x W x H)	30.5 x 13 x 7 cm
Weight	800 grams
Water Tank Capacity	280 Milliliters
Power	1400 Watts
Voltage	1.4E+3 Volts
Continuous Steam Output	25 g/min
Heat-up Time	30 seconds
Spare Parts Availability (EU)	10 Years







## 9. WARRANTY AND SUPPORT

Cecotec products are manufactured to the highest quality standards. This product comes with a warranty as per local regulations. Please retain your proof of purchase for any warranty claims.

For technical support, spare parts, or warranty inquiries, please visit the official Cecotec website or contact their customer service department. Information regarding spare parts availability in the EU is 10 years from the date of purchase.

You can find more information and contact details at [www.cecotec.com](http://www.cecotec.com).

## Related Documents - 05517

	<p><a href="#">Cecotec IronHero 1800 Force Vertical Steam Iron Manual</a></p> <p>Discover the Cecotec IronHero 1800 Force, a vertical steam iron designed for efficient garment care. This manual provides essential safety instructions, operating guidelines, and maintenance tips for optimal performance.</p>
	<p><a href="#">Cecotec IronHero 1800 Force Vertical Steamer User Manual</a></p> <p>User manual for the Cecotec IronHero 1800 Force vertical garment steamer, including safety instructions, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p><a href="#">Cecotec Fast&amp;Furious: Інструкція з експлуатації парової станції</a></p> <p>Посібник користувача для парових станцій Cecotec Fast&amp;Furious 8010 Vital, 8020 Force та 8030 Ultimate. Дізнайтеся про безпечне використання, експлуатацію, очищення та технічні характеристики.</p>
	<p><a href="#">Cecotec IronHero 1800 Vital: Guía de Usuario</a></p> <p>Guía completa para la plancha vertical Cecotec IronHero 1800 Vital, cubriendo su funcionamiento, instrucciones de seguridad y mantenimiento para un cuidado eficaz de los tejidos.</p>
	<p><a href="#">Cecotec Fast&amp;Furious 5055 Pro Steam Iron User Manual</a></p> <p>Comprehensive user manual for the Cecotec Fast&amp;Furious 5055 Pro steam iron, covering safety instructions, parts and components, operation, cleaning, maintenance, technical specifications, and warranty information.</p>
	<p><a href="#">Cecotec HydroSteam 3030 Active: Manual de Instrucciones y Uso</a></p> <p>Manual completo de instrucciones para el Cecotec HydroSteam 3030 Active, un limpiador de vapor vertical. Incluye guías de montaje, funcionamiento, limpieza, mantenimiento y solución de problemas.</p>