

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Sherry Desk Instruction Manual

Vicco Sherry

Vicco Sherry Desk Instruction Manual

Model: Sherry (36007)

1. INTRODUCTION

Thank you for choosing the Vicco Sherry Desk. This modern and elegant computer desk, featuring five spacious drawers, is designed to enhance your home office or study environment. Its contemporary design provides ample storage and a stylish aesthetic. This manual provides essential information for safe assembly, proper use, and effective maintenance of your new desk.



Image 1.1: The Vicco Sherry Desk in a home office setup, showcasing its design and functionality.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembling or using the desk. Failure to follow these instructions may result in injury or damage to the product.

- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the drawers or the desk surface. Refer to specifications for weight limits if available.
- Avoid standing or climbing on the desk.
- If the desk is to be placed against a wall, consider using wall anchors (not included) for added stability, especially if children are present.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desk components (panels, drawer parts)
- Assembly instructions (French language provided)
- Mounting hardware (screws, dowels, etc.)
- All necessary assembly tools are included.

4. SETUP AND ASSEMBLY

Assembly of the Vicco Sherry Desk requires following the included step-by-step instructions. All necessary tools are provided. It is recommended to have a second person assist with assembly for ease and safety.

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the desk components and your floor.
2. **Identify Parts:** Lay out all components and hardware. Compare them with the parts list in the included manual to ensure everything is present.
3. **Follow Instructions:** Refer to the detailed assembly instructions provided in the package. Each step is illustrated to guide you through the process.
4. **Secure Fasteners:** Ensure all screws, dowels, and other fasteners are tightened securely at each step. Do not overtighten.
5. **Drawer Assembly:** Pay close attention to the drawer slide installation to ensure smooth operation.
6. **Final Placement:** Once assembled, carefully move the desk to its desired location.



Image 4.1: Example of an assembly diagram, showing initial components.



Image 4.2: Example of an assembly diagram, illustrating panel attachment.



Image 4.3: Example of an assembly diagram, showing drawer runner installation.



Image 4.4: Example of an assembly diagram, detailing drawer box construction.



Image 4.5: Example of an assembly diagram, showing how to attach drawer fronts.



Image 4.6: Example of an assembly diagram, demonstrating drawer insertion.



Image 4.7: Example of an assembly diagram, showing the desk's main structure.

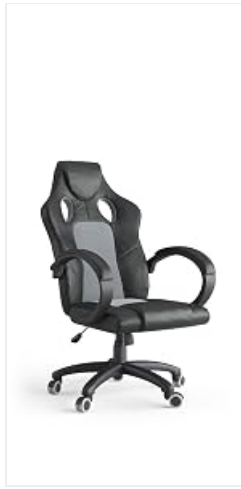


Image 4.8: Example of an assembly diagram, illustrating the attachment of the desk top.



Image 4.9: Example of an assembly diagram, showing the near-complete desk.



Image 4.10: Example of an assembly diagram, showing the final checks for assembly.

5. OPERATING INSTRUCTIONS

The Vicco Sherry Desk is designed for versatile use in a home office, study, or bedroom. Its features are straightforward to operate.

- **Workspace:** Utilize the spacious desk surface (120 cm x 55 cm) for your laptop, monitor, books, and other work essentials.
- **Drawers:** The five integrated drawers provide organized storage for documents, stationery, and personal items. Pull drawers gently to open and push firmly to close.
- **Weight Distribution:** Distribute weight evenly across the desk surface and within the drawers to maintain stability.



Image 5.1: Detail of an open drawer, illustrating the storage capacity.

6. MAINTENANCE

Proper care and maintenance will extend the life and preserve the appearance of your Vicco Sherry Desk.

- **Cleaning:** Regularly dust the desk with a soft, dry cloth. For deeper cleaning, wipe with a damp cloth and mild detergent, then dry immediately with a clean cloth. Avoid abrasive cleaners or harsh chemicals.
- **Spills:** Wipe up spills immediately to prevent staining or damage to the melamine coating.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Protect the desk from excessive moisture.
- **Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration.
- **Fasteners:** Periodically check all assembly fasteners and re-tighten them if they have loosened over time.

7. TROUBLESHOOTING

If you encounter any issues with your Vicco Sherry Desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk is wobbly.	Loose fasteners; uneven floor.	Check and tighten all screws. Place shims under the desk legs if the floor is uneven.
Drawers do not slide smoothly.	Incorrectly installed drawer slides; obstruction in the runners; overloaded drawer.	Ensure drawer slides are installed correctly according to the manual. Check for any debris in the runners. Reduce the weight in the drawer.
Parts missing or damaged upon arrival.	Shipping damage or packaging error.	Do not proceed with assembly. Contact the retailer or manufacturer's customer support immediately for replacement parts.

8. SPECIFICATIONS

Key technical specifications for the Vicco Sherry Desk:

Feature	Detail
Model Name	Sherry
Model Number	36007
Brand	Vicco
Dimensions (L x W x H)	120 cm x 55 cm x 75 cm
Weight	40.4 Kilograms
Color	White
Material	16 mm Particle Board with Melamine Coating
Finish Type	High Gloss
Number of Drawers	5
Assembly Required	Yes (Tools included)

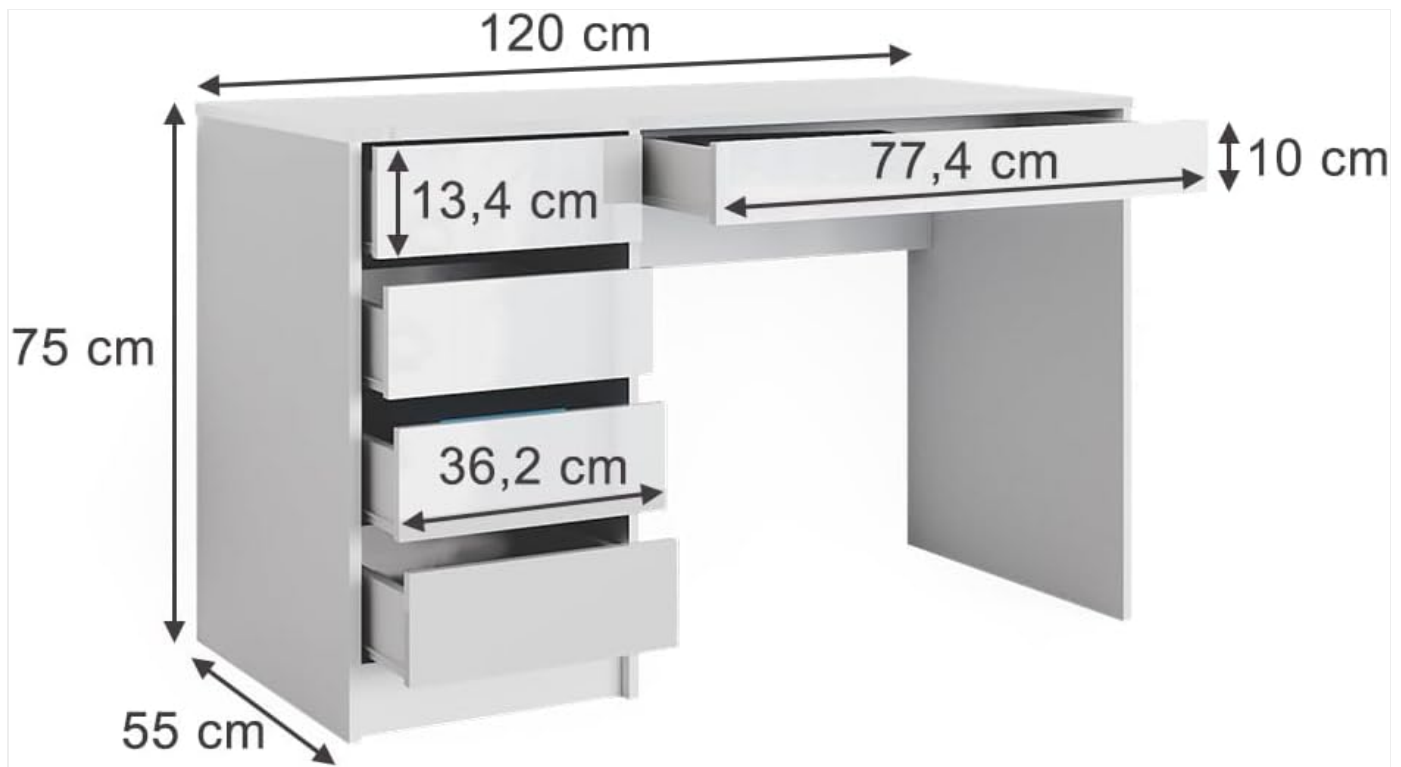


Image 8.1: Dimensional diagram of the Vicco Sherry Desk.

9. WARRANTY INFORMATION

Warranty terms and conditions for the Vicco Sherry Desk are provided by the retailer or manufacturer at the time of purchase. Please retain your proof of purchase for any warranty claims. For specific details regarding warranty coverage, duration, and claim procedures, refer to the documentation included with your product or contact the seller directly.

10. CUSTOMER SUPPORT

If you require further assistance, have questions not covered in this manual, or need to report missing/damaged parts, please contact the retailer from whom you purchased the Vicco Sherry Desk. You may also visit the official Vicco brand store for more information:

[Visit the Vicco Brand Store](#)

© 2023 Vicco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08KJ6DYVN>

More documents and user manuals: <https://manuals.plus/>