

Cecotec Fast&Furious 4040 Absolute

Cecotec Fast&Furious 4040 Absolute Vertical Steamer - User Manual

1. INTRODUCTION

Thank you for choosing the Cecotec Fast&Furious 4040 Absolute Vertical Steamer. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Fast&Furious 4040 Absolute is designed for quick and efficient garment care, offering 1700 W of power and a continuous steam output of 35 g/min. It is ready for use in just 20 seconds, making it ideal for removing wrinkles, disinfecting, and deodorizing various fabrics and household items.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before filling or emptying the water tank, or when not in use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steamer out of reach of children and pets.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- Never direct steam towards people, animals, or electrical appliances. Steam is hot and can cause burns.
- Do not touch the hot steam head during or immediately after use.
- Ensure the power cord is not damaged and avoid placing it near hot surfaces.
- Do not operate the appliance if it has been dropped, damaged, or is not functioning correctly. Contact customer support for assistance.
- Use the appliance only for its intended purpose as described in this manual.

3. PRODUCT COMPONENTS

The Cecotec Fast&Furious 4040 Absolute Vertical Steamer comes with the following components:

- Main Steamer Unit
- Water Tank
- 2 Brushes (for lint removal and delicate/thick fabrics)
- Measuring Cup (for water filling)



Figure 1: Cecotec Fast&Furious 4040 Absolute Vertical Steamer with included brushes and measuring cup.

The steamer is designed for ease of use, featuring a comfortable grip and intuitive controls.

4. SETUP

1. **Fill the Water Tank:** Remove the water tank from the main unit. Open the filling cap and use the provided measuring cup to fill the tank with distilled or demineralized water. Do not overfill. Close the cap securely and reattach the tank to the steamer until it clicks into place.
2. **Attach Accessories (Optional):** If desired, attach one of the two brushes to the steam head. The brushes are designed for specific fabric types or for removing lint and threads.
3. **Connect to Power:** Plug the steamer into a suitable electrical outlet. The indicator light will illuminate, signaling that the appliance is powered on.
4. **Preheating:** The steamer will begin to heat up. It is ready for use in approximately 20 seconds, indicated by a change in the indicator light or a steady steam output.



Figure 2: The steamer unit with its accessories, ready for water filling and use.

5. OPERATING INSTRUCTIONS

Once the steamer is preheated, you can begin steaming your garments or other items.

1. **Select Steam Mode:** The steamer features a '2 Modes Steam' system, allowing you to adjust the continuous steam output (up to 35 g/min) to suit different fabric types. Refer to the control panel for mode selection.
2. **Prepare Garment:** Hang the garment on a hanger. For best results, gently pull the fabric taut with one hand while steaming with the other.
3. **Apply Steam:** Hold the steam head a few centimeters away from the fabric and move it slowly downwards. The powerful steam will penetrate the fibers, relaxing wrinkles.
4. **Using Brushes:** Attach the appropriate brush for specific needs. The lint brush helps remove lint and threads, while the fabric brush can be used for delicate items or to open up fibers on thicker materials.
5. **Clean Steam Technology:** Utilize the 'Clean Steam' technology to disinfect, clean, and care for your garments, as well as other household items like sofas, curtains, sheets, and mattresses.

6. **Finishing:** After steaming, allow the garment to cool and dry completely before wearing or storing.



Figure 3: Demonstrating the vertical steaming process on a shirt.



Figure 4: The steamer's control panel with power and steam mode indicators.

Official Product Video

Video 1: Cecotec IronHero V-1500 Essential Vertical Steamer in use. This video demonstrates the general operation and effectiveness of a Cecotec vertical steamer, showcasing its ability to quickly remove wrinkles from garments.

Video 2: Cecotec Fast&Furious 4050 X-Steam Vertical Steamer in use. This video highlights the features and ease of use of a similar Cecotec vertical steamer model, including quick heating and continuous steam.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your steamer.

- **Cleaning the Steam Head:** After each use, allow the steam head to cool completely. Wipe it with a soft, damp cloth to remove any residue.
- **Emptying the Water Tank:** Always empty any remaining water from the tank after use to prevent stagnant water and mineral buildup.

- **Descaling:** Depending on water hardness in your area, descaling may be necessary periodically. Consult the full product manual for detailed descaling instructions. Generally, this involves using a descaling solution or a mixture of water and white vinegar.
- **Storage:** Store the steamer in a cool, dry place, away from direct sunlight and moisture. Ensure the power cord is neatly wrapped and not kinked.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output	Water tank is empty or low. Appliance not plugged in. Steamer not preheated.	Fill water tank. Plug in the appliance. Wait for the steamer to preheat (approx. 20 seconds).
Water leaking from steam head	Overfilled water tank. Steamer not fully preheated. Mineral buildup.	Do not overfill the tank. Allow the steamer to fully preheat. Perform descaling.
Steamer not turning on	No power. Appliance malfunction.	Check power outlet and plug connection. Contact customer support if the issue persists.



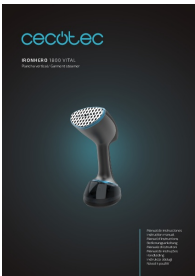



8. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	05518
Style	Fast&Furious 4040 Absolute
Power	1700 W
Continuous Steam	35 g/min
Voltage	220 Volts
Product Dimensions	11l. x 14.5w. x 27h. centimeters (approx. 4.3 x 5.7 x 10.6 inches)
Product Weight	1.05 Kilograms (approx. 2.3 lbs)
Color	Black - Blue
Product Advantages	Removes wrinkles, disinfects, deodorizes
Origin Country	China
Spare Parts Availability (EU)	10 Years

9. WARRANTY AND SUPPORT

Your Cecotec Fast&Furious 4040 Absolute Vertical Steamer is covered by a manufacturer's warranty. For specific warranty terms, registration, or to access customer support, please refer to the warranty card included with your product or visit the official Cecotec website. For any technical issues or questions, please contact Cecotec customer service directly.

Related Documents - Fast&Furious 4040 Absolute

	<p>Cecotec IronHero 1800 Force Vertical Steam Iron Manual</p> <p>Discover the Cecotec IronHero 1800 Force, a vertical steam iron designed for efficient garment care. This manual provides essential safety instructions, operating guidelines, and maintenance tips for optimal performance.</p>
	<p>Cecotec IronHero 1800 Force Vertical Steamer User Manual</p> <p>User manual for the Cecotec IronHero 1800 Force vertical garment steamer, including safety instructions, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p>Cecotec IronHero 1800 Vital: Guía de Usuario</p> <p>Guía completa para la plancha vertical Cecotec IronHero 1800 Vital, cubriendo su funcionamiento, instrucciones de seguridad y mantenimiento para un cuidado eficaz de los tejidos.</p>
	<p>Cecotec IronHero 3200 Smart Absolute: Manual de Instrucciones y Guía de Uso</p> <p>Manual completo para la plancha horizontal Cecotec IronHero 3200 Smart Absolute. Incluye guías de seguridad, operación, mantenimiento, solución de problemas y especificaciones técnicas para un uso óptimo.</p>
	<p>Cecotec HydroSteam 3030 Active: Manual de Instrucciones y Uso</p> <p>Manual completo de instrucciones para el Cecotec HydroSteam 3030 Active, un limpiador de vapor vertical. Incluye guías de montaje, funcionamiento, limpieza, mantenimiento y solución de problemas.</p>
	<p>Cecotec Fast&Furious: Інструкція з експлуатації парової станції</p> <p>Посібник користувача для парових станцій Cecotec Fast&Furious 8010 Vital, 8020 Force та 8030 Ultimate. Дізнайтеся про безпечне використання, експлуатацію, очищення та технічні характеристики.</p>

