



Manuals.plus /

› KREAFUNK /

› KREAFUNK aBEAN Wireless Earbuds User Manual

## KREAFUNK 18492

# KREAFUNK aBEAN Wireless Earbuds User Manual

Model: 18492

## INTRODUCTION

---

This manual provides detailed instructions for the KREAFUNK aBEAN Wireless Earbuds, designed for ease of use and high-quality audio. These earbuds offer a comfortable fit, intuitive touch controls, and come with a portable charging case.



Image: KREAFUNK aBEAN wireless earbuds in their open charging case, displaying a digital battery indicator. The earbuds are black with a metallic 'K' logo.

## PACKAGE CONTENTS

---

- KREAFUNK aBEAN Wireless Earbuds (Left and Right)
- Portable Charging Case
- USB Charging Cable
- 3 Pairs of Silicone Ear Tips (Small, Medium, Large)
- User Manual



Image: The KREAFUNK aBEAN earbuds and their charging case are shown alongside the product's distinctive wooden-textured packaging.

## SETUP

---

### 1. Initial Charge

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the charging case to a power source using the provided USB cable. The digital display on the case will indicate the charging status.

### 2. Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case lid is open.
2. On your device (smartphone, tablet, etc.), go to Bluetooth settings and enable Bluetooth.
3. Look for "KREAFUNK aBEAN" in the list of available devices and select it to pair.
4. Once paired, the earbuds will automatically connect to your device when taken out of the case and Bluetooth is enabled on your device.

### 3. Selecting Ear Tips

The aBEAN earbuds come with three sizes of silicone ear tips (Small, Medium, Large). Choose the size that

provides the most comfortable and secure fit for optimal sound quality and noise isolation.



Image: A pair of KREAFUNK aBEAN wireless earbuds, black in color, displayed outside their charging case, emphasizing their ergonomic shape and the 'K' logo on each earbud.

## OPERATING INSTRUCTIONS

---

### Touch Controls

The aBEAN earbuds feature intuitive touch controls on each earbud for managing playback and calls.

Action	Left Earbud	Right Earbud
Play/Pause	Single Tap	Single Tap
Next Track	Double Tap	Double Tap
Previous Track	Triple Tap	Triple Tap
Answer/End Call	Single Tap	Single Tap
Reject Call	Long Press (2s)	Long Press (2s)
Activate Voice Assistant	Long Press (3s)	Long Press (3s)

## Wearing the Earbuds

Insert the earbuds gently into your ears, ensuring a snug and comfortable fit. Adjust them until the sound is clear and balanced. The ergonomic design is intended for extended wear during various activities.



Image: A man is depicted wearing a KREAFUNK aBEAN earbud in his right ear, demonstrating the product's in-ear fit while he is seated outdoors.



Image: This image shows a man comfortably wearing a KREAFUNK aBEAN earbud while engrossed in reading a book, highlighting the earbud's discreet and comfortable design during use.

## MAINTENANCE

---

### Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. For ear tips, they can be gently removed and cleaned with a damp cloth and mild soap, then thoroughly dried before reattaching.

### Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage, and to keep them charged.

## Water Resistance

The aBEAN earbuds are IPX4 water resistant, meaning they are protected against splashing water from any direction. They are suitable for workouts and light rain, but should not be submerged in water.

## TROUBLESHOOTING

---

- **Earbuds not pairing:** Ensure both earbuds are charged. Place them back in the case, close the lid, wait a few seconds, then open the lid. Check your device's Bluetooth settings and try pairing again.
- **Only one earbud working:** Ensure both earbuds are charged. Try placing both back in the case and then taking them out simultaneously. If the issue persists, try resetting the earbuds (refer to manufacturer's website for specific reset instructions if not covered here).
- **Poor sound quality:** Ensure the ear tips are correctly sized and seated in your ear for a good seal. Clean any debris from the earbud grilles. Check the audio source device's volume and audio settings.
- **Charging issues:** Ensure the charging cable is securely connected to both the case and the power source. Check if the charging port on the case is clean and free of debris.

## SPECIFICATIONS

---

- **Model:** KREAFUNK aBEAN (Item model number: 18492)
- **Brand:** KREAFUNK
- **Color:** Black
- **Ear Placement:** In Ear
- **Form Factor:** In Ear
- **Water Resistance:** IPX4
- **Battery Type:** Lithium Ion (2 required)
- **Play Time:** Up to 20 hours (with charging case)
- **Total Charge Time:** Approximately 1.5 hours
- **Product Dimensions:** 5.99 x 3.99 x 2.59 cm
- **Item Weight:** 31.75 g
- **Connectivity:** Bluetooth
- **Headphone Jack:** 35 month jack

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the official KREAFUNK website or contact their customer service. Keep your proof of purchase for warranty claims.

**Manufacturer:** KREAFUNK

**Date First Available:** 11 August 2024

**ASIN:** B08KJFSXL3