

[Manuals.plus](#) /

› [Robin](#) /

› Robin 8-Inch Digital Day Clock (Model RDC0804-11) Instruction Manual

Robin RDC0804-11

Robin 8-Inch Digital Day Clock (Model RDC0804-11) Instruction Manual

Your guide to setup, operation, and features.

1. INTRODUCTION

The Robin Digital Day Clock is designed to clearly display the time, day, date, and period of the day (e.g., 'Morning', 'Afternoon'). This device is particularly useful for individuals who benefit from a clear, unambiguous display of time information. This manual provides instructions for setting up and operating your Robin Digital Day Clock.



Figure 1: Front view of the Robin Digital Day Clock displaying current time and date.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- Robin 8-Inch Digital Day Clock
- Power Adapter (Corded Electric)
- Tabletop Stand
- Instruction Manual
- 1 CR2032 battery (pre-installed for backup)

3. SETUP

3.1 Power Connection

1. Connect the power adapter to the DC input port on the back of the clock.
2. Plug the power adapter into a standard electrical outlet. The clock will power on automatically.

3.2 Initial Settings

Upon first power-on, the clock may prompt you to set basic information. Use the navigation buttons on the side of the clock to adjust settings.



Daylight Savings Feature

Only Day Clock that auto resets for DST within your chosen region

Figure 2: Screen for selecting Daylight Savings Time region.

- **Time Zone:** Select your local time zone.
- **Date Format:** Choose your preferred date display (e.g., MM/DD/YYYY or DD/MM/YYYY).
- **Time Format:** Select 12-hour or 24-hour format.
- **Daylight Saving Time (DST):** The clock features automatic DST adjustment. Select your region (e.g., United States & Canada, European Union) for correct automatic adjustments.
- **Language:** Select your preferred display language.

3.3 Mounting Options

The Robin Digital Day Clock can be placed on a tabletop or mounted on a wall.

- **Tabletop:** Attach the included tabletop stand to the back of the clock. Ensure it is securely fastened for stability.
- **Wall Mount:** Use the integrated wall mount holes on the back of the clock. Securely fasten the clock to a wall using appropriate hardware (not included).



Dimensions

Figure 3: Rear view showing tabletop stand and power connection.

4. OPERATING INSTRUCTIONS

4.1 Navigation Buttons

The clock features side buttons for menu navigation and setting adjustments. Typically, these include 'Menu', 'Up', 'Down', 'Enter', and 'Back' buttons.

4.2 Setting Time and Date Manually

While the clock automatically adjusts for DST, you can manually set the time and date if needed:

1. Press the **Menu** button to access the main settings.
2. Navigate to 'Time & Date Settings' using the **Up/Down** buttons and press **Enter**.
3. Adjust the hour, minute, year, month, and day using the **Up/Down** buttons. Press **Enter** to confirm each selection.
4. Exit the menu by selecting 'Save & Exit' or pressing the **Back** button repeatedly.

4.3 Alarms and Reminders

The clock supports setting multiple customizable alarms and reminders.

1. Press the **Menu** button.
2. Navigate to 'Alarm Settings' or 'Reminder Settings' and press **Enter**.
3. Select 'Add New Alarm/Reminder'.
4. Set the time, frequency (daily, weekly, specific date), and customize the message to be displayed. You can also choose an audible alert.
5. Save the alarm/reminder.

Take control of your day!

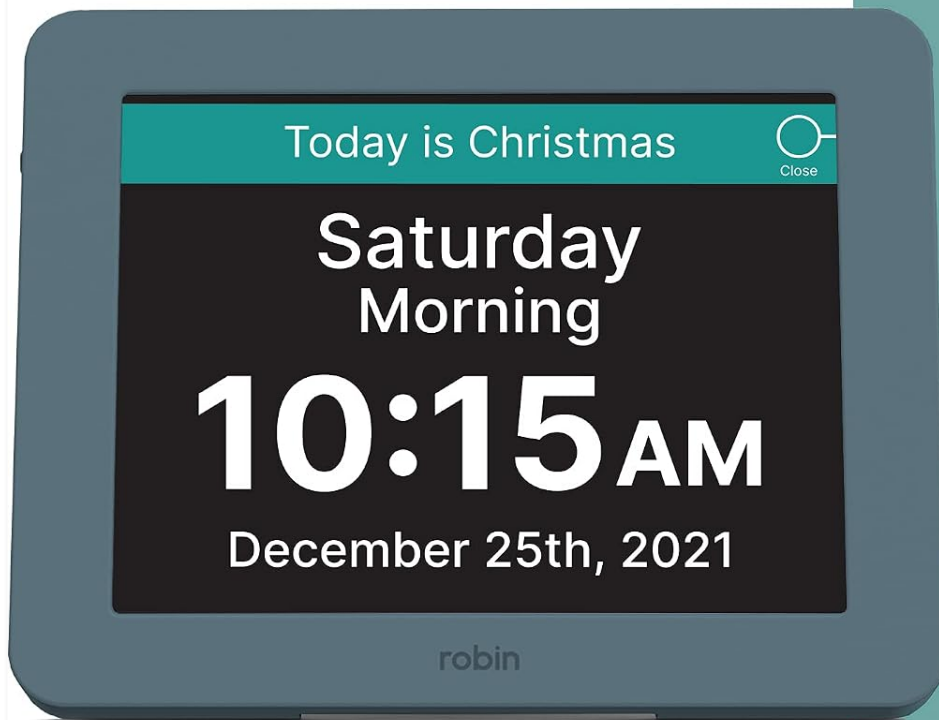 


Figure 4: Customization options for alarms and reminders.

4.4 Display Themes and Colors

The clock offers various display themes and color options to suit personal preference.

1. Press the **Menu** button.
2. Navigate to 'Display Settings' or 'Themes' and press **Enter**.
3. Browse through the available themes and color options using the **Up/Down** buttons.
4. Press **Enter** to select a theme.



Customizable Themes

7 themes + customizable
color options



Figure 5: Examples of customizable display themes.

4.5 Talking Clock Function

The clock can audibly announce the time and date.

1. Locate the dedicated 'Talking Clock' button on the side of the device.
2. Press this button to hear the current day, time, and year announced in a clear voice.



Figure 6: Location of the Talking Clock button.

4.6 Nap Button

The Nap Button allows for quick dimming of the display for undisturbed rest.

1. Locate the 'Nap' button on the side of the device.
2. Press this button to instantly dim the screen.
3. Press it again to restore the previous brightness setting.

Nap Button

The Robin is the only Day Clock on the market with 1-Step button for naps

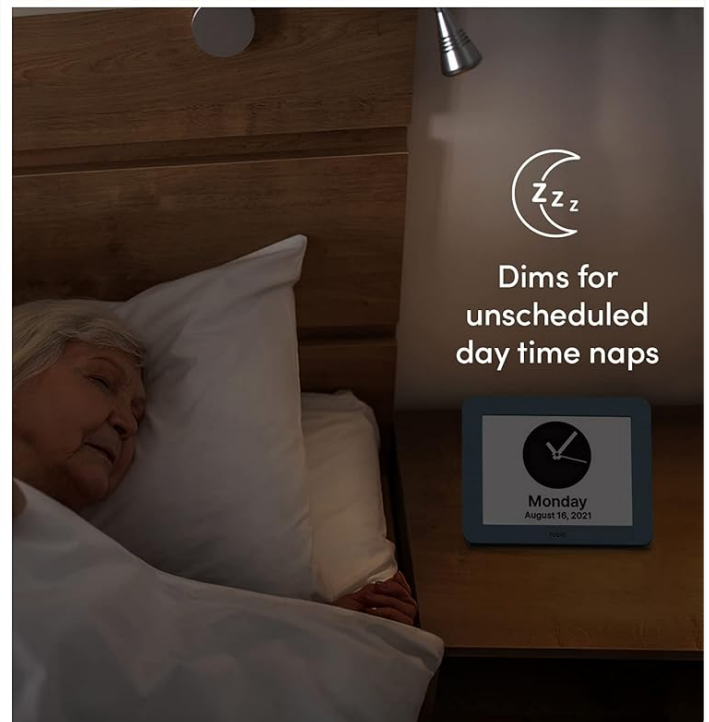 
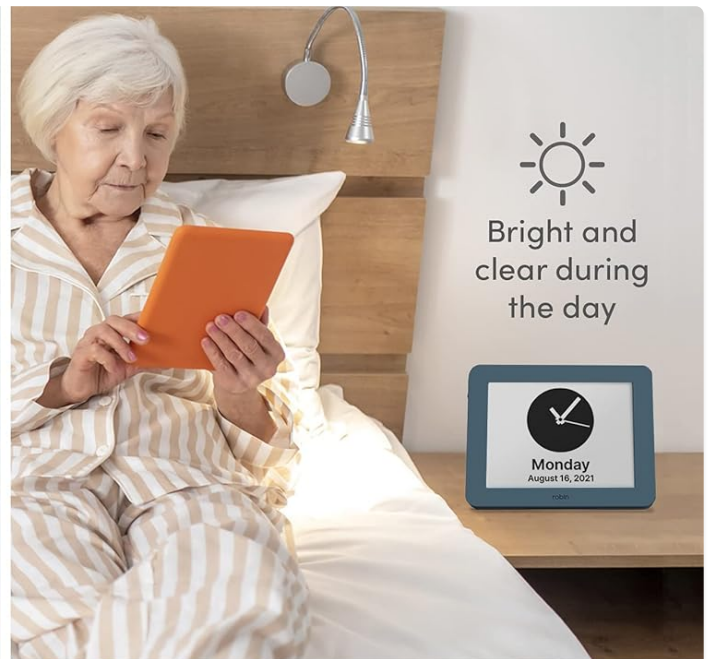 


Figure 7: The Nap Button for quick screen dimming.

5. FEATURES OVERVIEW


The Robin Digital Day Clock incorporates several features designed for user convenience:

- **High Definition Display:** An 8-inch crystal clear screen prominently displays time, day, and date.
- **Customizable Alarms & Reminders:** Set an unlimited number of personalized alarms and messages for various events, including medication reminders or appointments.
- **Multiple Display Themes:** Choose from over 20 themes and color options to personalize the clock's appearance.
- **Talking Clock:** A dedicated button allows the clock to audibly announce the current day, time, and year.
- **Automatic Daylight Saving Time (DST) Adjustment:** The clock automatically adjusts for DST based on your selected region.
- **Battery Backup:** An internal CR2032 battery ensures that time, date, and settings are retained during a power outage.

- **Flexible Placement:** Can be used as a tabletop clock with the included stand or mounted on a wall.

Battery Backup

The included 5V battery backup ensures that the Day Clock retains the correct information and settings in case of power outage or when it's unplugged

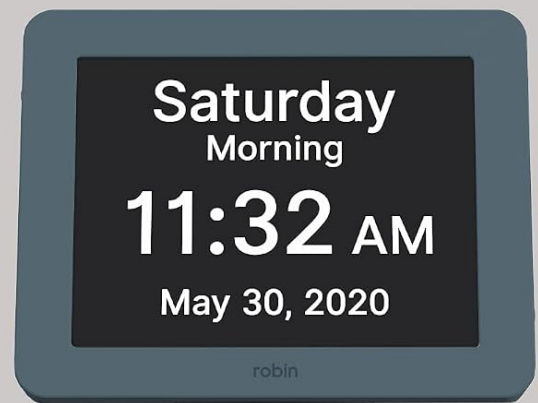

5V cell
battery

Figure 8: Battery backup feature for power outages.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Robin Digital Day Clock, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and exterior. Avoid abrasive cleaners, solvents, or aerosol sprays, as these can damage the finish or screen.
- **Placement:** Place the clock on a stable surface or mount it securely on a wall. Avoid placing it in direct sunlight or near heat sources, which can affect display performance and internal components.
- **Power:** Always use the provided power adapter. If the adapter is damaged, contact customer support for a replacement.
- **Battery:** The internal CR2032 battery is for backup purposes only. It is not user-replaceable. If the clock consistently loses settings after power outages, contact customer support.

7. TROUBLESHOOTING

If you encounter issues with your Robin Digital Day Clock, refer to the following troubleshooting steps:

Problem	Possible Cause	Solution
Clock does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely plugged into the clock and a working electrical outlet. Try a different outlet.
Incorrect time or date displayed.	Incorrect time zone setting or manual adjustment needed.	Check the time zone setting in the menu. Manually adjust the time and date if necessary (refer to Section 4.2).
Alarms are not sounding.	Alarm volume is too low or alarm is disabled.	Check alarm settings to ensure it is enabled and the volume is set appropriately.
Screen is too bright or too dim.	Brightness settings need adjustment.	Access 'Display Settings' in the menu to adjust brightness. The Nap Button (Section 4.6) can also quickly dim the screen.
Settings are lost after a power outage.	Backup battery issue.	The internal CR2032 battery should retain settings. If this issue persists, contact customer support.

8. SPECIFICATIONS

Specification	Detail
Brand	Robin
Model Number	RDC0804-11
Display Type	Digital
Screen Size	8 Inches
Product Dimensions	8"W x 6.5"H
Power Source	Corded Electric
Material	Plastic
Mounting Type	Tabletop, Wall Mount
Backup Battery	1 CR2032 (included)
Special Features	Alarm Clock, Talking Clock, Automatic DST, Customizable Reminders
Item Weight	1.39 pounds
UPC	850004350874

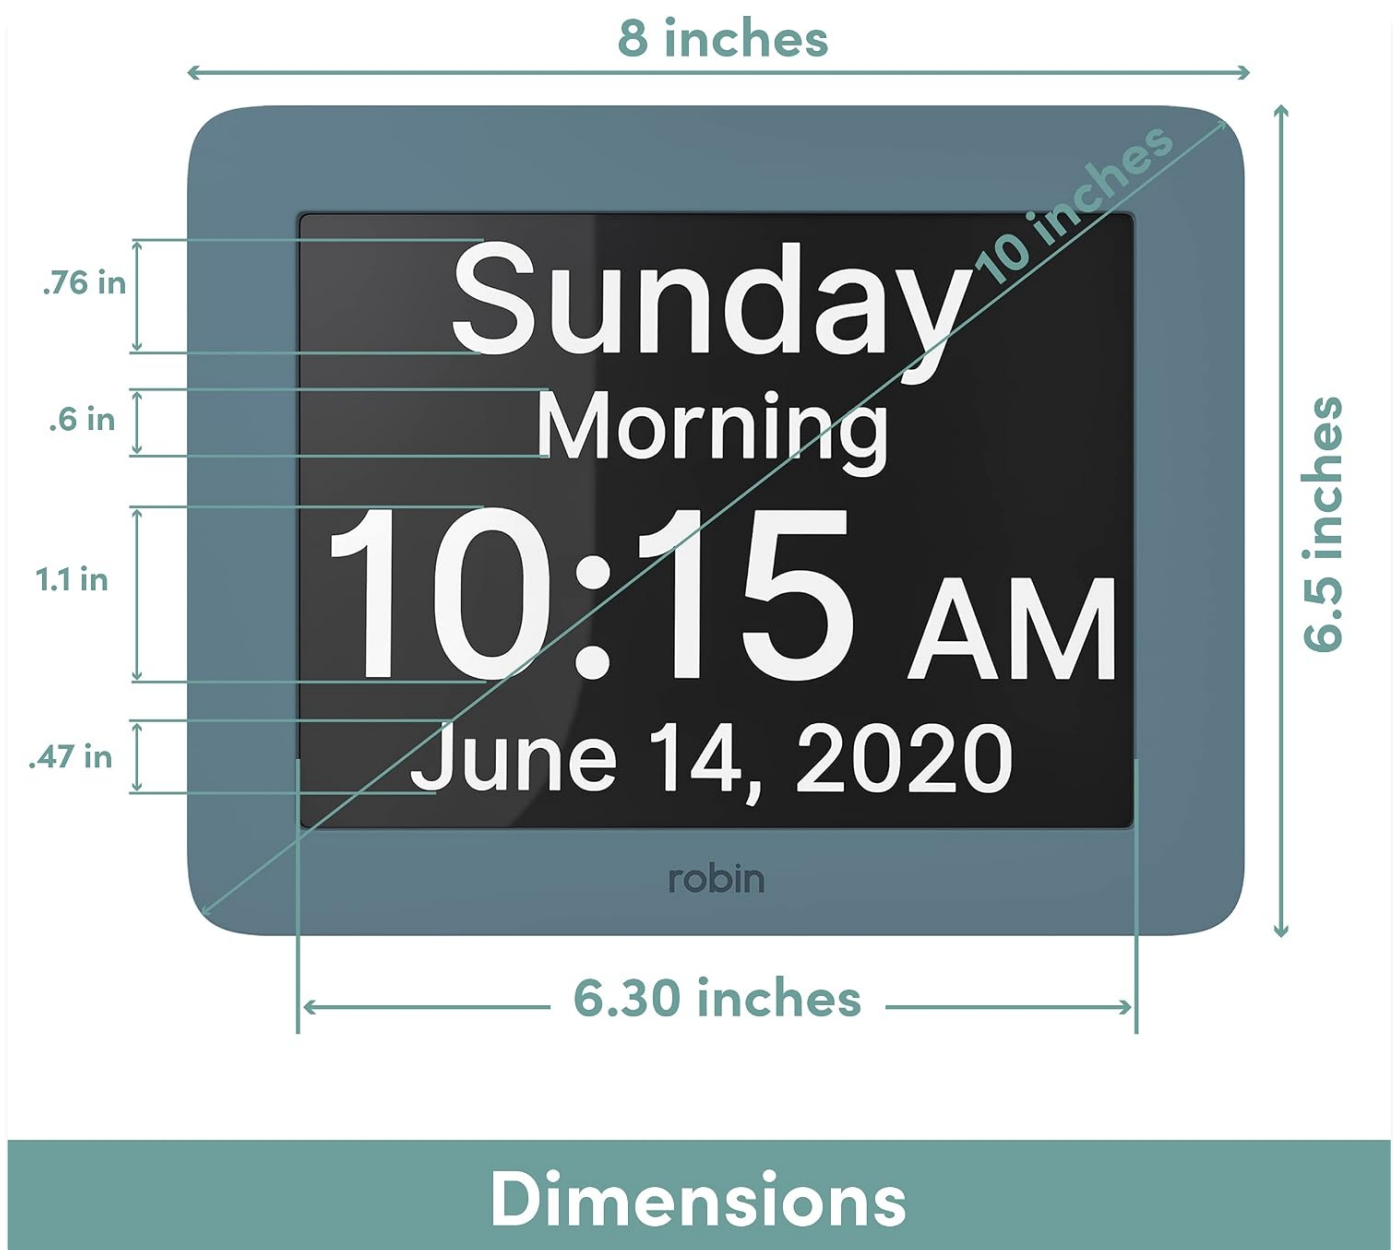 


Figure 9: Product dimensions.

9. WARRANTY AND SUPPORT

Robin provides exceptional customer service. If you have any concerns or require assistance with your Digital Day Clock, please contact our US-based customer support team. Refer to the product packaging or the official Robin website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question