



Manuals.plus /

› Preethi /

› Preethi Indicook IC123 1600-Watt Induction Cooktop User Manual

Preethi IC123

Preethi Indicook IC123 1600-Watt Induction Cooktop User Manual

Model: IC123 | Brand: Preethi

Overview	Safety Instructions	Features Specifications	Setup	Operation Warranty	Maintenance	Troubleshooting
--------------------------	-------------------------------------	---	-----------------------	------------------------------------	-----------------------------	---------------------------------

1. PRODUCT OVERVIEW

The Preethi Indicook IC123 is a 1600-Watt induction cooktop designed for efficient and gas-free cooking. It features a sleek black design, soft-touch controls, and crystal glass surface. This manual provides essential information for safe and effective use of your appliance.

1600 WATT

WORRY FREE COOKING

HIGH SURGE PROTECTION
TRIPLE MOVs GUARD AGAINST
HIGH VOLTAGE SPIKE(UPTO 4KV*)



AUTO SWITCH OFF
TURNS OFF IF UNATTENDED

SOFT TOUCH
EASY TO USE BUTTONS



AUTO DETECTION
INCOMPATIBILITY ALARM

CRYSTAL GLASS
CLEAN & POLISHED GLASS



CUSTOM CONTROLS
CUSTOM MENUS AND
TEMPERATURE SETTINGS



*As per internal testing & validation with cycle time of 60 min on & 30 min off

Figure 1: Preethi Indicook IC123 Induction Cooktop with highlighted features.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Always place the cooktop on a stable, flat, heat-resistant surface.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Keep children away from the appliance during operation. The surface can become hot.
- Use only induction-compatible cookware. Non-magnetic vessels or vessels with a base diameter less than 12 cm will not be detected.
- Do not place metallic objects such as knives, forks, spoons, lids, keys, or coins on the cooktop surface as they can become hot.
- Ensure proper ventilation around the cooktop. Do not block air vents.
- Unplug the appliance from the power outlet when not in use and before cleaning.

- This appliance is for household use only. Do not use outdoors.
- The cooktop features **Triple MOV guard** against high voltage spikes (up to 4KV) to sustain voltage variations and ensure longer life.



Figure 2: High Surge Protection feature with Triple MOVs.

3. PRODUCT FEATURES

The Preethi Indicook IC123 is equipped with several features to enhance your cooking experience:

- **1600-Watt Power:** Provides fast and efficient heating for various cooking needs.
- **7 Pre-set Menus:** Dedicated cooking modes for common Indian dishes, simplifying meal preparation.
- **Soft Touch Operation:** Easy-to-use control panel for precise adjustments.
- **Wide Cooking Surface:** Accommodates various pot and pan sizes.
- **Customized Menu & Temperature Selection:** Allows manual control over cooking settings for flexibility.
- **Auto Switch Off:** The cooktop automatically turns off if left unattended for a period, enhancing safety.
- **Auto Detection:** Incompatibility alarm sounds if a non-compatible vessel is placed on the cooktop or if no vessel is detected.
- **Crystal Glass Surface:** Durable and easy to clean cooking surface.

7 PRESET MODES

WORRY FREE COOKING



Figure 3: The 7 Preset Cooking Modes.

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the induction cooktop from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the cooktop on a dry, stable, and heat-resistant surface. Ensure there is adequate ventilation around the appliance. Do not place it near water sources or heat-sensitive materials.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the outlet's voltage matches the appliance's requirements (230V AC, 50Hz).
4. **Initial Cleaning:** Wipe the crystal glass surface with a soft, damp cloth before first use.

What's in the Box:

- Preethi Indicook IC123 Induction Cooktop
- Instruction Manual (this document)

5. OPERATING INSTRUCTIONS

5.1. Basic Operation

1. Place an induction-compatible vessel centrally on the cooking zone.
2. Plug in the cooktop. The display will show standby mode.
3. Press the **On/Off** button to turn on the appliance.
4. Select a desired cooking mode using the **Function** button or choose a preset menu.
5. Adjust power/temperature using the **+** and **-** buttons.
6. To turn off, press the **On/Off** button again. The fan may continue to run for a short period to cool down the appliance.

5.2. Using Preset Menus

The IC123 offers 7 preset Indian menus for convenient cooking:

- **Dosa/Roti:** Optimized for flatbreads.
- **Deep Fry:** Maintains consistent oil temperature for frying.
- **Pressure Cook:** Suitable for pressure cooking.
- **Keep Warm:** Maintains food at a warm temperature.
- **Curry:** Ideal for simmering curries.
- **Stir Fry:** High heat for quick stir-frying.
- **Boil:** For boiling water or liquids.

To use a preset menu, press the corresponding button on the control panel. The cooktop will automatically set the appropriate power and temperature.

5.3. Custom Controls

For dishes not covered by presets, use the **Function** button to cycle through general cooking modes and adjust power/temperature manually with the **+** and **-** buttons.

5.4. Vessel Compatibility

The induction cooktop requires specific cookware. Use only vessels made of magnetic materials such as cast iron or stainless steel with a magnetic base. The base diameter of the vessel should be at least 12 cm.

COMPATIBILITY CHECK


WORRY FREE COOKING



STAINLESS
STEEL



IRON

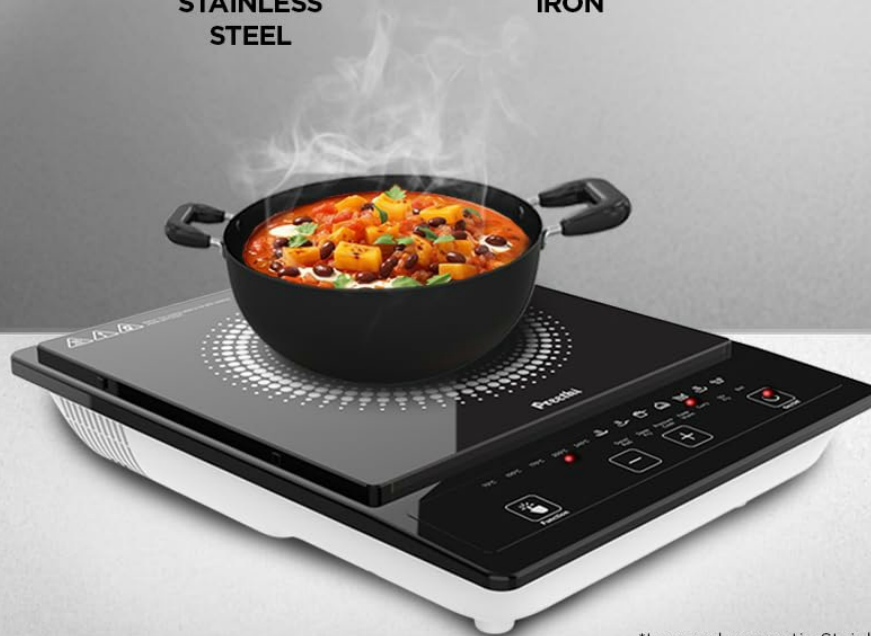

*Iron and magnetic Stainless Steel base

Figure 4: Compatible Cookware Types (Stainless Steel and Iron).

Figure 5: Auto-Detection for Vessel Compatibility.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction cooktop.

1. **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely.
2. **Cleaning the Surface:** Wipe the crystal glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops. Rinse with a clean, damp cloth and dry thoroughly.
3. **Cleaning the Body:** Wipe the outer body with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals.
4. **Air Vents:** Ensure the air vents on the bottom and sides of the cooktop are free from dust and debris to prevent overheating. Use a soft brush or vacuum cleaner to gently clean them.
5. **Do Not Immerse:** Never immerse the cooktop in water or any other liquid.

7. TROUBLESHOOTING GUIDE

If you encounter any issues with your Preethi Indicook IC123, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Power cord not properly plugged in; Main switch off.	Check power outlet; Ensure power cord is securely plugged in; Turn on main switch.
Cooktop turns on but no heating.	Incompatible cookware; No vessel on cooktop; Vessel base too small.	Use induction-compatible cookware (magnetic base); Place vessel centrally; Ensure vessel base is at least 12 cm.
Display shows an error code.	Specific internal error or sensor issue.	Refer to the full instruction manual for specific error codes. If the issue persists, contact customer service.
Cooktop automatically switches off.	Overheating; Left unattended (Auto Switch Off feature).	Ensure proper ventilation; Allow to cool down; This is a safety feature, resume cooking when ready.

If the problem persists after trying these solutions, please contact Preethi customer support.

8. TECHNICAL SPECIFICATIONS

- **Model Number:** IC123
- **Power:** 1600 Watts
- **Power Source:** Corded Electric
- **Fuel Type:** Electric
- **Heating Elements:** 1
- **Color:** Black
- **Item Weight:** 1 kg 800 g
- **Item Dimensions (LxWxH):** 34 x 27 x 6.6 Centimeters
- **Manufacturer:** Versuni India Home Solutions Limited

QUALITY CHECKS

UNRIVALLED EXCELLENCE



Figure 6: Quality Checks for the Induction Cooktop.

9. WARRANTY AND SUPPORT

Preethi provides the following warranty for the Indicook IC123 Induction Cooktop:

- **Product Warranty:** 1 Year
- **Heating Coil Warranty:** 3 Years
- **Service:** Lifelong Free Service

For warranty claims, service requests, or further assistance, please contact Preethi customer support. Keep your purchase receipt as proof of purchase.

UNMATCHED QUALITY

WORRY FREE COOKING

3
YEAR
HEATING COIL WARRANTY

1
YEAR
PRODUCT WARRANTY

LIFE
LONG
FREE SERVICE



Figure 7: Warranty and Service Information.

10. PRODUCT VIDEO DEMONSTRATION

Watch this short video for a quick overview of the Preethi Indicook IC123 Induction Cooktop's features and benefits.

Your browser does not support the video tag.

Video 1: Preethi Indicook IC123 Induction Cooktop Overview. This video highlights key features such as preset menus, soft touch operation, wide cooking surface, and customized menu selection.