

BRAUN SI5037VI

Braun TexStyle 5 Pro Steam Iron SI5037VI User Manual

1. INTRODUCTION

Thank you for choosing the Braun TexStyle 5 Pro Steam Iron SI5037VI. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new steam iron. Please read these instructions carefully before first use and retain them for future reference.

2. SAFETY INSTRUCTIONS

Always observe the following basic safety precautions when using electrical appliances:

- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the iron, power cord, or plug in water or other liquids.
- Never leave the iron unattended while it is switched on or connected to the mains.
- Keep the iron and its cord out of reach of children when it is switched on or cooling down.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The soleplate of the iron can become extremely hot. Avoid direct contact with hot surfaces.
- Always unplug the iron from the electrical outlet before filling or emptying the water tank, and when not in use.
- Use the iron only for its intended household purpose.

3. PRODUCT OVERVIEW

The Braun TexStyle 5 Pro Steam Iron SI5037VI is designed for efficient and effortless ironing. Familiarize yourself with its components:

- **Water Tank:** 300 ml capacity for steam generation.
- **Temperature Dial:** For selecting appropriate heat settings for various fabrics.
- **Steam Button:** Activates continuous steam.
- **Steam Shot Button:** Delivers a powerful burst of steam.
- **Water Spray Button:** Mists water onto fabrics.

- **FreeGlide 3D SuperCeramic Soleplate:** Designed for smooth gliding over all fabrics and backward over buttons and pockets.
- **Ergonomic Handle:** For comfortable grip during use.
- **Power Cord:** Provides electrical connection.



Figure 1: Top-down view of the Braun TexStyle 5 Pro Steam Iron SI5037VI, highlighting its ergonomic design and controls.





Figure 2: Underside view of the iron, showcasing the FreeGlide 3D SuperCeramic soleplate for smooth movement.

4. SETUP

4.1 First Use

1. Remove any labels or protective film from the soleplate.
2. It is recommended to test the iron on an old piece of fabric before ironing delicate garments to ensure no residue is left from manufacturing.

4.2 Filling the Water Tank

The iron is designed for use with tap water. If you live in an area with very hard water, it is advisable to use a mixture of 50% tap water and 50% distilled water.

1. Ensure the iron is unplugged from the power outlet.
2. Open the water tank inlet cover.
3. Fill the water tank (300 ml capacity) up to the 'MAX' mark using a measuring cup. Do not overfill.
4. Close the water tank inlet cover securely.



Figure 3: Illustration of filling the water tank, showing the water inlet and fabric guide on the iron.

5. OPERATING INSTRUCTIONS

5.1 Temperature Selection

1. Plug the iron into a suitable electrical outlet.
2. Turn the temperature dial to the desired setting based on the fabric type. Refer to the fabric care labels on your garments.
3. The indicator light will illuminate, indicating the iron is heating. It will turn off once the selected temperature is reached.

5.2 Dry Ironing

For dry ironing, ensure the steam function is turned off (steam dial set to minimum or no steam). Select the appropriate temperature and wait for the indicator light to turn off before ironing.

5.3 Steam Ironing

Steam ironing is suitable for most fabrics, except those requiring low temperatures (e.g., synthetics, silk). Ensure the water tank is filled.

1. Select a temperature setting suitable for steam (usually 2 dots or higher on the dial).
2. Once the indicator light turns off, press the steam button for continuous steam or the steam shot button for a powerful burst (up to 200g/min).
3. The iron provides 50 g/min continuous steam output.

5.4 Vertical Steam

The steam shot function can also be used for vertical steaming of hanging garments, curtains, or drapes. Hold the iron vertically a few centimeters away from the fabric and press the steam shot button.

5.5 Water Spray

Press the water spray button to lightly mist stubborn creases with water. This function can be used with or without steam.

5.6 Auto-Off Feature

For safety and energy saving, the iron is equipped with an auto-off feature. If left motionless in a horizontal position for 30 seconds, or in a vertical position for 8 minutes, the iron will automatically switch off. The indicator light will flash to signal this. Move the iron to reactivate it.



Figure 4: The Braun TexStyle 5 Pro Steam Iron SI5037VI being used to iron a garment, demonstrating its ease of handling.

6. MAINTENANCE

6.1 After Each Use

1. Unplug the iron and allow it to cool down completely.
2. Empty any remaining water from the tank to prevent scale buildup.

6.2 Cleaning the Soleplate

To clean the FreeGlide 3D SuperCeramic soleplate, wipe it with a damp cloth and a non-abrasive liquid cleaner after it has cooled down. Do not use abrasive pads or harsh chemicals.

6.3 Self-Clean Function

The iron features a self-clean function to remove mineral deposits from the steam chamber. Refer to the full product manual for detailed instructions on activating this feature, typically performed monthly or as needed.

6.4 Anti-Drip System

The anti-drip system prevents water from dripping onto fabrics when ironing at low temperatures. If you notice dripping, ensure the temperature setting is appropriate for steam generation.

6.5 Storage

Store the cooled iron in an upright position on its heel rest to protect the soleplate. Wrap the power cord neatly around the cord wrap area if available.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------|---|--|
| Iron not heating up. | Not plugged in; power outlet fault; auto-off activated. | Check power connection; try another outlet; move the iron to reactivate. |
| No steam or insufficient steam. | Water tank empty; temperature too low for steam; steam vents blocked. | Fill water tank; increase temperature setting; perform self-clean. |
| Water leaking from soleplate. | Temperature too low for steam; overfilled water tank; scale buildup. | Increase temperature; do not overfill; perform self-clean. |
| Soleplate sticking to fabric. | Temperature too high for fabric; soleplate dirty. | Reduce temperature; clean soleplate when cool. |

8. SPECIFICATIONS

- **Model:** SI 5037 VI
- **Power / Wattage:** 2700 watts
- **Water Tank Capacity:** 300 Milliliters
- **Voltage:** 240 Volts
- **Soleplate Material:** FreeGlide 3D SuperCeramic
- **Continuous Steam Output:** 50 g/min
- **Steam Shot:** 200 g/min
- **Special Features:** Auto Shutoff, Anti-Drip, Self-Clean, Water Spray

- **Product Dimensions:** 30 x 14 x 14 cm
- **Item Weight:** 1.4 Kilograms

9. WARRANTY AND SUPPORT

Your Braun TexStyle 5 Pro Steam Iron SI5037VI comes with a 2-year manufacturer's warranty, covering defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. For technical support, service, or to inquire about replacement parts, please contact Braun customer service in your region. Contact information can typically be found on the Braun official website or in the packaging materials.