

## Ariete 2758

# Ariete Cordless Stick Vacuum Cleaner Model 2758 User Manual

Model: 2758 | Brand: Ariete

## 1. INTRODUCTION

---

Thank you for choosing the Ariete Cordless Stick Vacuum Cleaner Model 2758. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This cordless electric stick vacuum cleaner features a digital motor and double suction power. It is equipped with a rechargeable lithium-ion battery (2200 mAh) and can be easily converted into a portable handheld vacuum. The vacuum offers 3 levels of filtration and comes with 3 brushes and a set of accessories.



Image: The Ariete Cordless Stick Vacuum Cleaner Model 2758, showcasing its sleek design.

## 2. SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.
- Do not modify or attempt to repair the appliance or the battery pack.

## 3. PACKAGE CONTENTS

---

Please check the package contents to ensure all items are present and undamaged.

- Main Vacuum Unit (with digital motor and dustbin)
- Extension Tube
- Motorized Brush with Soft Roller and LED Lights (for hard floors)
- Motorized Brush with Bristles and LED Lights (for carpets and rugs)
- Pet Hair Brush
- Crevice Tool
- Upholstery Tool / Fabric Attachment
- Wall Mount Holder with Integrated Accessory Holder

- Rechargeable Lithium-ion Battery (2200 mAh)
- Charging Adapter
- User Manual



Image: All included accessories for the Ariete Cordless Stick Vacuum Cleaner Model 2758, including various brushes, crevice tool, and wall mount.

## 4. SETUP

### 4.1. Assembly

1. **Attach the Extension Tube:** Align the main vacuum unit with the extension tube and push until it clicks into place.
2. **Attach the Floor Brush:** Connect your desired floor brush (soft roller for hard floors or bristled for carpets) to the end of the extension tube, ensuring it clicks securely.
3. **Handheld Configuration:** For handheld use, detach the extension tube and connect accessories like the crevice tool or pet brush directly to the main unit.





Image: The main vacuum unit being connected to the extension tube.

#### 4.2. Charging the Battery

- Before first use, fully charge the battery.
- Connect the charging adapter to the charging port on the main unit or directly to the battery if detachable.
- Plug the adapter into a power outlet. The battery indicator lights will show the charging status.

- Charging typically takes several hours. Disconnect the charger once fully charged.



Image: Top view of the main unit, highlighting the battery and indicator lights.

### 4.3. Wall Mount Installation

- Choose a suitable location on a wall, preferably near a power outlet for convenient charging.
- Use the provided screws and anchors to securely fasten the wall mount holder to the wall.
- The wall mount includes integrated accessory holders for organized storage.
- Hang the assembled vacuum cleaner on the wall mount for storage and charging.



Image: The vacuum cleaner stored on its wall mount, demonstrating space-saving storage.

## 5. OPERATING INSTRUCTIONS

### 5.1. Power On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on.
- The vacuum features 2 speed/suction settings. Press the mode button to switch between standard and maximum suction power.
- Press the power button again to turn the vacuum cleaner off.

### 5.2. Using Floor Brushes

- **Soft Roller Brush:** Ideal for hard floors like wood, tile, and laminate. The soft roller gently cleans without scratching, and LED lights illuminate dust.
- **Bristled Brush:** Designed for carpets and rugs, the bristles agitate fibers to lift embedded dirt and debris. LED lights provide visibility in dark areas.



Image: The vacuum cleaner in stick mode, cleaning under furniture with its main floor brush.

### 5.3. Handheld Mode and Specialized Attachments

- To convert to handheld mode, press the release button to detach the extension tube from the main unit.
- **Crevice Tool:** Attach the crevice tool directly to the main unit for cleaning tight spaces, corners, and edges, such as between sofa cushions or car seats.
- **Pet Hair Brush:** Use the specialized pet hair brush to effectively remove pet hair from upholstery, pet beds, and other fabric surfaces.
- **Upholstery Tool:** The upholstery tool is suitable for cleaning sofas, chairs, curtains, and other fabric items.
- **High Area Cleaning:** Attach the crevice tool or other suitable attachment to the extension tube for reaching high areas like ceiling corners or air vents.



Image: Handheld vacuum with crevice tool, cleaning dust from a bookshelf.



Image: Handheld vacuum cleaning the interior of a car, reaching tight spots.



Image: Handheld vacuum with the pet brush attachment, cleaning a pet bed.



Image: Handheld vacuum with the upholstery tool, cleaning a sofa.



Image: The vacuum cleaner in stick mode with a crevice tool, reaching to clean a high air conditioning unit.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner. Always ensure the appliance is turned off and unplugged from the charger before performing any maintenance.

### 6.1. Emptying the Dustbin

- The dustbin should be emptied regularly, especially when the MAX fill line is reached.
- Hold the main unit over a trash can.
- Press the dustbin release button to open the bottom flap and empty the contents.
- Close the flap securely until it clicks.



Image: The main unit with the dustbin open, demonstrating how to empty it into a trash can.

### 6.2. Cleaning the Filters

- The vacuum cleaner features a 3-level filtration system. Regularly clean all filters to maintain suction power.
- Twist and pull to remove the filter assembly from the dustbin.
- Separate the individual filter components (e.g., metal mesh filter, cloth filter, HEPA filter).
- Tap off loose dirt over a trash can. For washable filters, rinse under cold running water until the water runs clear.
- Allow all filter parts to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use the vacuum with wet filters.



Image: The three-level filtration system components, including metal mesh, cloth, and pleated filters.

### 6.3. Cleaning Brushes and Attachments

- Periodically check the roller brushes for tangled hair or debris.
- Remove the roller brush from its housing (refer to specific instructions for your brush type).
- Use scissors or a brush to remove any tangled hair or fibers.
- Wipe down all attachments with a damp cloth. Ensure they are dry before reattaching.

## 7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Ensure battery is fully charged and correctly seated in the main unit.
Low suction power.	Dustbin is full, filters are clogged, or an attachment is blocked.	Empty the dustbin. Clean or replace filters. Check for blockages in the nozzle, tube, or attachments.
Brush roll not spinning.	Hair or debris tangled in the brush roll, or brush roll is jammed.	Turn off the vacuum and remove any obstructions from the brush roll. Ensure it can spin freely.
Short battery life.	Battery not fully charged, or battery degradation over time.	Ensure battery is fully charged before use. If battery life significantly decreases, consider replacing the battery.

## 8. SPECIFICATIONS

Technical specifications for the Ariete Cordless Stick Vacuum Cleaner Model 2758.

Feature	Detail
Brand	Ariete
Model Number	2758
Color	Red
Product Dimensions	26 x 18 x 105 cm
Item Weight	2.1 Kilograms
Capacity	1 Liter
Power / Wattage	200 Watts
Voltage	22.2 Volts
Number of Speeds	2
Noise Level	44 dB
Run Time	35 minutes
Special Features	Upright design, Cordless operation, Digital Motor, Double Suction Power, 3 Filtration Levels, LED lights on brushes
Filter Type	Cloth (Multi-level filtration system)
Surface Recommendation	Hard floor, Carpets, Upholstery
Power Source	Battery Powered (Rechargeable Lithium-ion)

## 9. OFFICIAL PRODUCT VIDEO

Watch the official product video for a visual guide on the features and usage of the Ariete Cordless Stick Vacuum Cleaner Model 2758.

Your browser does not support the video tag.

Video: An overview of the Ariete Cordless Stick Vacuum Cleaner Model 2758, demonstrating its assembly, various cleaning modes, attachments, and ease of use for different surfaces and tasks, including pet hair removal and car cleaning.

## 10. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Ariete website or contact their customer service. Keep your purchase receipt as proof of purchase.

**Online Support:** Visit the [Ariete Brand Store](#) for more information and support resources.