

[Manuals.plus](#) /

› [KLARSTEIN](#) /

› Klarstein Delicatessa 90 Induction Hob User Manual

KLARSTEIN Delicatessa 90

Klarstein Delicatessa 90 Induction Hob User Manual

Model: Delicatessa 90

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Klarstein Delicatessa 90 induction hob. Please read these instructions thoroughly before using the appliance and retain them for future reference.



Image 1.1: Top view of the Klarstein Delicatessa 90 induction hob, showcasing its black glass-ceramic surface and control panel.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the appliance.

- **Electrical Safety:** Ensure the appliance is correctly earthed and connected to a suitable power supply as specified in the technical data. Disconnect from power before any maintenance or cleaning.
- **Induction Specific Warnings:** Individuals with pacemakers or similar medical implants should consult their doctor before using an induction hob. Do not place metal objects such as knives, forks, spoons, or lids on the hob surface as they can become hot.
- **Hot Surfaces:** The hob surface will retain residual heat after use. Avoid touching hot surfaces.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Supervise children to ensure they do not play with the appliance. Activate the child lock function when not in use.
- **Ventilation:** Ensure adequate ventilation around the appliance during installation and operation.
- **Proper Use:** Use only induction-compatible cookware. Do not heat empty pots or pans.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Power Levels:** 9 adjustable power levels for precise cooking control.
- **Timer Function:** Programmable shut-off timer up to 99 minutes.
- **Flex Zone Technology (VarioHeating):** Combines two cooking zones into a single large zone for larger cookware.
- **Pot Detection:** Automatically detects the presence and size of induction-compatible cookware.
- **Booster Function (ThermoBoost):** Provides increased power for rapid heating.
- **Safety Features:** Automatic shutdown, overheating protection, and switchable child lock.
- **Control Panel:** SenseControl touch panel with digital display.
- **Economy Function:** Automatically reduces cooking zone power to prevent overload.
- **EcoThermal Control:** Residual heat indicator for energy-efficient cooking.
- **ThermalRecall (Stop & Go):** Function for pausing and resuming cooking with previous settings.

3.2 Cooking Zones and Power Distribution

The hob features five cooking zones with a total maximum power output of 7000 W.

- Four rectangular hobs: Each 18 x 18 cm, with individual power up to 2000 W.
- One large round hob (middle): Ø 21 cm, with individual power up to 2300 W.



POWERFUL HEAT

Total output of max. 7000 watts in five cooking zones with 1500 up to 2300 watts individual heating

Image 3.1: Diagram illustrating the power distribution across the five cooking zones of the Klarstein Delicatessa 90 induction hob, showing individual wattage for each zone.

3.3 Control Panel

The SenseControl touch panel allows for intuitive operation of all functions.



Touch-to-slide



TOUCH-TO-SLIDE

SenseControl control panel with slider function and digital display

Image 3.2: Close-up view of the SenseControl touch panel on the Klarstein Delicatessa 90 induction hob, highlighting the slider function and digital display for power level and timer settings.

4. INSTALLATION

The Klarstein Delicatessa 90 is designed for built-in installation in a kitchen unit. Ensure all electrical connections are made by a qualified electrician.

4.1 Installation Dimensions

- **Overall Dimensions (WxHxD):** 90 x 6 x 52 cm (approximately 35.43 x 2.4 x 20.47 inches)
- **Installation Dimensions (WxHxD):** 87 x 5.5 x 49 cm
- **Minimum Width All-Round Worktop:** 5 cm
- **Minimum Thickness of the Worktop:** 3 cm
- **Minimum Distance to Kitchen Slopes Above:** 76 cm
- **Minimum Clearance Under the Device:** 5 cm
- **Air Circulation Space:** Minimum 2 cm

4.2 Electrical Connection

- **Connection Cable:** 5-pin

- **Power Supply:** 380-415 V 3N or 220-240 V ~ | 50/60 Hz

The appliance comes with mounting material for installation in the kitchen unit.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the on/off switch on the touch control panel to activate or deactivate the hob.

5.2 Adjusting Power Levels

Select the desired cooking zone and use the slider function on the SenseControl panel to adjust the power level from 1 to 9.

5.3 Timer Function

The timer can be set for individual cooking zones up to 99 minutes. Once the set time expires, the cooking zone will automatically switch off.

5.4 Flex Zone (VarioHeating)

The left and right pairs of rectangular hobs can be combined to form a single large flex zone. This is ideal for larger pots, pans, or griddle plates.



VarioHeating

FLEXIBLE HOBS

VarioHeating for the
combination of
two cooktops



Image 5.1: Illustration demonstrating the VarioHeating feature of the Klarstein Delicatessa 90 induction hob, showing how two cooking zones can be combined to create a larger flexible cooking area for extended cookware like a grill pan.

5.5 Booster Function (ThermoBoost)

Activate the booster function for a selected cooking zone to temporarily increase its power output for faster heating, such as boiling water quickly. The flex zone can reach up to 3000 watts with this function.



ThermoBoost

MORE POWER

Every cooking zone with
ThermoBoost function with up to max.
3000 watts in the flex zone

Image 5.2: Graphic depicting the ThermoBoost function, indicating increased power for cooking zones on the Klarstein Delicatessa 90 induction hob.

5.6 Child Lock

Activate the child lock to prevent accidental operation of the hob. Refer to the control panel instructions for specific activation and deactivation steps.

5.7 ThermalRecall (Stop & Go)

This function allows you to pause cooking and resume with the same settings. Press the Stop & Go button to pause, and press it again to continue cooking.



STOP & GO

ThermalRecall function for storing the temperature
for breaks in cooking

Image 5.3: Image illustrating the 'Stop & Go' or ThermalRecall function, showing a person on the phone while cooking, implying the ability to pause cooking without losing settings.

5.8 EcoThermal Control

The hob features a residual heat indicator. This indicator will illuminate to show that a cooking zone is still hot after use, allowing for energy-saving cooking by utilizing the residual heat.

ENERGY-SAVING COOKING

EcoThermal Control with
residual heat
indicator for using
residual heat



Image 5.4: Image showing two pots on the Klarstein Delicatessa 90 induction hob, illustrating the concept of energy-saving cooking through EcoThermal Control and residual heat utilization.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your induction hob.

- **Daily Cleaning:** After each use, wipe the glass-ceramic surface with a soft cloth and a mild cleaning agent. Avoid abrasive cleaners or scouring pads.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized glass-ceramic scraper, holding it at a shallow angle.
- **Control Panel:** Clean the touch control panel with a damp cloth. Ensure it is dry before operating the hob.
- **Ventilation:** Ensure that the ventilation openings under the hob are not blocked.

7. TROUBLESHOOTING

If you encounter issues with your Klarstein Delicatessa 90 induction hob, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hob does not turn on	No power supply; Child lock activated	Check circuit breaker; Deactivate child lock
Cooking zone not heating	Non-induction compatible cookware; No pot detected	Use induction-compatible cookware; Ensure pot is centered on zone
Display shows an error code	Specific internal fault	Refer to the full manual for specific error code meanings or contact customer support.
Hob switches off unexpectedly	Overheating protection activated; Automatic shutdown	Allow hob to cool down; Check if timer expired

8. SPECIFICATIONS

Specification	Value
Brand	KLARSTEIN
Model Info	Klarstein Delicatessa
Item Model Number	CP4-Delicatessa-90FI
Installation Type	Drop-In
Burner Type	Induction
Heating Elements	5
Material Type	Glass Ceramic
Color	Black
Voltage	220 Volts (also supports 380-415V 3N)
Wattage	7000 watts (total)
Item Weight	Approximately 12 kg (26.4 pounds)
Product Dimensions (WxHxD)	90 x 6 x 52 cm (35.43 x 2.4 x 20.47 inches)
Included Components	Built-in electric induction hob, mounting material

9. WARRANTY AND SUPPORT

Warranty information is typically provided with your purchase. For specific warranty details, product registration, or technical support, please refer to the documentation included with your appliance or contact Klarstein customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question