

## Hotpoint HFO 3O32 CW X

# Hotpoint Ariston HFO 3O32 CW X Freestanding Dishwasher User Manual

## 1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential information for the safe and efficient operation of your Hotpoint Ariston HFO 3O32 CW X freestanding dishwasher. Please read these instructions carefully before installation and use, and keep them for future reference.

### 1.1 General Safety Warnings

- Ensure the appliance is properly grounded to prevent electrical shock.
- Do not allow children to operate or play with the dishwasher.
- Keep detergents and rinse aid out of reach of children.
- Never open the door during operation, especially during the hot wash cycle.
- Sharp items should be loaded with points down to prevent injury.
- In case of malfunction, disconnect the appliance from the power supply before attempting any repairs. Contact qualified service personnel.

## 2. PRODUCT OVERVIEW AND FEATURES

The Hotpoint Ariston HFO 3O32 CW X is a freestanding dishwasher designed for efficient and thorough cleaning of your dishes. It features advanced technologies for optimal performance and energy saving.

### 2.1 Key Features

- **ActiveDry System:** Automatically opens the door at the end of the cycle to ensure excellent drying results and energy savings.
- **Active 3D Zone Wash:** Allows you to select specific washing zones and adjust water pressure for targeted cleaning or reduced consumption.
- **Inverter Motor:** Regulates water pressure according to the load, optimizing consumption and reducing noise levels to 42 dB.

- **Cutlery Tray:** A practical, sliding, and removable third rack for flexible loading of cutlery and small items.
- **Delayed Start:** Option to delay the start of the wash program by 1-24 hours.
- **Aquastop System:** Provides maximum safety by protecting against water leaks and flooding.
- **Stainless Steel Interior:** Ensures long-lasting durability and hygiene.

## 2.2 Dishwasher Components



**Image 1:** Front view of the Hotpoint Ariston HFO 3032 CW X freestanding dishwasher. This image shows the appliance's exterior, including the control panel and door handle area.



**Image 2:** Interior view of the dishwasher with the door open, revealing the upper and lower baskets, and the cutlery tray. This illustrates the loading capacity and basket design.



**Image 3:** Close-up of the control panel, showing the display and various program selection buttons and indicators.



**Image 4:** Diagram illustrating the flexible loading options within the dishwasher baskets, including the adjustable upper basket and cutlery tray.

### 3. INSTALLATION INSTRUCTIONS

---

Your Hotpoint Ariston HFO 3O32 CW X is a freestanding dishwasher. Proper installation is crucial for its performance and safety. It is recommended that installation be performed by a qualified technician.

#### 3.1 Unpacking and Positioning

- Carefully remove all packaging materials.
- Position the dishwasher on a level, stable floor surface.
- Ensure there is adequate space around the appliance for ventilation and door opening.

#### 3.2 Water Connection

- Connect the water inlet hose to a cold water supply tap with a 3/4 inch thread. Ensure the connection is tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe or sink trap, ensuring it is securely fastened and allows for proper drainage.

#### 3.3 Electrical Connection

- The dishwasher requires a 220 Volt power supply.
- Ensure the electrical outlet is properly grounded and meets local electrical codes.
- Do not use extension cords or adapters.
- The power cable length is 60 cm. Ensure the appliance is positioned close enough to a suitable outlet.
- **Important Safety Note:** As noted in some user experiences, ensure your home's electrical system has proper grounding. If you detect any electrical dispersion, immediately disconnect the appliance and consult a qualified electrician.

### 3.4 Dimensions

The physical dimensions of the dishwasher are:

- Depth (P): 59 cm
- Width (L): 60 cm
- Height (H): 85 cm

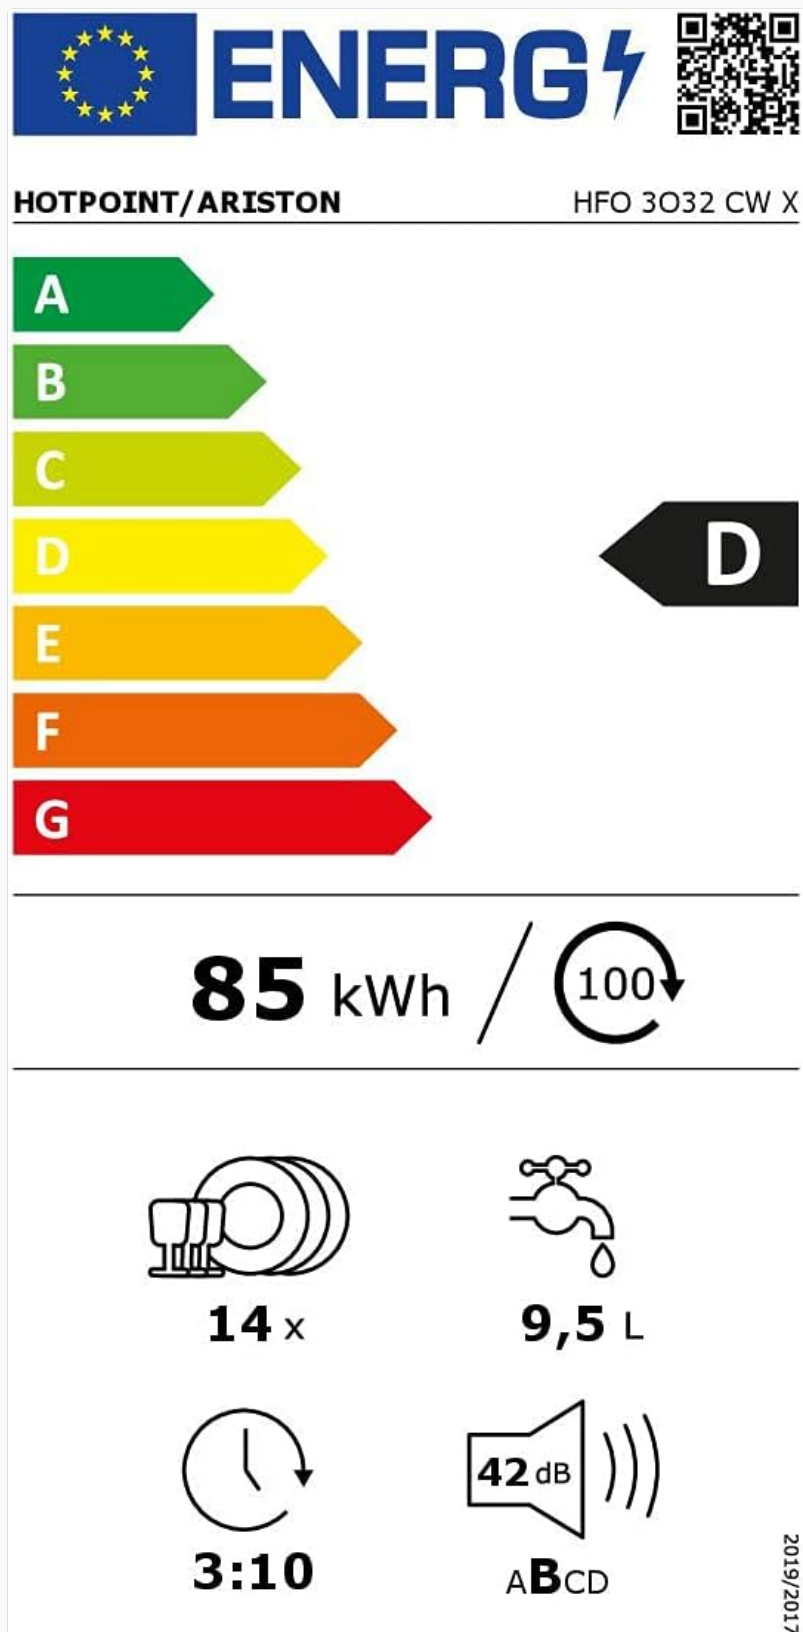


Image 5: Diagram showing the precise dimensions of the Hotpoint Ariston HFO 3032 CW X dishwasher for installation planning.

## 4. OPERATING INSTRUCTIONS

Follow these steps for effective and efficient use of your dishwasher.

### 4.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place dishes securely in the baskets, ensuring water spray can reach all surfaces.
- Utilize the adjustable upper basket for taller items.
- Arrange cutlery in the dedicated sliding and removable cutlery tray, points down for safety.
- Avoid overcrowding to ensure optimal cleaning.

### 4.2 Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser as needed for streak-free drying.

### 4.3 Program Selection

Your dishwasher offers 10 wash programs:

- **Eco:** Energy-efficient program for normally soiled dishes.
- **Delicati (Delicate):** For fragile items like glasses.
- **Buona Notte (Good Night):** Quieter program, ideal for overnight use.
- **Rapido (Rapid):** Quick wash for lightly soiled dishes.
- **Igienizzante (Sanitizing):** High-temperature wash for enhanced hygiene.
- **Prelavaggio (Pre-wash):** Rinses dishes to prevent food from drying on.
- **Misti (Mixed):** For mixed loads of normally soiled dishes.
- **Intensivo (Intensive):** For heavily soiled pots and pans.
- **Autopulente (Self-cleaning):** Program for cleaning the dishwasher itself.

Select the desired program using the control panel buttons.

### 4.4 Using Active 3D Zone Wash

This feature allows you to concentrate washing power on specific areas. Consult the control panel for options to increase power by 40% or reduce consumption based on your load.



**Image 6:** Illustration of water jets inside the dishwasher, demonstrating the targeted cleaning action of the Active 3D Zone Wash feature.

## 4.5 Delayed Start Function

To delay the start of a program, press the delayed start button and select the desired delay time (1-24 hours). The dishwasher will start automatically after the set time.

## 4.6 Starting and Ending a Cycle

- Press the Start button to begin the selected program.
- At the end of the cycle, the ActiveDry system will automatically open the door by 10 cm to facilitate drying.
- Wait a few minutes before unloading dishes to allow them to cool and dry completely.

# 5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

## 5.1 Cleaning the Filters

- Periodically check and clean the filter assembly at the bottom of the dishwasher.
- Remove any food debris and rinse the filters under running water.
- Reassemble the filters correctly before operating the dishwasher.

## 5.2 Cleaning the Spray Arms

- Ensure the spray arm nozzles are not clogged. If necessary, remove the spray arms and clean any blockages.

## 5.3 Exterior and Interior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- The stainless steel interior can be cleaned with a specialized stainless steel cleaner if needed, following product instructions.
- Run the 'Autopulente' (Self-cleaning) program periodically to maintain interior hygiene.

# 6. TROUBLESHOOTING GUIDE

Before contacting customer service, refer to this guide for common issues and their solutions.

## 6.1 Common Problems and Solutions

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start.
Dishes not clean	Incorrect loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms and filters, add more detergent.
Water not draining	Clogged drain hose or filter, drain pump issue.	Clean filters, check drain hose for kinks or blockages.

Problem	Possible Cause	Solution
Excessive noise	Dishes interfering with spray arms, foreign object in pump, improper leveling.	Rearrange dishes, check for obstructions, ensure dishwasher is level.
Water leaks	Loose hose connections, damaged door seal.	Check and tighten hose connections, inspect door seal for damage.

If the problem persists after attempting these solutions, please contact Hotpoint customer support.

## 7. TECHNICAL SPECIFICATIONS

Specification	Value
Model Number	HFO 3O32 CW X
Form Factor	Freestanding
Dimensions (D x W x H)	59 cm x 60 cm x 85 cm
Item Weight	47 kg
Voltage	220 Volt
Cable Length	60 cm
Place Settings Capacity	14
Water Consumption (per cycle)	9.5 Liters
Noise Level	42 Decibel
Energy Efficiency Class	D
Programs	Eco, Delicati, Buona Notte, Rapido, Igienizzante, Prelavaggio, Misti, Intensivo, Autopulente
Special Features	ActiveDry, Active 3D Zone Wash, Inverter Motor, Delayed Start (1-24h), Adjustable Upper Basket, Child Safety, Aquastop
Energy Label Link	<a href="#">View EU Energy Label</a>

HFO 3032 CW X  
12NC 869991609540  
Codice EAN: 8050147609545

Hotpoint  
ARISTON



#### CARATTERISTICHE PRINCIPALI

Tipologia estrattiva del prodotto	A libera installazione
Tipologia di installazione	A libera installazione
Tipologia di controllo	Elettronica
Tipologia dei dispositivi di controllo e regolazione	-
Pannello comandi	SI
Colore principale	Stainless
Sistemi di collegamento elettrico	13000
Corrente	10
Resistenza	220-240
Frequenza	50
Lunghezza del cavo di alimentazione elettrica	1300
Tipologia di cavo	Schede
Lunghezza tubo entrata	155
Lunghezza tubo uscita	150
Placche espositivi	SI - sotto gli sportelli
Altezza del prodotto	850
Lunghezza del prodotto	600
Profondità del prodotto	550
Altezza minima della nicchia	850
Altezza massima della nicchia	900
Lunghezza minima della nicchia	600
Lunghezza massima della nicchia	600
Profondità della nicchia	550
Peso netto	47
Peso lordo	47

#### SPECIFICHE TECNICHE

Programmi automatici	SI
Massima temperatura lavascioglimento acqua	60
Opzioni partenza ritardata	Regolazione continua
Tempo massimo di partenza ritardata	24
Indicatore avanzamento programma	-
Indicatore digitale resto ciclo reverse	SI
Sola essiccazione sale	SI
Sola brillantante	SI
Dispositivo di sicurezza	SI
Catella superiore regolabile	SI
Dimensioni max cinesia piatto caricabile su cassetto superiore	0
Dimensioni max cinesia piatto caricabile su cassetto inferiore	0
Numero max cinesie di carico (UE 2017/1369)	14
Installazione a colonna	No

#### PRESTAZIONI

Classe di efficienza energetica (Regolamento (UE) 2017/1369)	D
Consumo energetico del programma Eco per 100 cicli (UE 2017/1369)	85
Consumo di energia in modalità attesa (UE 2017/1369)	0,50
Consumo di energia in modalità standby (UE 2017/1369)	0,50
Consumo di acqua del programma eco in litri per ciclo (UE 2017/1369)	8,5
Intensità di rumore aereo (EU 2017/1369)	47
Classe di emissione di rumore aereo (EU 2017/1369)	B
Deriva del programma (UE 2017/1369)	±10

www.whirlpool.es

**Image 7:** The EU Energy Label for the Hotpoint Ariston HFO 3032 CW X, indicating its energy efficiency class D and other performance metrics.

## 8. WARRANTY AND CUSTOMER SUPPORT

For warranty information and customer support, please refer to the following guidelines:

### 8.1 Product Returns and Warranty

If you wish to return a product within 30 days of receipt due to a change of mind, please consult the retailer's return policy page. For defective or damaged products, refer to the specific return and warranty policies provided by your point of purchase. For purchases made through marketplaces, specific marketplace policies may apply.







### 8.2 Technical Assistance

For technical assistance, spare parts, or further inquiries regarding your Hotpoint Ariston HFO 3032 CW X dishwasher, please contact Hotpoint customer service directly. Contact details can typically be found on the official Hotpoint website or in the documentation provided with your appliance.

© 2023 Hotpoint. All rights reserved. This manual is for informational purposes only.

## Related Documents - HFO 3032 CW X

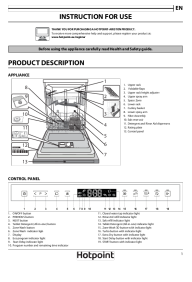

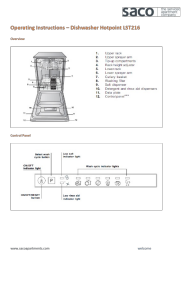 <p>Hotpoint</p>	<p><a href="#">Hotpoint Dishwasher Daily Reference Guide: Programs, Settings, and Troubleshooting</a></p> <p>Comprehensive daily reference guide for Hotpoint dishwashers, covering control panel functions, program selection, settings adjustment, loading tips, maintenance, and troubleshooting. Learn how to optimize your dishwasher's performance and energy efficiency.</p>
 <p>Hotpoint</p>	<p><a href="#">Hotpoint Dishwasher Daily Reference Guide</a></p> <p>A comprehensive guide to using and maintaining your Hotpoint dishwasher, covering control panel functions, daily use, program selection, options, loading tips, and troubleshooting.</p>
 <p>Hotpoint</p>	<p><a href="#">Hotpoint Dishwasher Instruction Manual and User Guide</a></p> <p>Comprehensive guide for Hotpoint dishwashers, covering product description, first-time use setup, programs, options, daily use, loading racks, care and maintenance, installation, and troubleshooting. Includes technical data and contact information.</p>
 <p>Hotpoint</p>	<p><a href="#">Hotpoint LTF 11M113 7C Dishwasher: Instructions for Use</a></p> <p>Comprehensive user manual for the Hotpoint LTF 11M113 7C dishwasher, covering installation, operation, maintenance, safety advice, and troubleshooting.</p>
 <p>Hotpoint</p>	<p><a href="#">Hotpoint HFC 3C26 F Dishwasher Safety Instructions and User Manual</a></p> <p>Comprehensive safety instructions, installation guide, usage tips, and disposal information for the Hotpoint HFC 3C26 F freestanding dishwasher. This document provides essential guidance for safe operation, maintenance, and energy efficiency.</p>
 <p>Hotpoint</p>	<p><a href="#">Hotpoint LST216 Dishwasher: Operating Instructions and Wash Cycle Guide</a></p> <p>Comprehensive operating instructions for the Hotpoint LST216 dishwasher, detailing setup, wash cycles, detergent usage, and control panel functions. Includes a guide to different wash programs for optimal cleaning.</p>