

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Accutime](#) /

› [Accutime Pokémon Poké Ball Touchscreen Kids Smart Watch User Manual](#)

Accutime POK4230AZ

Accutime Pokémon Poké Ball Touchscreen Kids Smart Watch User Manual

Model: POK4230AZ

1. INTRODUCTION AND OVERVIEW

Welcome to the world of interactive timekeeping with your new Accutime Pokémon Poké Ball Touchscreen Kids Smart Watch. This manual provides essential information for setting up, operating, and maintaining your watch to ensure a fun and educational experience.



Figure 1: Accutime Pokémon Poké Ball Touchscreen Kids Smart Watch (Red)

Key Features:

- Official Poké Ball watch face and matching wallpaper for immersive styling.
- Built-in selfie camera for taking photos and short video clips.
- Integrated voice recorder for capturing notes, sounds, or playful messages.
- Functional alarm, timer, and stopwatch to assist with time management.

- Soft silicone strap designed to fit wrists from 5.5" to 8", suitable for ages 4 and up.
- Full-color digital display with multiple Pokémon-themed faces and wallpapers.
- Simple, icon-based user interface for easy navigation.

2. WHAT'S IN THE BOX

Upon opening your product packaging, please ensure all the following items are present:

- Accutime Pokémon Poké Ball Touchscreen Kids Smart Watch
- USB Charging Cable
- Instruction Manual (this document)



Figure 2: Rear view of the Smart Watch, highlighting the strap and USB port location.

3. SETUP

3.1 Charging the Watch

Before first use, fully charge the watch. The watch contains a built-in Lithium Polymer battery.

1. Locate the USB charging port on the side of the watch.
2. Connect the small end of the provided USB cable to the watch's charging port.
3. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. The watch display will indicate charging status. A full charge typically takes approximately 2-3 hours.
5. Once fully charged, disconnect the USB cable.

3.2 Powering On/Off

- To power on: Press and hold the power button (usually on the side) until the screen illuminates.
- To power off: Press and hold the power button until a power-off option appears on the screen, then confirm.

3.3 Setting Time and Date

The watch may prompt you to set the time and date upon first power-on or after a factory reset. If not, navigate to the 'Settings' menu on the watch.

1. From the main watch face, swipe or tap to find the 'Settings' icon.
2. Tap 'Settings' and then locate 'Time' or 'Date & Time'.
3. Adjust the hour, minute, year, month, and day using the touchscreen controls.
4. Confirm your selections to save the settings.

3.4 Adjusting the Strap

The soft silicone strap is adjustable to fit various wrist sizes.

- Thread the strap through the buckle and secure it using the appropriate hole for a comfortable fit.
- Ensure the watch is snug but not too tight, allowing for proper circulation.

4. OPERATING INSTRUCTIONS

The Accutime Pokémon Smart Watch features an intuitive touchscreen interface. Swipe left or right on the main screen to access different applications and features.

4.1 Camera Function

Capture photos and short video clips with the built-in selfie camera.

1. From the main screen, tap the 'Camera' icon.
2. To take a photo: Tap the camera shutter icon on the screen.
3. To record a video: Tap the video camera icon to start recording, and tap again to stop.
4. View your photos and videos in the 'Album Viewer' or 'Gallery' application.

4.2 Voice Recorder

Record and play back audio messages or sounds.

1. Tap the 'Voice Recorder' icon.
2. Tap the 'Record' button to begin recording.

3. Tap the 'Stop' button to end the recording.
4. Recordings can be played back directly from the Voice Recorder app or accessed via a 'Files' or 'Recordings' folder.

4.3 Alarm, Timer, and Stopwatch

These tools help with time management and daily routines.

- **Alarm:** Tap the 'Alarm' icon. You can set a specific time for the alarm to sound. Follow the on-screen prompts to set the hour and minute.
- **Timer:** Tap the 'Timer' icon. Set a countdown period, and the watch will alert you when the time expires.
- **Stopwatch:** Tap the 'Stopwatch' icon. Use it to measure elapsed time. Tap to start, stop, and reset.

4.4 Changing Watch Faces and Wallpapers

Personalize your watch with various Pokémon-themed watch faces and wallpapers.

1. From the main watch face, long-press on the screen or navigate to the 'Wallpapers' or 'Watch Faces' icon in the app menu.
2. Swipe through the available options and tap to select your preferred watch face or wallpaper.
3. The selected design will immediately apply to your watch.



Figure 3: Examples of changeable watch faces.

4.5 Calculator

Perform basic arithmetic calculations.

- Tap the 'Calculator' icon.
- Use the touchscreen number pad and operation symbols to input calculations.

4.6 Product Overview Video

Your browser does not support the video tag.

Video 1: A brief overview of the Accutime Pokémon Smart Watch, showcasing its design and some features.

5. MAINTENANCE

5.1 Cleaning the Watch

- Wipe the watch and strap with a soft, dry, or slightly damp cloth.
- Do not use harsh chemicals, cleaning sprays, or abrasive materials, as these can damage the watch.
- The watch is not waterproof; avoid submerging it in water or exposing it to excessive moisture.

5.2 Battery Care

- Charge the watch regularly, even if not in frequent use, to maintain battery health.
- Avoid completely draining the battery before recharging.
- Do not expose the watch to extreme temperatures (hot or cold), as this can affect battery performance and lifespan.

5.3 Storage

- When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch does not turn on.	Battery is depleted.	Charge the watch using the provided USB cable for at least 30 minutes.
Screen is unresponsive.	Temporary software glitch or low battery.	Restart the watch by holding the power button. Ensure the watch is charged.
Battery drains quickly.	Frequent use of camera/video, high screen brightness.	Reduce screen brightness. Limit continuous video recording. Ensure background apps are closed if applicable.
Cannot record photos/videos.	Insufficient storage space.	Delete old photos/videos from the 'Album Viewer' to free up space.
Watch is not recognized by computer.	Faulty USB cable or port.	Try a different USB port or cable. Ensure the watch is powered on.

If the problem persists after attempting these solutions, please contact Accutime customer support for further assistance.

7. SPECIFICATIONS

Model Number: POK4230AZ

Product Dimensions: 10 x 2 x 2.7 inches

Item Weight: 1.4 ounces

Battery: 1 Lithium Polymer battery (included)

Manufacturer: Accutime Watch Corp.

Recommended Age: 4 years and up

Strap Fit: 5.5" to 8" wrists

Features: Touchscreen, Camera, Voice Recorder, Alarm, Timer, Stopwatch, Calculator, Multiple Watch Faces

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Accutime Pokémon Smart Watch, please contact Accutime customer service.

You can find more information and contact details on the official Accutime website or through their Amazon store page: [Accutime Amazon Store](#).