#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Sharp /
- > Sharp SCHOTT CERAN KH-7IX19FS00-EU Induction Hob User Manual

## Sharp KH-7IX19FS00-EU

# **Sharp SCHOTT CERAN Induction Hob User Manual**

Model: KH-7IX19FS00-EU

#### 1. Introduction

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Sharp SCHOTT CERAN KH-7IX19FS00-EU Induction Hob. Please read this manual thoroughly before using the appliance and keep it for future reference.

The Sharp KH-7IX19FS00-EU is a 78 cm built-in induction hob featuring four cooking zones, Slider Touch Control, and advanced safety features designed for modern kitchens.

#### 2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not touch hot surfaces. Always use oven mitts or pot holders.
- Never leave the appliance unattended during operation.
- · Keep children away from the hob during and after use as surfaces remain hot.
- Do not store flammable materials on or near the hob.
- In case of a crack in the ceramic glass, immediately switch off the appliance and disconnect it from the power supply.
- This appliance is for domestic use only.

#### **Key Safety Features:**

- Residual Heat Indicator: Lights up to warn that a cooking zone is still hot after use.
- Child Safety Lock: Prevents accidental operation of the hob controls.
- Automatic Safety Shut-off: The hob will automatically switch off if a cooking zone is left on for an extended period without adjustment.

#### 3. PRODUCT OVERVIEW

The Sharp KH-7IX19FS00-EU induction hob features a sleek black SCHOTT CERAN glass surface with four

independent cooking zones and intuitive touch controls.

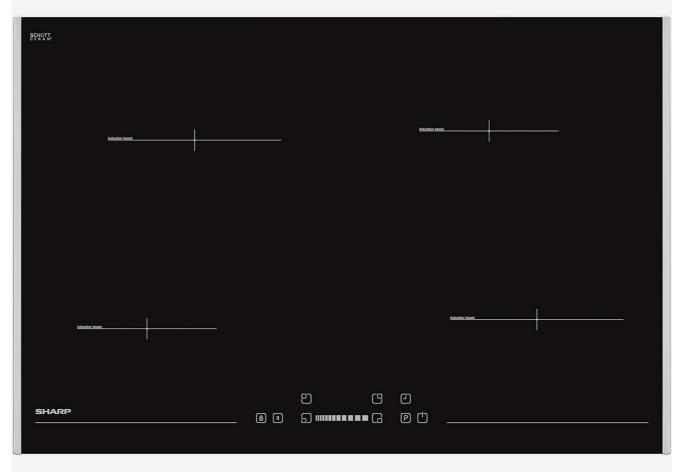


Figure 3.1: Top view of the Sharp SCHOTT CERAN KH-7IX19FS00-EU Induction Hob, showing the four cooking zones and the central control panel.

## **Control Panel:**

The hob is equipped with a Slider Touch Control panel located at the front center. This panel allows for precise control of each cooking zone's power level, timer settings, and activation of special functions.

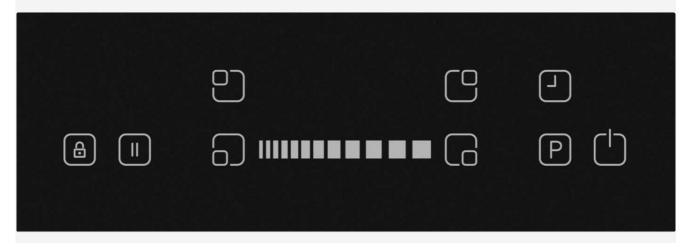


Figure 3.2: Close-up view of the Slider Touch Control panel, displaying icons for power adjustment, timer, child lock, and boost function.

The control panel includes:

- Power On/Off button
- · Individual zone selection buttons
- Slider for power level adjustment (9 levels + Boost)
- Timer control buttons

- · Child Lock button
- · Boost function button

## 4. SETUP AND INSTALLATION

The Sharp KH-7IX19FS00-EU is designed for built-in installation. Professional installation is highly recommended.

## What's in the Box:

- Sharp SCHOTT CERAN Induction Hob
- · Instruction Manual
- · Mounting Material

## **Installation Requirements:**

- Mounting Cut-out Dimensions: 75 cm (L) x 49 cm (W)
- Mounting Depth: 4.8 cm
- **Electrical Connection:** The appliance comes with a connection cable without a plug. It requires a dedicated electrical circuit. Refer to the specifications for voltage and frequency requirements.
- Ensure adequate ventilation space around and below the hob.

#### 5. OPERATING INSTRUCTIONS

## **Turning On/Off:**

- 1. Press the Power On/Off button to activate the hob.
- 2. To turn off, press the Power On/Off button again.

## Selecting a Cooking Zone and Adjusting Power:

- 1. Place suitable induction-compatible cookware on the desired cooking zone. The hob features Automatic Pot Recognition.
- 2. Select the cooking zone by touching its corresponding selection button.
- 3. Use the Slider Touch Control to adjust the power level from 1 to 9.
- 4. For rapid heating, select the Boost function (P) for the chosen zone. The Boost function provides maximum power for a limited time.

#### **Using the Timer:**

- 1. Select the cooking zone for which you want to set a timer.
- 2. Press the Timer button.
- 3. Use the slider or +/- buttons to set the desired cooking time.
- 4. The cooking zone will automatically switch off once the set time has elapsed.

## **Child Safety Lock:**

- 1. To activate the child lock, press and hold the Child Lock button until the indicator light illuminates.
- 2. To deactivate, press and hold the Child Lock button again until the indicator light turns off.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

- · Always ensure the hob is cool before cleaning.
- Wipe the ceramic glass surface with a soft cloth and a mild detergent after each use.
- For stubborn stains, use a specialized ceramic hob cleaner and a scraper designed for glass surfaces.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.
- · Clean the control panel gently with a damp cloth. Ensure no moisture enters the control area.

## 7. TROUBLESHOOTING

If you encounter issues with your hob, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child lock activated.	Check circuit breaker; Deactivate child lock.
Cooking zone not heating.	Cookware not suitable for induction; Pot not centered.	Use induction-compatible cookware; Center the pot on the zone.
Display shows an error code.	Refer to specific error code in full manual (if available).	Turn off and on again; If persistent, contact service.
Hob switches off automatically.	Overheating; Automatic safety shut-off activated.	Allow hob to cool down; Ensure proper ventilation.

## 8. SPECIFICATIONS

Detailed technical specifications for the Sharp SCHOTT CERAN KH-7IX19FS00-EU Induction Hob.

Feature	Specification
Model Number	KH-7IX19FS00-EU
Туре	Built-in Induction Hob
Surface Material	SCHOTT CERAN Glass Ceramic
Color	Black
Number of Cooking Zones	4
Cooking Zone 1 (Front Left)	1400 - 1800 W / 160 mm
Cooking Zone 2 (Rear Left)	2100 - 2500 W / 210 mm

Feature	Specification	
Cooking Zone 3 (Front Right)	1400 - 1800 W / 160 mm	
Cooking Zone 4 (Rear Right)	2100 - 2500 W / 210 mm	
Control Panel	Slider Touch Control	
Max Power Output	7400 W	
Input Voltage	220-240 V or 400 V	
Frequency	50 Hz	
Power Levels per Zone	9 + Boost	
Dimensions (H x W x D)	5.6 x 78 x 52 cm	
Weight	10.3 kg	
Mounting Cut-out (L x W)	75 x 49 cm	
Mounting Depth	4.8 cm	
Special Features	Timer, Residual Heat Indicator, Automatic Pot Recognition, Child Safety Lock, Automatic Safety Shut-off	

# 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Sharp website. Keep your proof of purchase for any warranty claims.

For technical assistance or spare parts, contact Sharp customer service or an authorized service center.

© 2024 Sharp. All rights reserved.

Related Documents - KH-7IX19FS00-EU



#### Sharp KH-9I26CT01-EU / KH-9I26CT00-EU Hob User Manual

This user manual provides comprehensive instructions for the Sharp KH-9l26CT01-EU and KH-9l26CT00-EU induction hob. Learn about safety, operation, installation, and maintenance for your Sharp home appliance.



#### Sharp Induction Cooktop Installation Manual

Installation manual for Sharp Induction Cooktops SCH2443GB and SCH3043GB, providing detailed instructions for electrical connection, cutout dimensions, and safety precautions.



#### Sharp KH-3I25NT0K-EU Kochfeld - Bedienungsanleitung

Umfassende Bedienungsanleitung für das Sharp KH-3I25NT0K-EU Kochfeld. Enthält Installationsanleitungen, Sicherheitshinweise, Bedienung, Reinigung und technische Spezifikationen für den sicheren und effizienten Gebrauch.



#### Sharp Induction Cooktop Operation Manual - Models SCH2443GB, SCH3043GB

This operation manual provides detailed instructions for using, cleaning, and maintaining Sharp Induction Cooktops, models SCH2443GB and SCH3043GB. It covers safety precautions, features, specifications, and troubleshooting tips.



#### Sharp SJ-BA20DHX Fridge-Freezer User Manual | Operation & Safety Guide

Download the Sharp SJ-BA20DHX series fridge-freezer user manual. Find detailed instructions on operation, safety, installation, food storage, troubleshooting, and energy saving for your Sharp refrigerator.



#### SHARP INFORMATION TECHNIQUE - Modes Service et Codes Défauts Réfrigérateurs

Guide technique SHARP détaillant l'activation du mode service, l'utilisation du panneau de commande, et les codes défauts pour les modèles de réfrigérateurs SJ-BA10, SJ-BA11, SJ-BA20, SJ-BA21.

#### Documents - Sharp - KH-7IX19FS00-EU



#### [pdf]

sf Sharp SCHOTT CERAN® Kochfeld autark Induktion 78 cm Typ KH 7IX19FS00 EU 4974019169385 799 00 € ja Leistungsstärken je 50 Hz Verpackungsmaße H x B T in Gewicht 14 2 81 6 58 1 11 8 kg media cdn bauhaus m 689407 |||

Sharp SCHOTT CERAN Kochfeld autark - Induktion 78 cm Typ / Modell:**KH-7IX19FS00-EU** Ausstattungsmerkmale / technische Daten Leistung W / Durchmesser mm der Kochzonen: Bedienfeld: Maximale Leistung: Eingangsspannung: Frequenz: Timer: Restwrmeanzeige: autom. Topferkennung: Leistungsstrken je Kochf... lang:de score:36 filesize: 191.45 K page\_count: 1 document date: 2020-11-12



#### [pdf] User Manual Guide

KH 7IX19FS00 EU EN User Manual Cooking Home Appliances DE Bedienungsanleitung IT Istruzioni per I uso FR Guide d utilisation 18990056 05 anleitung moemax a bigcontent io v1 static PIkkUfKPxGr6yjWhlzAhQHNw

Home Appliances **KH-7IX19FS00-EU** Cooking DE Bedienungsanleitung EN User Manual IT Istruzioni per I uso FR Guide d utilisation 1 Vielen Dank, dass Sie sich fr dieses Produkt entschieden haben. Diese Gebrauchsanweisung enthlt wichtige Sicherheitshinweise sowie Hinweise zum Gebrauch und der Wartung Ih... lang:de score:36 filesize: 2.61 M page\_count: 83 document date: 2020-07-11