



Manuals.plus /

› Home Accents Holiday /

› Home Accents Holiday 20 ft. 100-Lights String-to-String Incandescent Mini Bulb Multi Color Lights (4 Pack) Instruction Manual

Home Accents Holiday 689977246828

Home Accents Holiday 20 ft. 100-Lights String-to-String Incandescent Mini Bulb Multi Color Lights (4 Pack) Instruction Manual

MODEL: 689977246828

Introduction

This manual provides essential instructions for the safe and effective use of your Home Accents Holiday 20 ft. 100-Lights String-to-String Incandescent Mini Bulb Multi Color lights. Please read this manual thoroughly before installation and retain it for future reference.

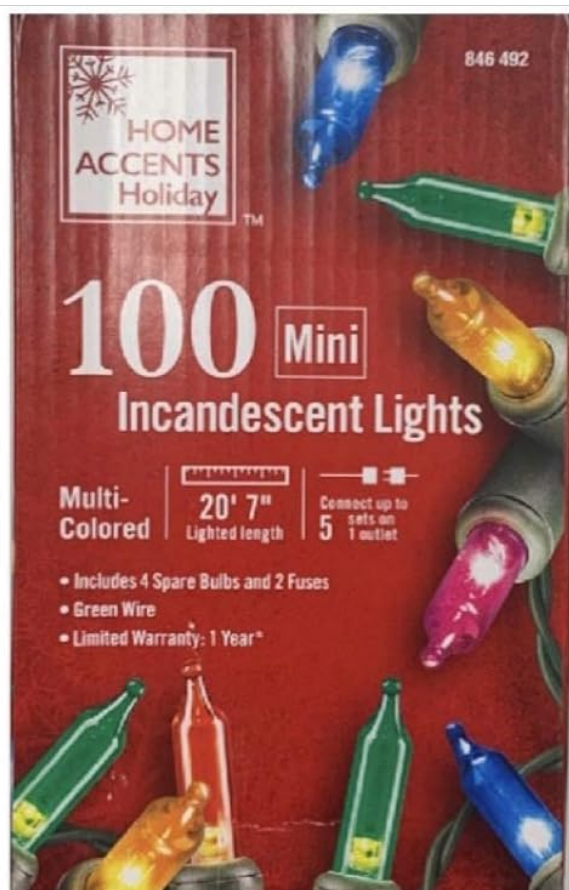 


Image: Packaging for the Home Accents Holiday 100 Mini Incandescent Lights, showing the multi-colored bulbs and product specifications on the box.

Safety Instructions

To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- **Indoor Use Only:** These lights are designed for indoor use. Do not use them outdoors.
- **Not Water Resistant:** This product is not water resistant. Avoid exposure to water or moisture.
- **Electrical Safety:** Always unplug the lights from the power outlet before performing any maintenance or when not in use.
- **Inspect Before Use:** Before each use, inspect the product carefully for any cuts, damage, or frayed insulation on the wire, lamp holders, or cords. Do not use if damaged.
- **Overloading:** Do not overload electrical outlets. Connect a maximum of 5 sets of these lights end-to-end.
- **Bulb Replacement:** Replace burned-out bulbs promptly to maintain the circuit integrity and prevent overheating. Use only the specified replacement bulbs.
- **Fuse Replacement:** If the entire string fails to light, check and replace the fuse in the plug. Use only the specified replacement fuse.

Package Contents

Your package includes the following items:

- 4 x 20 ft. 100-Light Incandescent String Light Sets (Multi Color)
- 4 x Spare Incandescent Mini Bulbs (per set, total of 16 spare bulbs for 4 sets)
- 2 x Spare Fuses (per set, total of 8 spare fuses for 4 sets)

Setup Instructions

1. **Unpack:** Carefully remove the light sets from their packaging. Untangle any twisted wires.
2. **Placement:** Determine the desired location for your lights. Remember, these lights are for indoor use only and are not water resistant.
3. **Connecting Multiple Sets:** If you are using multiple sets, connect them end-to-end. Each set has a male plug at one end and a female receptacle at the other. You can connect up to 5 sets of these lights on a single electrical outlet. Ensure connections are secure.
4. **Secure Placement:** Secure the light string in place using appropriate fasteners that will not damage the wire insulation. Avoid placing lights where they can be stepped on or damaged.
5. **Power Connection:** Once the lights are securely placed and connected, plug the main power plug into a standard 120V AC electrical outlet.

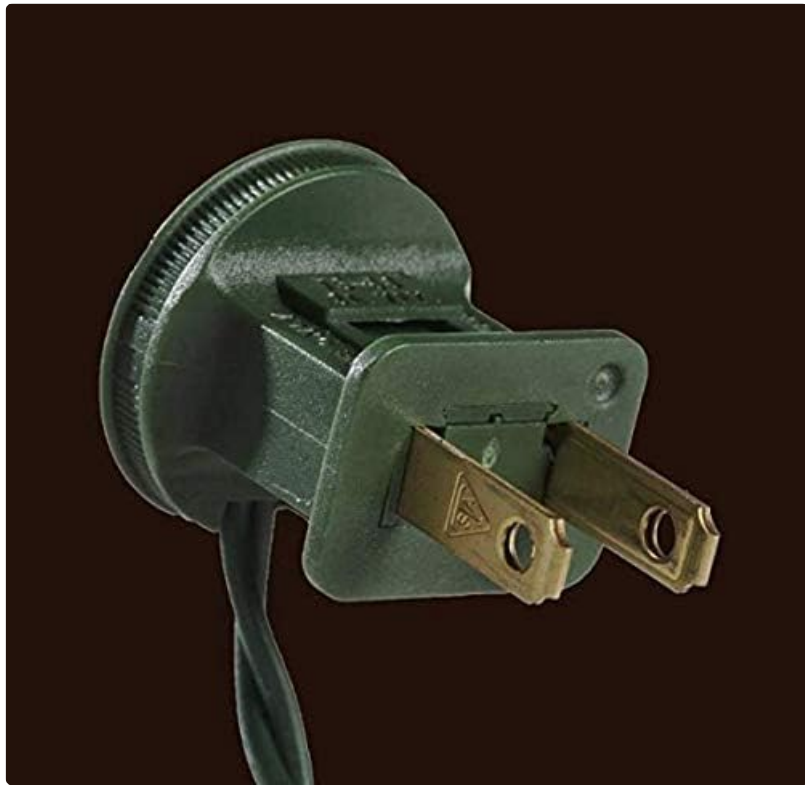 


Image: A close-up view of the green two-prong electrical plug, which connects the light string to a power source.

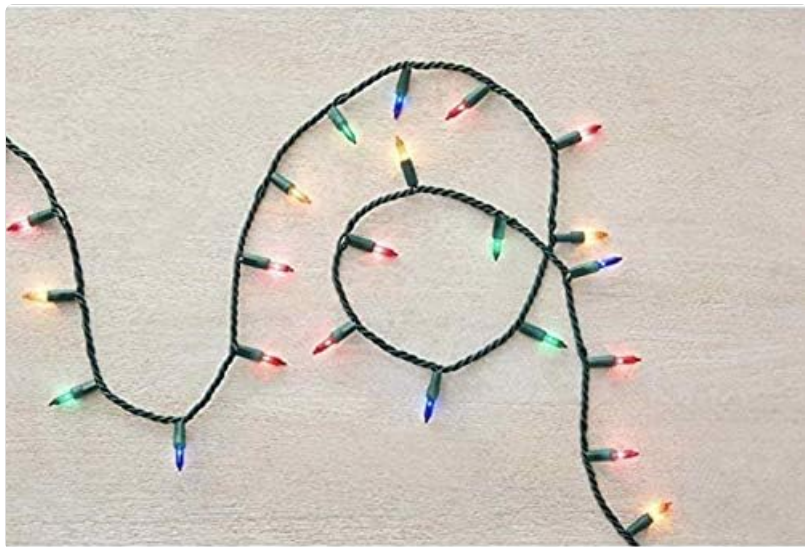 


Image: A section of the multi-colored string lights, coiled on a light-colored surface, demonstrating the flexible green wire.

Operating Instructions

Operating your Home Accents Holiday string lights is straightforward:

1. **Power On:** Plug the light string into a live 120V AC electrical outlet. The lights will illuminate.
2. **Power Off:** To turn off the lights, simply unplug the string from the electrical outlet.
3. **Continuous Illumination:** A key feature of these lights is that if one bulb burns out, the remaining bulbs in the string will stay lit, ensuring continuous illumination.



Image: A close-up of five lit incandescent mini bulbs in various colors (orange, pink, red, green, blue) on a dark background, showcasing their warm glow.

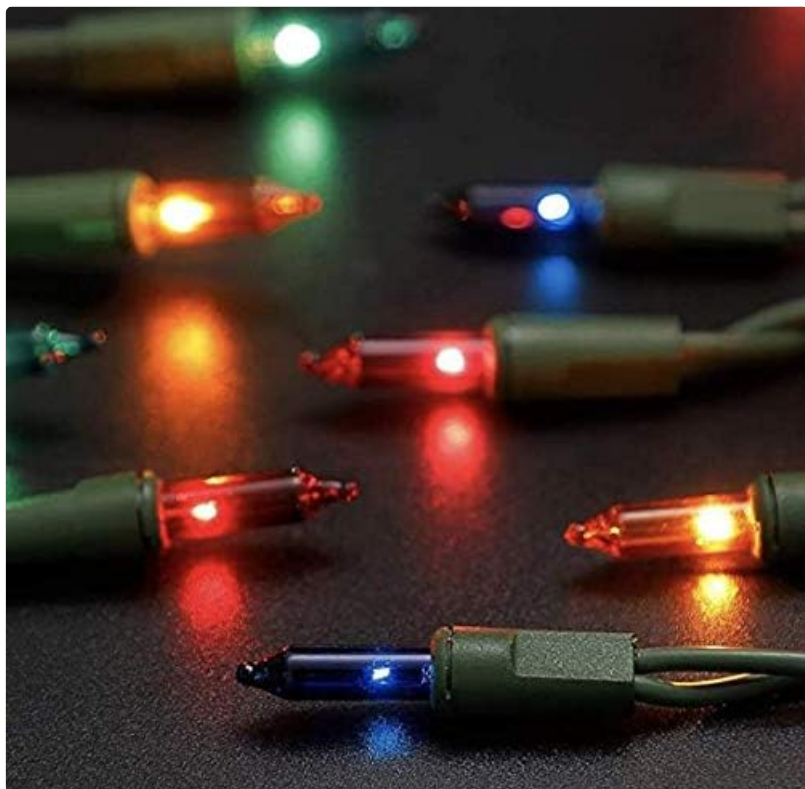 


Image: Several lit multi-colored incandescent mini bulbs scattered on a dark surface, highlighting the vibrant colors and the small size of the bulbs.

Maintenance

Proper maintenance ensures the longevity and safe operation of your lights.

- **Bulb Replacement:** If a bulb burns out, unplug the light string. Gently pull the burned-out bulb

straight out from its socket. Insert a new spare bulb (provided) into the socket, ensuring it is fully seated.

- **Fuse Replacement:** If the entire string does not light up, the fuse in the plug may need replacement. Unplug the light string. Slide open the fuse access cover on the plug. Carefully remove the old fuse and replace it with a new spare fuse (provided). Close the fuse access cover securely.
- **Cleaning:** Disconnect the lights from power. Wipe bulbs and wires with a soft, dry cloth. Do not use liquid cleaners.
- **Storage:** When not in use, carefully coil the light string and store it in a cool, dry place, away from direct sunlight and moisture.



Image: A close-up view of several multi-colored incandescent mini bulbs, each with a green base, illustrating the design for easy replacement.

Troubleshooting

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the outlet, loose plug, or blown fuse.	Check the power outlet. Ensure the plug is fully inserted. Replace the fuse in the plug if necessary.
Only a section of lights is out.	One or more bulbs are burned out or loose.	Locate and replace any burned-out or loose bulbs. Remember, if one bulb burns out, others stay lit, but a loose connection can affect a section.

Specifications

Feature	Detail
Brand	Home Accents Holiday
Model Number	689977246828
Light Type	Incandescent Mini Bulb
Light Color	Multicolor
Wire Color	Green
Number of Lights	100 per string
Lighted Length	20 ft. (approx. 6.1 m)
Power Source	Corded Electric
Voltage	120 Volts
Wattage	1 Watt (per bulb, total wattage for string not specified but implied low)
Max Connectable Sets	Up to 5 sets
Indoor/Outdoor Use	Indoor Use Only
Water Resistance	Not Water Resistant
Material	Glass, Plastic
UPC	689977246828

Warranty and Support

This product comes with a Limited 1-Year Warranty. For warranty claims or technical support, please refer to the contact information provided on the product packaging or contact Home Accents Holiday customer service.

Please retain your proof of purchase for warranty service.