



[Manuals.plus](#) /

› [Featherlite](#) /

› Featherlite Liberate High Back Ergonomic Office Chair Instruction Manual

Featherlite Liberate-Parent

Featherlite Liberate High Back Ergonomic Office Chair Instruction Manual

Model: Liberate-Parent

INTRODUCTION

Welcome to the instruction manual for your new Featherlite Liberate High Back Ergonomic Office Chair. This manual provides essential information for the proper assembly, operation, maintenance, and troubleshooting of your chair. Please read these instructions carefully before using your chair to ensure optimal performance and longevity.

PRODUCT OVERVIEW

Key Features

- **Ergonomic Design:** Engineered for optimal comfort and support during long hours of use.
- **Adjustable Arms:** Features soft PU padding for customizable arm support.
- **Seat Height Adjustment:** Easy-to-use lever for personalized seat height.
- **Dual Frame Flexible Lumbar Support:** Provides dynamic support to your lower back.
- **Dynaflex Mechanism:** Unique system for enhanced comfort and flexibility.
- **IS 20D Mesh Backrest:** Offers superior breathability and ventilation.
- **Fabric Upholstered Cushion Seat:** Comfortable and durable seating surface.
- **Adjustable & Flexible Headrest:** Supports your neck and head, adjustable for various preferences.
- **360-degree Swivel:** Allows for full rotation and easy movement.
- **Nylon Base & Castors:** Durable base with smooth-rolling casters for mobility.
- **Multi Lock Mechanism:** Enables locking the chair in multiple recline positions.

Components (What's in the Box)

Your Featherlite Liberate chair package includes the following main components:

- Chair Seat with Armrests and Backrest
- Chair Base with Casters

- Gas Lift Cylinder
- Headrest
- Assembly Hardware (if applicable, check packaging)

SETUP AND ASSEMBLY

Follow these steps to assemble your Featherlite Liberate High Back Ergonomic Office Chair. For a visual guide, please refer to the assembly video below.

Video: This video provides a step-by-step guide on how to assemble your Featherlite Liberate High Back Ergonomic Chair, from unboxing to final setup.

1. **Step 1: Unbox Components**

Carefully open the packaging and remove all chair components. Ensure all parts listed in the 'Components' section are present.

2. **Step 2: Prepare Chair Base and Gas Lift**

Locate the chair base with casters and the gas lift cylinder. Remove any protective packaging from the gas lift.

3. **Step 3: Insert Gas Lift into Chair Base**

Insert the narrow end of the gas lift cylinder firmly into the center hole of the chair base.

4. **Step 4: Attach Chair Seat**

Carefully align the center mechanism of the chair seat with the top of the gas lift cylinder. Lower the seat onto the gas lift, applying gentle pressure until it is securely seated.



Adjustable arms with soft PU padding



Seat height adjust
Flip lever Up/Down to adjust



Image: This image displays the overall dimensions of the Featherlite Liberate chair, showing a height of 101 cm, a width of 48 cm, and a depth of 43 cm.

OPERATING INSTRUCTIONS

Your Featherlite Liberate chair offers several adjustable features to customize your seating experience. Refer to the video below for a demonstration of these adjustments.

Video: This video demonstrates the various adjustable features of the Featherlite Liberate High Back Ergonomic Chair, including seat height, armrests, recline mechanism, and headrest.

Chair Adjustments

- **Seat Height Adjustment:**

To raise the seat, lift the lever located on the right side of the chair while taking your weight off the seat. To lower the seat, lift the lever while seated. Release the lever at your desired height.



Dual frame flexible lumbar support



Dynaflex mechanism for ultimate comfort



Image: This image highlights the adjustable arms with soft PU padding and the lever for seat height adjustment on the Featherlite Liberate chair.

- **Armrest Height Adjustment:**
Press the button located on the side of each armrest and move the armrest up or down to your preferred height. Release the button to lock it in place.
- **Multi-Lock Synchro Mechanism:**
Use the lever on the left side of the chair to adjust the recline angle of the backrest. Push the lever in to lock the backrest in an upright or reclined position. Pull the lever out to allow the backrest to recline freely.
- **Adjustable & Flexible Headrest:**
The headrest can be manually adjusted up or down and tilted to provide optimal neck and head support.



Ergonomic Chair



Nylon Base & Castors

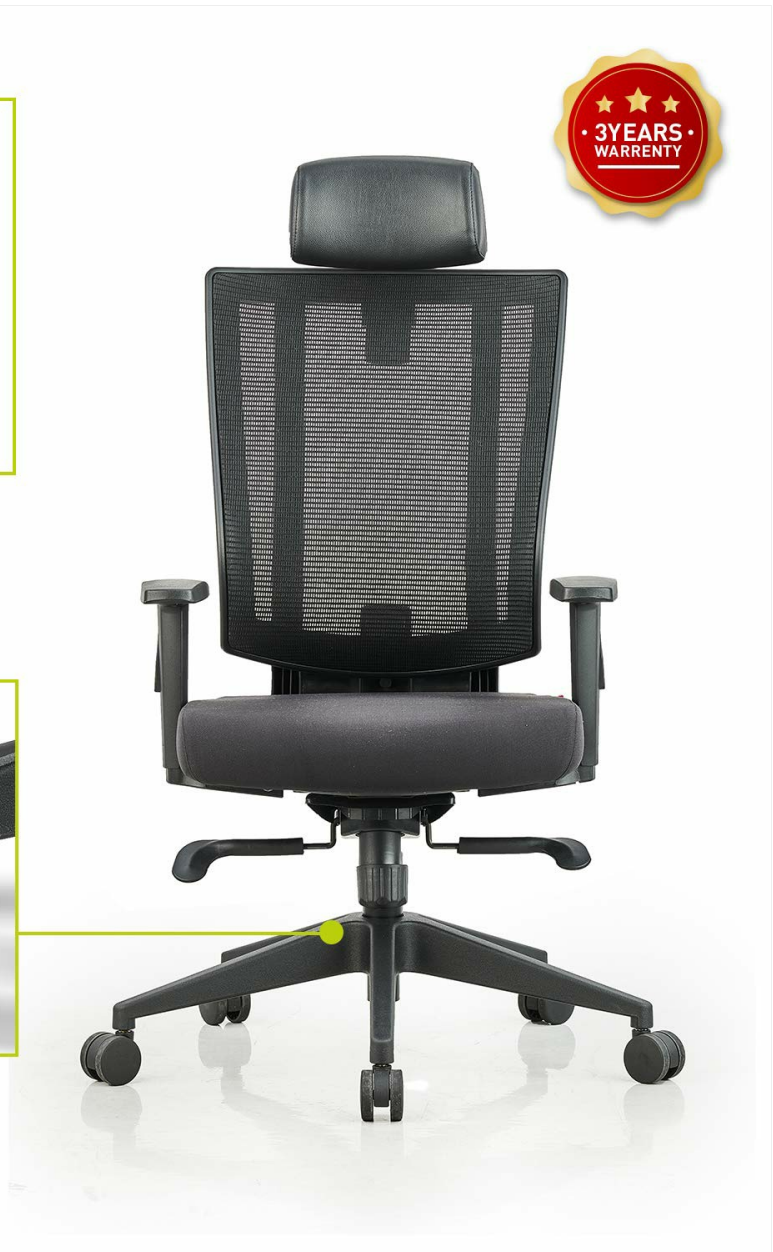


Image: This image demonstrates the adjustable and flexible headrest and the 360-degree swivel capability of the Featherlite Liberate chair.

- **Unique Dynaflex System (Lumbar Support):**

The chair features a dual frame flexible lumbar support that adapts to your back's natural curve, providing continuous support.



Image: This image illustrates the dual frame flexible lumbar support and the Dynaflex mechanism, designed for enhanced comfort, on the Featherlite Liberate chair.

- **360-degree Swivel:**

The chair is designed to swivel 360 degrees for ease of movement and access to your workspace.

MAINTENANCE

Proper care and maintenance will extend the life of your Featherlite Liberate chair.

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the fabric and mesh.
- **Mesh Backrest:** The IS 20D mesh backrest can be gently wiped to remove dust. For deeper cleaning, a mild soap solution can be used, followed by wiping with a clean, damp cloth.



**Adjustable & Flexible
Headrest**



360° swivel



Image: This image details the IS 20D mesh backrest, providing breathability, and the comfortable fabric upholstered cushion seat of the Featherlite Liberate chair.

- **Fabric Seat:** For spills, blot immediately with a clean, dry cloth. For stubborn stains, consult a professional upholstery cleaner.
- **Casters:** Periodically check casters for hair or debris and clean as needed to ensure smooth rolling.
- **Hardware:** Ensure all screws and bolts are tightened periodically to maintain stability. Do not overtighten.

TROUBLESHOOTING

If you encounter any issues with your chair, please refer to the following common troubleshooting tips:

- **Chair Squeaks:** Check all bolts and screws to ensure they are tight. A small amount of silicone lubricant can be applied to moving parts if necessary.
- **Gas Lift Not Adjusting:** Ensure the gas lift lever is fully engaged or disengaged as required. If the issue persists, the gas lift cylinder may need replacement.
- **Casters Not Rolling Smoothly:** Inspect casters for trapped debris (hair, lint, etc.) and clean them thoroughly.
- **Chair Feels Unstable:** Verify that the chair base is correctly assembled and all connections are secure. Ensure the gas lift is properly inserted into both the base and the seat mechanism.

If these steps do not resolve the issue, please contact customer support.

PRODUCT SPECIFICATIONS

Brand	Featherlite
Model Number	Liberate-Parent
Color	Black
Material	Fabric
Product Dimensions (D x W x H)	43D x 48W x 101H Centimeters
Item Weight	22 Kilograms
Back Style	HIGH Back
Frame Material	Iron
Special Feature	Ergonomic
Recommended Uses	Office
Room Type	Office
Age Range Description	Adult
Included Components	Ergonomic Chair
Surface Recommendation	Hard Floor
Indoor Outdoor Usage	Indoor
Maximum Weight Recommendation	150 Kilograms
Assembly Required?	Yes

WARRANTY AND SUPPORT

Warranty Information

Your Featherlite Liberate High Back Ergonomic Office Chair comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, assistance, or warranty claims, please contact Featherlite Customer Care:

Phone: 08047191010

Email: customercare@featherlitefurniture.com