



Manuals.plus /

- › DEWALT /
- › DEWALT Heated Soft Shell Jacket Kit User Manual (Model DCHJ076A)

DEWALT DCHJ076A

DEWALT Heated Soft Shell Jacket Kit User Manual

MODEL: DCHJ076A

1. Introduction

This manual provides essential information for the safe and effective use of your DEWALT Heated Soft Shell Jacket Kit. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: DEWALT Heated Soft Shell Jacket Kit, including jacket, 20V MAX battery, and charger.

2. Safety Information

Always prioritize safety when operating any heated garment. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use if the heating elements or wiring are damaged.
- Do not use with incompatible batteries or chargers.
- Avoid prolonged direct contact with heated areas if you have sensitive skin.
- Keep the battery and adapter dry. Do not expose to rain or wet conditions.
- Always remove the battery before washing the jacket.

3. Package Contents

- DEWALT Heated Soft Shell Jacket

- DEWALT 20V MAX Lithium-Ion Battery
- DEWALT Battery Charger
- DEWALT Battery Adapter with USB Power Output

4. Features

- **5 Heating Zones:** Strategically placed heating elements in the upper arms, left and right chest, and upper back for comprehensive warmth.
- **Customizable Heat:** Adjust heat settings from high to medium or low.
- **Durable Construction:** Wind and water-resistant insulated woven outer shell.
- **Warm Lining:** Features a warm fleece lining for added comfort.
- **Smooth Sleeve Lining:** Designed for easy on/off and to prevent sticking to undergarments.
- **Adjustable Fit:** Hook & loop cuffs and waist draw cord allow for a custom fit to block wind and water.



Figure 2: Heating zones within the jacket.

5. Setup

1. **Charge the Battery:** Use the provided DEWALT charger to fully charge the 20V MAX Lithium-Ion

battery.

2. **Connect Battery to Adapter:** Slide the charged battery onto the DEWALT battery adapter.
3. **Insert Adapter into Jacket:** Locate the battery pocket inside the jacket (typically on the lower back or side). Connect the adapter's power cord to the jacket's internal connector. Place the battery and adapter securely into the pocket and zip it closed.



Figure 3: Inserting the battery and adapter into the jacket's internal pocket.

The battery adapter also features a USB charging port, allowing you to charge portable electronic devices while the jacket is in use or when the battery is not powering the jacket.



Figure 4: DEWALT battery adapter with USB charging port.

6. Operation

1. **Power On:** Press and hold the illuminated power button located on the left chest of the jacket for approximately 2 seconds. The button will flash red, indicating the jacket is in warm-up mode.
2. **Adjust Heat Settings:** Briefly press the power button to cycle through the heat settings:
 - **Red (Solid):** High Heat
 - **White (Solid):** Medium Heat
 - **Blue (Solid):** Low Heat
3. **Power Off:** Press and hold the power button for approximately 2 seconds until the light turns off.



Figure 5: Power button and heat control on the jacket.

7. Maintenance

To ensure the longevity and performance of your heated jacket, follow these care instructions:

- **Machine Wash:** The jacket is machine washable. Always remove the battery and adapter before washing.
- Follow the specific washing instructions on the garment's care label.
- Do not bleach, iron, or dry clean.
- Hang dry or tumble dry on low heat.

8. Troubleshooting

If your jacket is not heating or experiencing issues, consider the following:

- Ensure the battery is fully charged and properly connected to the adapter.
- Verify the adapter is securely plugged into the jacket's internal connector.
- Check the power button for any flashing lights or error indicators.
- If the issue persists, consult DEWALT customer support.

9. Specifications

Department	unisex-adult
Fabric Type	Outer Shell: 92% Polyester / 8% Spandex
Care Instructions	Machine Wash
Manufacturer	DEWALT
Power Source	DEWALT 20V MAX or 12V MAX Batteries (via adapter)

10. Product Videos

Product Demonstration Video

This video provides a product demonstration of the DEWALT Heated Jacket, showcasing its features and functionality.


360 Degree View

This video offers a 360-degree view of the DEWALT Heated Jacket, allowing for a comprehensive visual inspection of its design.

11. Sizing Information

Refer to the size chart below to ensure the correct fit for your DEWALT Heated Jacket.

HEATED JACKETS

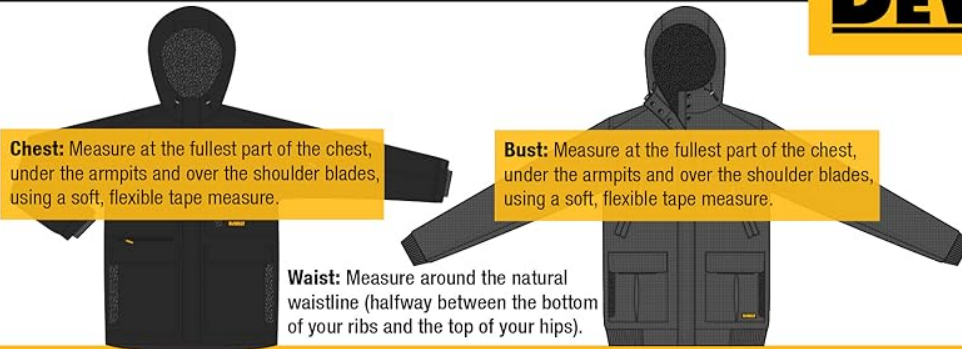

Chest: Measure at the fullest part of the chest, under the armpits and over the shoulder blades, using a soft, flexible tape measure.

Bust: Measure at the fullest part of the chest, under the armpits and over the shoulder blades, using a soft, flexible tape measure.

Waist: Measure around the natural waistline (halfway between the bottom of your ribs and the top of your hips).

SIZE CHARTS

MEN'S	HOMBRES	HOMMES	S/P	M/M	L/G	XL/TG	2XL/2TG	3XL/3TG
Chest	Pecho	Poitrine	34" - 36"	38" - 40"	42" - 44"	46" - 48"	50" - 52"	54" - 56"
Waist	Cintura	Taille	28" - 30"	32" - 34"	36" - 38"	40-1/2" - 43"	45-1/2" - 48"	51" - 54"

NOTE: If your chest and/or waist measurement falls between sizes, buy the larger size.

WOMEN'S	MUJERES	FEMMES	XS/XP	S/P	M/M	L/G	XL/TG	2XL/2TG
Bust	Busto	Buste	31" - 33"	34" - 35"	36" - 38"	39" - 41"	41" - 43"	44" - 46"
Waist	Cintura	Taille	23" - 25"	26" - 27"	28" - 29"	30" - 32"	33" - 35"	36" - 38"

NOTE: If your bust and/or waist measurement falls between sizes, buy the larger size.

Figure 6: DEWALT Heated Jackets size chart.

12. Warranty and Support

For warranty information or technical support, please visit the official DEWALT website or contact their customer service department. Keep your purchase receipt as proof of purchase.