



Manuals.plus /

› Playmobil /

› Playmobil Children's Pool with Slide (Model 70611) Instruction Manual

Playmobil 70611

Playmobil Children's Pool with Slide (Model 70611) Instruction Manual

Model: 70611

INTRODUCTION

Welcome to your new Playmobil Children's Pool with Slide! This set provides a fun water play experience for children aged 4 to 10 years. It includes a mini-slide, a baby swing, a seesaw, and a functioning whirlpool, designed for imaginative play and hours of entertainment.

SAFETY INFORMATION

WARNING: CHOKING HAZARD. Small parts. Not for children under 3 years.

Adult supervision is recommended during play, especially when water is used. Ensure all small parts are kept away from young children who may put them in their mouths. Regularly inspect the toy for any damage or loose parts that could pose a hazard.

INCLUDED COMPONENTS

The Playmobil Children's Pool with Slide set (Model 70611) contains 42 pieces. Please verify that all components listed below are present in your box:

- One adult figure
- Two child figures
- Fillable pool structure with integrated slide
- Baby swing
- Seesaw
- Crocodile figure

- Palm tree
- Whirlpool mechanism components
- Various small accessories

SETUP AND ASSEMBLY

While the product is designed for straightforward assembly, please follow these steps to ensure correct setup and optimal play experience.

1. Unpack all components from the box and verify against the included components list.
2. Assemble the main pool structure by connecting the base sections securely.
3. Attach the mini-slide to the designated area of the pool. Ensure it clicks firmly into place.
4. Install the baby swing by attaching its frame to the pool structure. Ensure the swing hangs freely and securely.
5. Position the seesaw within the pool area.
6. Assemble the functioning whirlpool mechanism according to the diagrams in the separate pictorial instructions (if provided) and integrate it into the pool structure.
7. Place the palm tree and other decorative elements as desired around the pool.
8. *Optional:* For water play, place the assembled pool on a stable, waterproof surface and carefully fill with clean water.



Image: The fully assembled Playmobil Children's Pool with Slide, featuring figures enjoying the various play elements.

OPERATING INSTRUCTIONS

Using the Pool

The pool can be filled with water for realistic play. Ensure the pool is placed on a stable, level, and waterproof surface before filling. Do not overfill the pool; maintain a water level that allows for safe play and proper function of accessories. Empty water after each play session.

Mini-Slide

Figures can slide down the mini-slide into the pool. Ensure figures are placed correctly at the top of the slide, feet first, to prevent them from falling off.

Baby Swing

Place a child figure securely in the baby swing. Gently push the swing to simulate movement. Avoid excessive force to prevent damage.

Seesaw

Two figures can be placed on the seesaw, one on each side. Move the seesaw up and down for interactive

play. Ensure figures are balanced for best effect.

Functioning Whirlpool

The whirlpool features a functioning water pump. Follow the specific instructions provided with the whirlpool mechanism for activating the pump to create bubbles in the whirlpool area. Ensure the water level is appropriate for pump operation and that the pump intake is submerged.

MAINTENANCE AND CARE

- **Cleaning:** After use, especially with water, empty the pool completely. Clean all components with mild soap and water. Rinse thoroughly to remove all soap residue.
- **Drying:** Allow all parts to air dry completely before storing to prevent mold, mildew, and water stains.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures. Prolonged exposure to sunlight can cause colors to fade.
- **Water Quality:** If using tap water, ensure it is clean. Do not use chemical additives, bath oils, or other substances in the water, as these may damage the toy or affect the water pump's function.

TROUBLESHOOTING

Water Pump Not Functioning

Check if the water level is sufficient for the pump to operate; the intake must be fully submerged. Ensure there are no obstructions (e.g., small debris) in the pump mechanism. Verify that all connections for the pump are secure and correctly assembled.

Missing or Damaged Parts

If you find any missing or damaged parts upon opening the box, please contact Playmobil customer service immediately for assistance.

Figures Not Staying on Accessories

Ensure figures are correctly seated or positioned on the slide, swing, or seesaw. Some accessories are designed for specific figure types (e.g., baby swing for child figures). Check for any foreign objects preventing a secure fit.

SPECIFICATIONS

Attribute	Value
Brand	Playmobil
Model Number	70611
Age Range	4-10 years
Material	Plastic
Number of Pieces	42
Item Dimensions (L x W x H)	13.7 x 7.36 x 3.54 inches
Item Weight	347 Grams
Theme	Beach Aqua-Park

WARRANTY INFORMATION

Specific warranty details for this Playmobil product are not provided in the available information. For comprehensive warranty terms and conditions, please refer to the official Playmobil website or contact their customer service directly.

CUSTOMER SUPPORT

For further assistance, inquiries about spare parts, or any other questions regarding your Playmobil Children's Pool with Slide, please visit the official Playmobil website or contact their customer service department.

www.playmobil.com