

Braun IS1014PU

Braun CareStyle 1 Steam Generator Iron IS1014PU User Manual

Model: IS1014PU | Brand: Braun

1. INTRODUCTION

Thank you for choosing the Braun CareStyle 1 Steam Generator Iron. This appliance is designed to provide efficient and effective ironing results with its powerful steam output and user-friendly features. Please read this instruction manual carefully before using the appliance for the first time and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your iron.

2. SAFETY INFORMATION

Always observe the following basic safety precautions when using electrical appliances:

- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not immerse the iron or its base in water or other liquids.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the appliance out of reach of children.
- Always unplug the iron from the mains socket before filling or emptying the water tank, and during cleaning or maintenance.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- The soleplate and steam are very hot and can cause burns. Handle with care.
- Only use the appliance for its intended household purpose.

3. PRODUCT COMPONENTS

Familiarize yourself with the different parts of your Braun CareStyle 1 Steam Generator Iron.



Image 3.1: The Braun CareStyle 1 Steam Generator Iron and its separate water tank base unit.

1. **Iron Unit:** The handheld part with the soleplate and temperature dial.
2. **Soleplate:** The ceramic ironing surface with steam vents.
3. **Steam Generator Base:** Houses the water tank and steam generation system.
4. **Water Tank:** Removable 1.5-liter tank for water.
5. **Temperature Dial:** For selecting appropriate heat settings.
6. **Steam Button:** Activates continuous steam.
7. **Steam Shot Button:** Delivers an extra burst of steam.
8. **EasyLock System:** Secures the iron to the base for transport.
9. **EasyCalc Clean System:** For descaling the appliance.

4. SETUP

4.1 Unpacking

Carefully remove the appliance from its packaging. Remove any protective materials or stickers from the iron and soleplate.

4.2 Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Remove the water tank from the steam generator base.
3. Fill the tank with tap water up to the 'MAX' indicator. The 1.5-liter capacity allows for approximately one hour of continuous ironing.
4. Replace the water tank securely into the base.

4.3 First Use

Before ironing clothes for the first time, it is recommended to iron an old piece of fabric to ensure no residue from manufacturing is transferred to your garments.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Temperature Selection

1. Place the steam generator base on a stable, heat-resistant surface.
2. Plug the power cord into a suitable electrical outlet.
3. Turn the temperature dial on the iron to the desired setting based on the fabric type. The iron features 4 high-precision settings:
 - **Level 1:** Synthetics
 - **Level 2:** Wool, Silk, Polyester
 - **Level 3:** Cotton, Linen
 - **Level 4:** Max (for stubborn creases and thick fabrics)

Wait for the indicator light to turn off, signaling that the iron has reached the selected temperature.



Image 5.1: Demonstrating the use of the iron on fabric.

5.2 Using Steam Functions

The high steam performance ensures smooth steam penetrates fabrics completely, making ironing effortless.

- **Continuous Steam:** Press and hold the steam button on the iron handle for a steady flow of steam (120 g/min).
- **Steam Shot:** For stubborn creases, press the steam shot button for an extra burst of steam (360 g/min).



Image 5.2: The iron releasing powerful steam for effective wrinkle removal.

5.3 Vertical Ironing

The high steam pressure allows for quick and easy touch-ups without an ironing board. Hold the iron vertically and direct the steam towards hanging garments to refresh them and remove light wrinkles.

6. MAINTENANCE

6.1 Emptying and Refilling the Water Tank

After each use, or when the water level is low, unplug the iron and allow it to cool. Remove the water tank and empty any remaining water. Refill as described in Section 4.2.

6.2 EasyCalc Clean System (Descaling)

The EasyCalc Clean system makes descaling simple. Regular descaling is crucial to maintain steam performance and prolong the life of your appliance, especially in areas with hard water. Refer to the specific instructions in the full manual for the descaling procedure. Typically, this involves activating a cleaning cycle and rinsing the system.

6.3 Cleaning the Soleplate

To clean the ceramic soleplate, ensure the iron is unplugged and completely cool. Wipe the soleplate with a damp cloth and a non-abrasive liquid cleaner if necessary. Do not use harsh scouring pads or metallic cleaners.

7. TROUBLESHOOTING

If you encounter issues with your iron, consult the following table:

Problem	Possible Cause	Solution
No steam is produced.	Water tank is empty or not properly seated.	Fill the water tank and ensure it is correctly inserted.
Water drips from the soleplate.	Temperature is too low for steam generation (Anti-Drip System).	Increase the temperature setting. Wait for the iron to heat up sufficiently.
Iron does not heat up.	Not plugged in, power outage, or automatic shut-off activated.	Check power connection. Reset by unplugging and replugging.

Problem	Possible Cause	Solution
Poor steam performance.	Limescale buildup.	Perform the EasyCalc Clean descaling procedure.

8. SPECIFICATIONS

Feature	Detail
Brand Name	Braun
Model Name	IS1014PU
Part Number	IS1014VI
Special Features	Automatic Shut-off, Anti-Drip System, EasyCalc Clean
Color	White/Purple
Power	2200 Watts
Voltage	220.0 V
Frequency	60 Hz
Steam Pressure	6 Bar
Continuous Steam Rate	120 g/min
Steam Shot Rate	360 g/min
Water Tank Capacity	1.5 Liters
Soleplate Material	Ceramic (FreeGlide 3D)
Item Weight	2.6 Kilograms
Product Dimensions (Length x Width)	28mm x 246mm (Note: These dimensions appear unusually small and may refer to a specific component or be an error in the source data. Please refer to the product packaging for accurate overall dimensions.)
Manufacturing Year	2021
Manufacturer	DGDK - DONG GUAN DELONGHI-KENWOOD

9. WARRANTY INFORMATION

Braun products are manufactured to the highest quality standards. This product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.



Image 9.1: Braun offers a 5-year warranty on this product, ensuring long-lasting performance and reliability.

Spare parts availability in the EU is guaranteed for 2 years from the manufacturing date.

10. SUPPORT & CONTACT

For further assistance, troubleshooting not covered in this manual, or to inquire about spare parts and service, please contact Braun customer support. Contact details can typically be found on the Braun official website or on the warranty card provided with your product.

You can also visit the official Braun store for more information and product registration: [Braun Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question