

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Replacement Remote Control for Westinghouse Roku TVs (Model: 5984-RC280V9-AZ-WSTH) User Manual

USARMT 5984-RC280V9-AZ-WSTH

USARMT Replacement Remote Control User Manual

For Westinghouse Roku TVs (Model: 5984-RC280V9-AZ-WSTH)

1. INTRODUCTION

This manual provides instructions for the USARMT Replacement Remote Control, designed for use with Westinghouse Roku TVs. This remote offers direct access to popular streaming services and essential television functions.

2. COMPATIBILITY

This remote control is specifically designed for Westinghouse Roku TVs. It is a replacement remote and is not an original Westinghouse product. It is not compatible with Roku streaming boxes or Roku streaming sticks. Ensure your television is a Westinghouse brand Roku TV for proper functionality.

3. SETUP

3.1 Battery Installation



This image displays the side profile of the remote control, highlighting the battery compartment located on the back and the volume/mute buttons on the side.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks.

3.2 Initial Use

This remote control is pre-programmed and does not require any setup or pairing. Once batteries are installed, it is ready for immediate use with your compatible Westinghouse Roku TV.

4. OPERATING INSTRUCTIONS



This image shows the front of the remote control, displaying all buttons including the power button, directional pad, OK button, and dedicated app buttons for Netflix, Sling, Hulu, and Amazon.

4.1 Basic Functions

- **Power Button:** Turns the TV on or off.
- **Directional Pad (Up, Down, Left, Right):** Navigates menus and selects options.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Returns to the Roku TV home screen.
- **Volume Up/Down Buttons:** Adjusts the TV volume.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Instant Replay Button:** Jumps back a few seconds in video playback.
- **Rewind/Fast Forward Buttons:** Controls media playback speed.
- **Play/Pause Button:** Plays or pauses media.

4.2 Dedicated App Buttons

The remote includes dedicated buttons for quick access to popular streaming services:

- **Netflix Button:** Launches the Netflix application.
- **Sling Button:** Launches the Sling TV application.
- **Hulu Button:** Launches the Hulu application.
- **Amazon Button:** Launches the Amazon Prime Video application.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- Ensure batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure the remote is pointed directly at the TV.

5.2 Specific App Button Not Working

- Verify that the corresponding application is installed and updated on your Westinghouse Roku TV.
- Ensure your TV has an active internet connection.

6. SPECIFICATIONS

Feature	Detail
Model Number	5984-RC280V9-AZ-WSTH
Connectivity	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Dimensions	Approximately 6 x 1.5 x 0.5 inches

Weight	Approximately 2 ounces (without batteries)
Compatible Devices	Westinghouse Roku TVs

7. CARE AND MAINTENANCE

- Clean the remote control with a soft, dry cloth. Do not use liquid cleaners.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided by your retailer or contact USARMT customer service.

