



Manuals.plus /

› USARMT /

› USARMT Universal Roku TV Remote Control User Manual

USARMT 5984-RC280V9-AZ-HAIER

USARMT Universal Roku TV Remote Control User Manual

Model: 5984-RC280V9-AZ-HAIER

INTRODUCTION

This manual provides instructions for the USARMT Universal Replacement Remote Control for Roku TV. This remote is designed to be compatible with a wide range of Roku TV models from various brands, offering a straightforward and immediate solution for your television control needs.

PRODUCT OVERVIEW



Figure 1: Front view of the USARMT Universal Roku TV Remote Control, showing the power button, navigation pad, OK button, back, home, rewind, play/pause, fast forward, and dedicated app buttons for Netflix, Sling, Hulu, and Amazon.



Figure 2: Side view of the USARMT Universal Roku TV Remote Control, illustrating the battery compartment (requires AAA batteries) and the volume/mute keys located on the side. Note that this remote does not include a headphone jack or a pairing button.



Figure 3: Back view of the USARMT Universal Roku TV Remote Control, showing the smooth, ergonomic design.

SETUP

This remote control is pre-programmed and requires no complex setup or pairing. Follow these simple steps to begin using your remote:

1. **Install Batteries:** Open the battery compartment on the back of the remote control. Insert two (2) AAA batteries, ensuring correct polarity (+/-). (*Batteries are not included*)
2. **Ready to Use:** Once batteries are installed, the remote is ready for immediate use with your compatible Roku TV. No programming or pairing is required.

Important Note: This remote control is designed for Roku TVs only and is NOT compatible with Roku Players (e.g., Roku Streaming Stick, Roku Express, Roku Ultra) or Insignia Roku TVs.

OPERATING INSTRUCTIONS

The USARMT Universal Roku TV Remote Control operates using infrared (IR) technology. Ensure a clear line of sight between the remote and your TV's IR receiver for optimal performance.

- **Power Button** (): Press to turn your Roku TV on or off.
- **Navigation Pad** (▲ ▼ ◀ ▶): Use the directional arrows to navigate through menus and content.
- **OK Button**: Press to select an item or confirm an action.
- **Back Button** (←): Returns to the previous screen or menu.
- **Home Button** (△): Returns to the Roku TV home screen.
- **Volume Buttons** (+/-): Adjust the TV volume. Located on the side of the remote.
- **Mute Button** (): Mutes or unmutes the TV audio. Located on the side of the remote.
- **Instant Replay** (⏮): Replays the last few seconds of video.
- **Asterisk Button** (*): Accesses options or settings within certain apps or menus.
- **Media Playback Controls** (◀◀, ▶▶, ▶▶▶): Control video playback (rewind, play/pause, fast forward).
- **Dedicated App Buttons**: Quickly launch popular streaming services like Netflix, Sling, Hulu, and Amazon with a single press.

The remote offers an enhanced transmitting distance of over 40 feet and a rapid response time of 0.2 seconds for a seamless user experience.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning**: Use a soft, dry cloth to wipe the surface of the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote and the TV's IR sensor. Obstructions can block the signal.
 - Verify that the remote is pointed directly at the TV.
- **Limited Range:**

- Replace batteries, as low battery power can reduce range.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

- **Specific Buttons Not Working:**

- Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris.
- If only specific app buttons are not working, ensure your TV is connected to the internet and the apps are properly installed and updated.

- **Compatibility Issues:**

- Confirm your TV is a Roku TV model. This remote is not compatible with Roku Players (e.g., Roku Streaming Stick) or Insignia Roku TVs.
- Refer to the "Compatible Devices" section in the specifications for a list of supported brands.

If the issue persists after trying these steps, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	5984-RC280V9-AZ-HAIER
Brand	USARMT
Product Dimensions	6 x 1.5 x 0.5 inches
Item Weight	2 ounces
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic design, Pre-programmed
Compatible Devices	Roku Series Smart TVs (TCL, Onn, Element, Haier, Hitachi, LG, Sanyo, JVC, Magnavox, RCA, Philips, Westinghouse Roku TV)
Power Source	2 x AAA Batteries (not included)
Operating Distance	Over 40 feet
Response Time	0.2 seconds

WARRANTY AND SUPPORT

For information regarding product warranty or technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly. As a replacement remote, specific warranty terms may vary.

Manufacturer: USARMT

For further assistance, please visit the USARMT store on Amazon: [USARMT Store](#)

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found to be relevant for inclusion in this instruction manual.