

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Playmobil](#) /

› [Playmobil Large County Fair Instruction Manual - Model 70558](#)

## Playmobil 70558

# Playmobil Large County Fair Instruction Manual

Model: 70558

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and care of your Playmobil Large County Fair playset, Model 70558. Please read all instructions carefully before beginning assembly and play to ensure a safe and enjoyable experience. This set allows for imaginative play with flying swings, boat swings, and a candy stand.

## SAFETY INFORMATION

---

**Warning: Choking Hazard. Small parts. Not for children under 3 years.**

Always supervise children during play. Ensure all parts are securely assembled before use. Keep packaging materials away from children. This product is recommended for ages four years and up.

## PACKAGE CONTENTS

---

The Playmobil Large County Fair set includes:

- Eleven figures
- Flying swings ride
- Boat swings ride
- Candy stand
- Cash register
- Cooler
- Trash bin
- Stroller
- Various other accessories



Image: All components of the Playmobil Large County Fair playset, including figures, rides, and accessories, laid out for assembly.

## SETUP AND ASSEMBLY

Follow these steps to assemble your Playmobil Large County Fair playset:

1. **Unpack Components:** Carefully remove all pieces from the packaging. Refer to the "Package Contents" section to ensure all parts are present.
2. **Assemble Flying Swings Ride:** Construct the main flying swings structure according to the included pictorial instructions. Ensure all connections are firm and secure.
3. **Install Batteries for Flying Swings:** The flying swings require 3 x AAA batteries (not included) for the lights. Locate the battery compartment, insert the batteries according to the polarity markings (+/-), and secure the cover.
4. **Assemble Boat Swings Ride:** Construct the boat swings frame and attach the boat seats. Ensure the rotating knobs are correctly installed.
5. **Set up Candy Stand:** Assemble the candy stand structure and place the accessories such as the cash register, cooler, and various treats.
6. **Arrange Figures and Accessories:** Once the main structures are assembled, place the eleven figures and other accessories as desired around the fairground to begin play.



Image: The fully assembled Playmobil Large County Fair playset, featuring the flying swings, boat swings, and candy stand, populated with figures.

## OPERATING INSTRUCTIONS

---

### Flying Swings Operation

- **Seating Figures:** Place Playmobil figures into the flying swing seats.
- **Secure Lap Bar:** Lower the lap bar on each swing seat to ensure figures are securely held in place before operating the ride.
- **Activate Lights:** If 3 x AAA batteries are correctly installed, the flying swings will illuminate with colorful lights.
- **Rotate Swings:** Use the crank mechanism located at the base of the flying swings ride to manually rotate the swings. As the central column spins, the swings will fly outwards.



Image: A hand turning the crank to activate the flying swings ride, showing figures in motion.

## Boat Swings Operation

- **Seating Figures:** Each boat can accommodate two figures, either sitting or standing.
- **Initiate Motion:** Use the rotating knobs located at both ends of the boat swings ride to set the boats in a swinging motion.

## Candy Stand Interaction

- Figures can interact with the candy stand, choosing from various treats such as cupcakes, fries, and cold drinks. The cash register allows for imaginative transactions.



Image: Playmobil figures at the candy stand, selecting treats and interacting with the vendor.

## MAINTENANCE

- **Cleaning:** To clean the playset, gently wipe down plastic parts with a damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive water, as these can damage the materials or electronic components.

- **Storage:** Store the playset in a cool, dry place away from direct sunlight. Prolonged exposure to sunlight can cause colors to fade and plastic materials to degrade over time.
- **Battery Replacement:** Replace the 3 x AAA batteries in the flying swings when the lights dim or cease to function. Always ensure proper polarity when inserting new batteries.

## TROUBLESHOOTING

---

### **Problem: Flying swings lights are not working.**

#### **Solution:**

1. Verify that 3 x AAA batteries are correctly installed in the battery compartment with the correct polarity (+/-).
2. Replace old batteries with new, fresh AAA batteries.
3. Ensure the battery compartment cover is securely closed.

### **Problem: Swings are not rotating smoothly or are stuck.**

#### **Solution:**

1. Check for any foreign objects (e.g., small toy pieces, hair) that might be obstructing the crank mechanism or the swing arms.
2. Ensure that all parts of the flying swings ride are correctly assembled and securely connected according to the instructions.
3. Apply gentle, even pressure when turning the crank.

## SPECIFICATIONS

---

Feature	Detail
Product Dimensions	20.28 x 15.16 x 4.92 inches
Item Weight	3.51 pounds
Model Number	70558
Recommended Age	3 years and up
Batteries Required	3 x AAA batteries (not included)
Manufacturer	Playmobil

## SUPPORT AND WARRANTY

---

For further assistance, inquiries about missing parts, or information regarding product warranty, please contact Playmobil customer support directly. You can also visit the official Playmobil store for more information and contact details:

[Playmobil Official Store](#)

