

[manuals.plus](#) /

› [Sameo](#) /

› [SAMEO SG12 Wired Gaming Controller User Manual](#)

Sameo SG12

SAMEO SG12 Wired Gaming Controller User Manual

Model: SG12 (SE/6750)

INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your SAMEO SG12 Wired Gaming Controller. Please read this manual carefully before using the product to ensure optimal performance and longevity.

The SAMEO SG12 is a versatile wired gamepad designed for use with PC, PlayStation 3 (PS3), and Android devices (via OTG cable). It features analog joysticks, triggers, and dual motor vibration for an immersive gaming experience.

PRODUCT OVERVIEW

Package Contents

- 1 x SAMEO SG12 Wired Gaming Controller
- 1 x USB Cable (1.5 meters)
- 1 x Micro USB Cable (0.3 meters) for OTG connection (Android)
- 1 x User Manual (this document)

Controller Features

- Wired Connectivity:** Ensures stable and lag-free gaming.
- Analog Joysticks:** High-precision 3D joysticks for accurate control.
- Analog Triggers:** Responsive triggers for nuanced input.
- Dual Motor Vibration:** Provides tactile feedback for enhanced immersion (PC/PS3).
- D-input and X-input:** Automatic detection for PC compatibility.
- Ergonomic Design:** Comfortable grip for extended gaming sessions.
- Plug and Play:** No driver installation required for most systems.



Image: The SAMEO SG12 Wired Gaming Controller, showcasing its ergonomic design and integrated USB cable.

SETUP

PC Connection

1. Connect the USB cable of the SAMEO SG12 controller to an available USB port on your PC.
2. The operating system will automatically detect and install the necessary drivers. This may take a few moments.
3. Once installation is complete, the controller is ready for use. It supports both D-input and X-input modes, which are automatically detected by most games.
4. To verify functionality, you can access your PC's controller settings (e.g., "Set up USB game controllers" in Windows) to test button inputs and joystick calibration.

PlayStation 3 (PS3) Connection

1. Connect the USB cable of the SAMEO SG12 controller to an available USB port on your PS3 console.
2. The PS3 will recognize the controller as a standard gamepad.
3. The controller is now ready for use with PS3 games.

Android Device Connection (OTG)

1. Ensure your Android device supports USB On-The-Go (OTG) functionality.
2. Connect the Micro USB cable (0.3 meters) to the controller.
3. Connect the other end of the Micro USB cable (or a suitable adapter if your device uses USB-C) to your Android device's charging port.
4. Your Android device should detect the controller. Some devices may require enabling OTG in settings.
5. The controller is now ready for use with compatible Android games.



Image: The SAMEO SG12 controller demonstrating its wide compatibility with Windows PC, PlayStation 3, and Android devices.

OPERATING INSTRUCTIONS

The SAMEO SG12 controller operates as a standard gamepad. Its buttons and joysticks are mapped according to common gaming standards.

Button Layout

- **Directional Pad (D-Pad):** For precise directional input.
- **Left Analog Stick:** Primary movement control.
- **Right Analog Stick:** Camera control or secondary movement.
- **Action Buttons (A, B, X, Y or equivalent):** For in-game actions.
- **Shoulder Buttons (L1, R1):** Quick actions or weapon selection.
- **Triggers (L2, R2):** Analog input for acceleration, braking, or aiming.
- **START Button:** Pause menu, options.
- **SELECT Button:** Map, inventory, or other functions.
- **HOME/MODE Button:** Access system menus (e.g., PS button on PS3).

Vibration Function

The dual motor vibration function is automatically activated in compatible games on PC and PS3. The intensity of the vibration will vary based on in-game events, providing realistic feedback.



Image: Illustration depicting the SAMEO SG12 controller's dual vibration feature, providing realistic feedback during gameplay.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the controller. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly to prevent damage.
- **Handling:** Do not drop the controller or subject it to strong impacts. Avoid pulling the cable forcefully when disconnecting.

TROUBLESHOOTING

Controller Not Detected

- **Check USB Connection:** Ensure the USB cable is securely plugged into both the controller and the device (PC, PS3, Android).
- **Try Another USB Port:** Connect the controller to a different USB port on your device.
- **Restart Device:** Restart your PC, PS3, or Android device and try connecting the controller again.
- **Driver Installation (PC):** For PC, ensure Windows has completed driver installation. You can check Device Manager for any unrecognized devices.
- **OTG Functionality (Android):** Verify that your Android device supports OTG and that it is enabled in settings if required.

Buttons or Joysticks Not Responding Correctly

- **Test in System Settings:** Use your device's controller calibration or test utility (e.g., "Set up USB game controllers" in Windows) to check individual button and joystick responses.
- **Game Compatibility:** Ensure the game you are playing supports gamepads. Some older PC games may require specific configurations or third-party software.
- **Clean Controller:** Dust or debris under buttons can affect performance. Refer to the Maintenance section for cleaning instructions.

Vibration Not Working

- **Game Support:** Verify that the game you are playing supports vibration feedback.
- **System Compatibility:** Vibration function is supported on PC and PS3. It may not be supported on all Android devices or games.
- **In-Game Settings:** Check the game's settings to ensure vibration is enabled.

SPECIFICATIONS

Model Number	SE/6750
Product Dimensions (LxWxH)	15.5 x 3.5 x 10.5 cm
Item Weight	200 g
Connectivity	Wired USB
Cable Length	1.5 m (USB), 0.3 m (Micro USB for OTG)
Compatibility	PC, PlayStation 3, Android (via OTG)
Features	Analog Joysticks, Analog Triggers, Dual Motor Vibration, D-input/X-input
Country of Origin	China
Manufacturer	Sameo Distribution (India) Pvt. Ltd.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Sameo Distribution (India) Pvt. Ltd. directly. Refer to the product packaging or the official Sameo website for contact details.

Note: Specific warranty terms and conditions may vary by region and retailer. Please retain your proof of purchase for warranty claims.

© 2023 Sameo. All rights reserved. Information in this manual is subject to change without notice.