

Topro H88

Topro Pre-Lit Artificial Christmas Tree 3ft Instruction Manual

BRAND: TOPRO | MODEL: H88

Sections:

Product Overview	Setup Instructions	Operating the LED Lights	Care and Storage
Troubleshooting Guide	Product Specifications		

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the assembly, operation, and maintenance of your Topro 3ft Pre-Lit Artificial Christmas Tree. This tree features snow-flocked pine branches, 70 UL certified LED lights, 140 branch tips, 7 pine cones, and 10 red berries, designed for indoor and outdoor use.

Key Features:

- Natural Lifelike Appeal:** Ultra-realistic snow-flocked branches with 140 tips, 10 red berries, and 7 pine cones.
- Pre-Lit LED Lights:** Equipped with 70 UL certified LED lights offering 8 distinct lighting modes and an integrated 6-hour On/18-hour Off timer.
- Ideal Sizing:** Stands 3ft tall with a 20-inch diameter at the base, suitable for desktop or floor placement.
- Lasting Durability:** Constructed with a burlap-wrapped base for stability and designed for multiple holiday seasons.
- Versatile Placement:** Suitable for various settings including homes, offices, and commercial spaces.

2. SETUP INSTRUCTIONS

2.1 Unpacking and Initial Assembly

1. Carefully remove all components from the packaging.
2. Place the tree base on a stable, flat surface.
3. Insert the tree into the base, ensuring it is securely seated.





Image 1: The Topro 3ft Pre-Lit Artificial Christmas Tree, fully assembled and ready for shaping.

2.2 Branch Shaping (Fluffing)

For the most lush and full appearance, it is recommended to spend 10-20 minutes shaping the tree branches. Gently spread out each branch tip, working from the bottom of the tree upwards, to fill any gaps and create a natural look.



Image 2: The tree before decoration, illustrating the initial appearance after assembly and shaping.

2.3 Visual Setup Guide

The following video demonstrates the unpacking and shaping process for the Christmas tree, providing a visual aid for proper setup.

Your browser does not support the video tag.

Video 1: A demonstration of unpacking and shaping the Topro 3ft Pre-Lit Artificial Christmas Tree.

3. OPERATING THE LED LIGHTS

3.1 Battery Installation

The LED lights are battery-powered. Locate the battery box, typically attached to the light string. Open the battery compartment, insert the required batteries (not included, refer to packaging for type and quantity), and close the compartment securely.

3.2 Light Modes and Timer Function

The tree features 70 UL certified LED lights with 8 different lighting modes and an integrated timer function.

- **Mode Selection:** Press the button on the battery box to cycle through the 8 available lighting modes:
 - I. Combination
 - II. In Wave
 - III. Sequential
 - IV. Slo Glo
 - V. Chasing/Flash
 - VI. Slow Fade
 - VII. Twinkle/Flash
 - VIII. Steady On
- **Timer Function:** The lights include an integrated 6 hours On/18 hours Off timer. Once activated, the lights will remain on for 6 hours, then automatically turn off for 18 hours, and repeat the cycle. To activate or reset the timer, turn the lights on at your desired time.



Image 3: A detailed view of the illuminated LED lights and snow-flocked branches.

4. CARE AND STORAGE

4.1 Cleaning

- To clean the tree, gently dust the branches with a soft, dry cloth.
- Avoid using liquid cleaners or abrasive materials, as these may damage the flocking or electrical components.

4.2 Storage

- Before storing, ensure all lights are turned off and batteries are removed from the battery box.
- Gently compress the branches to reduce the tree's volume.
- Store the tree in its original packaging or a suitable storage bag in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING GUIDE

5.1 Lights Not Working

- **Check Batteries:** Ensure fresh batteries are correctly installed in the battery box, observing polarity (+/-).
- **Battery Box Connection:** Verify that the battery box is securely connected to the light string.
- **Mode Selection:** Cycle through the light modes to ensure it's not on an 'off' or 'fade' setting that might appear as off.
- **Timer Status:** If the timer is active, the lights will turn off for 18 hours. Wait for the next 'on' cycle or reset the timer by turning the lights on at your desired time.
- **Damaged Wires:** Inspect the light string for any visible damage or broken wires. If damage is found, discontinue use.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Topro
Model Number	H88
Product Dimensions	21"D x 21"W x 36"H (3ft)
Material	Polyvinyl Chloride
Item Weight	5 Pounds
Tree Type	Pine
Special Features	Bendable Branch, Flame Resistant, Flocked, Prelit
Light Type	70 UL Certified LED Lights
Light Color	Warm White
Light Modes	8 (Combination, In Wave, Sequential, Slo Glo, Chasing/Flash, Slow Fade, Twinkle/Flash, Steady On)
Timer Function	6 hours On / 18 hours Off
Branch Tips	140
Decorations Included	7 Pine Cones, 10 Red Berries
Base Type	Burlap-wrapped Stand
Recommended Use	Indoor and Outdoor
UPC	721996984111

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the manufacturer directly. Contact details for Topro can typically be found on the product's retail page or included documentation.